

Manuals.plus /

- › [Dreo](#) /
- › Dreo 13-Inch Oscillating Table Air Circulator Fan Instruction Manual

Dreo DR-HAF001

Dreo 13-Inch Oscillating Table Air Circulator Fan

MODEL: DR-HAF001

Your comprehensive guide to setup, operation, and maintenance.

1. Product Overview

The Dreo 13-Inch Oscillating Table Air Circulator Fan is designed to provide powerful and quiet whole-room air circulation. Featuring Dreo's WingBoost technology, it delivers far-reaching winds up to 70 ft with a massive 853 CFM air volume, making it ideal for bedrooms, living rooms, and offices. Its aerodynamic design ensures minimal noise, operating as low as 28dB.



Figure 1: Dreco 13-Inch Oscillating Table Air Circulator Fan with remote control.

2. Setup

Your Dreco Air Circulator Fan comes fully assembled. Simply remove it from the packaging and place it on a stable, flat surface.

1. **Unboxing:** Carefully remove the fan and its accessories from the box. Ensure all packing materials are removed.
2. **Placement:** Position the fan on a firm, level surface in your desired location. Ensure there is adequate space around the fan for optimal airflow and oscillation.
3. **Power Connection:** Plug the power cord into a standard North American 120V AC power outlet.

DREO | TurboPoly™ Fan 5 Series

America's Home & Garden Best Brands of 2022*



CNET



*Based on Newsweek's 2022 America's Best Brands ranking.

Figure 2: Front view of the Dreo Air Circulator Fan, ready for placement.

3. Operating Instructions

The Dreo Air Circulator Fan offers convenient control via its modern control panel or the included remote control.

Control Panel & Remote Functions:

- **Power (On/Off):** Press the power button to turn the fan on or off.
- **Fan Speed (1-4 Speeds):** Adjust airflow intensity. The fan features 4 speeds, providing a range from a gentle breeze to powerful circulation.
- **Auto Mode:** The concealed sensor adapts fan speed to room temperatures for optimal comfort.
- **Vertical Oscillation (120° Manual Tilt):** Manually adjust the fan head vertically to direct airflow where needed.
- **Horizontal Oscillation (90°):** Activate automatic horizontal oscillation to cover a wider area.
- **Timer (0-8h):** Set the fan to automatically turn off after a specified duration (up to 8 hours).
- **Mute:** Mute button sounds for undisturbed operation.
- **Child Lock:** Engage child lock to prevent accidental changes to settings.

Keep the cool without the noise



*Test conducted by Dreo.

Figure 3: Convenient control with the remote, offering multiple speed settings.

**More rotation angles.
More airflow control.**



Figure 4: Optimize air circulation with 120° manual vertical tilt and 90° horizontal oscillation.

4. Maintenance

Regular cleaning ensures optimal performance and longevity of your Dreo fan.

Cleaning Instructions:

- **Power Off:** Always unplug the fan before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille and Blades:** The grille and blades can be easily removed for thorough cleaning. Unscrew the grille screw, remove the front grille, and then carefully detach the blades. Wash them with mild soap and water, then dry completely before reassembling.

Effortless cleaning



Figure 5: Effortless cleaning of the fan grille and blades.

5. Troubleshooting

If you encounter any issues with your Dreo fan, please refer to the following common solutions:

- **Fan Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power button on the fan or remote has been pressed.
- **Weak Airflow:** Verify the fan speed setting. Ensure the grille and blades are clean and free from dust or obstructions.
- **Unusual Noise:** Check for any foreign objects caught in the fan blades or grille. Ensure the fan is placed on a stable, level surface to prevent vibrations.
- **Remote Not Working:** Check the battery in the remote control. Ensure there are no obstructions between the remote and the fan's sensor.

For further assistance, please contact Dreo Customer Support.

6. Specifications

Feature	Detail
Brand	Dreo
Model Name	DR-HAF001
Color	Black
Product Dimensions	10.24"D x 11.46"W x 13.19"H
Power Source	Corded Electric
Noise Level	28 dB
Air Flow Capacity	853 Cubic Feet Per Minute
Special Features	Remote Controlled, Timer, Adjustable Tilt, Oscillating
Number of Power Levels	4
Item Weight	5.2 Pounds

7. Warranty & Support

Your Dreo Air Circulator Fan comes with a **12-month default warranty**. This warranty can be extended up to **30 months** by registering your product on the official Dreo website.

For detailed information, please refer to the official user manual:

- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)

For customer support, please visit the [Dreo Store on Amazon](#) or contact their official support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW9L8ZGK>

More documents and user manuals: <https://manuals.plus/>