

Taurus Guzzler Light

Taurus Guzzler Light 3-in-1 Cordless Vacuum Cleaner User Manual

Model: Guzzler Light

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, its cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not use the appliance if the power cord or plug is damaged.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Use only manufacturer-recommended attachments and accessories.
- Do not vacuum liquids, hot ashes, burning cigarettes, or sharp objects.
- Do not block the air vents during operation.

2. PRODUCT OVERVIEW

The Taurus Guzzler Light is a versatile 3-in-1 cordless vacuum cleaner designed for various cleaning tasks. It functions as a stick vacuum, a handheld vacuum, and a vertical vacuum with an extension tube.

Components:

- Main Unit (Motor and Dust Bin)
- Extension Tube (65cm aluminum)
- Motorized Turbo Brush Helix Floor Head with Optic LED lighting

- 2-in-1 Multi-purpose Accessory (Crevice Tool and Brush)
- Wall Mount Support
- Charger





Figure 2.1: The Taurus Guzzler Light 3-in-1 Cordless Vacuum Cleaner in its full stick configuration.



Figure 2.2: Close-up view of the motorized Turbo Brush Helix floor head, featuring Optic LED lighting for enhanced visibility during cleaning.





Figure 2.3: The Taurus Guzzler Light vacuum cleaner shown with its included wall mount support, demonstrating its convenient parking position.

3. SETUP AND ASSEMBLY

The Taurus Guzzler Light offers flexible assembly for different cleaning needs. All accessories can be attached and detached with a simple 'click' mechanism.

3.1. Stick Vacuum Configuration:

1. Insert the extension tube into the main unit until it clicks securely.
2. Attach the motorized Turbo Brush Helix floor head to the other end of the extension tube until it clicks.

3.2. Handheld Vacuum Configuration:

1. Ensure the main unit is detached from the extension tube.
2. Attach the 2-in-1 multi-purpose accessory directly to the main unit for detailed cleaning.

3.3. Vertical Vacuum with Extension Tube:

1. Assemble the main unit with the extension tube as described in 3.1.
2. Attach the 2-in-1 multi-purpose accessory to the end of the extension tube for reaching high or narrow areas.

4. CHARGING THE BATTERY

The Taurus Guzzler Light is equipped with 22.2V lithium batteries for long-lasting performance. A full charge provides approximately 40 minutes of continuous operation in Eco mode.

Charging Procedure:

1. Connect the charger to the charging port on the main unit.
2. Plug the charger into a suitable wall outlet.
3. The battery level indicator, consisting of 5 LEDs, will illuminate to show the charging status (20% to 100%).
4. A full charge typically takes approximately 4 hours. Disconnect the charger once fully charged.

5. OPERATING INSTRUCTIONS

To begin cleaning, ensure the vacuum is fully charged and assembled for your desired configuration.

5.1. Power On/Off:

Press the power button located on the main unit to turn the vacuum on or off.

5.2. Speed Settings:

The vacuum offers two speed settings: **ECO** and **TURBO**.

- **ECO Mode:** Provides standard suction for everyday cleaning and maximizes battery life.
- **TURBO Mode:** Delivers maximum suction power for stubborn dirt and deep cleaning. This mode will reduce battery runtime.

Toggle between ECO and TURBO modes using the speed selection button on the main unit.

5.3. Using the Turbo Brush Helix Floor Head:

The motorized Turbo Brush Helix is suitable for all floor types, including parquet, tiles, carpets, and rugs. Its 180° swivel joint allows for easy maneuverability around furniture. The Optic LED lighting illuminates the cleaning path, making dirt more visible.

5.4. Parking Position:

The vacuum can stand upright on its own, allowing for convenient temporary storage during cleaning breaks without needing to lean it against a wall or use extra supports.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dust Bin:

The 500ml dust bin features a hygienic Touch & Clean emptying system. It is recommended to empty the dust bin after each use or when the maximum fill line is reached.

1. Ensure the vacuum is turned off.
2. Press the dust bin release button to detach it from the main unit.
3. Position the dust bin over a waste receptacle.
4. Press the 'Touch & Clean' button to open the bottom flap and release the contents.
5. Close the flap and reattach the dust bin to the main unit until it clicks.

6.2. Cleaning the Filters:

The Triple Advance Filtration system includes a stainless steel cyclone and a HEPA filter, capable of retaining 99.9% of dust. The filters are washable for easy maintenance.

1. Remove the dust bin as described above.
2. Carefully remove the internal filters (cyclone and HEPA filter).
3. Rinse the filters under running water until clean. Do not use detergents.
4. Allow the filters to air dry completely for at least 24 hours before reassembling. **Do not use the vacuum with wet filters.**
5. Reinsert the dry filters into the dust bin and reattach the dust bin to the main unit.

6.3. Cleaning the Brush Roll:

Periodically check the Turbo Brush Helix for tangled hair or debris.

1. Ensure the vacuum is turned off and disconnected from any power source.
2. Detach the floor head from the extension tube.
3. Locate the brush roll access latch (refer to product diagrams if needed) and open it.
4. Remove the brush roll and carefully cut away any tangled hair or fibers using scissors.
5. Clean any debris from the brush roll housing.
6. Reinsert the brush roll and secure the access latch.

7. TROUBLESHOOTING

If you encounter issues with your Taurus Guzzler Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted	Charge the battery fully.
Reduced suction power	Dust bin is full	Empty the dust bin.
Reduced suction power	Filters are clogged	Clean and dry the filters.
Reduced suction power	Brush roll is tangled	Clean the brush roll.
Brush roll not spinning	Obstruction in brush roll	Remove any obstructions from the brush roll.
Short battery runtime	Using TURBO mode frequently	Use ECO mode for longer runtime. Ensure battery is fully charged.

If the problem persists after attempting these solutions, please contact Taurus customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Taurus
Model	Guzzler Light
Type	3-in-1 Cordless Vacuum (Handheld, Stick, Vertical)
Battery Voltage	22.2V Lithium
Suction Power	10kPa
Power	120W
Dust Bin Capacity	500ml
Runtime	Up to 40 minutes (ECO mode)
Charging Time	Approx. 4 hours

Feature	Specification
Filter Type	HEPA Filter (Triple Advance Filtration)
Speeds	2 (ECO/TURBO)
Special Features	Turbo Brush Helix, Turbo Cyclonic System, Optic LED, Parking Position, One Touch Accessory System
Dimensions (L x W x H)	21 x 21 x 112 cm
Included Components	Main unit, Extension tube, Turbo Brush Helix, 2-in-1 accessory, Wall mount, Charger



9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in the product packaging or visit the official Taurus website.

For technical support, spare parts, or any inquiries regarding your Taurus Guzzler Light, please contact Taurus customer service through their official channels. Contact information can typically be found on the manufacturer's website or in the product documentation.

© 2024 Taurus. All rights reserved.

Related Documents - Guzzler Light

	<p>Taurus MCL300 Textile Care Instructions</p> <p>User manual for the Taurus MCL300 Textile Care device, providing instructions for use, cleaning, maintenance, and troubleshooting.</p>
	<p>Manual de Instrucciones Taurus HB1700X / HBA1700X: Batidora de Varilla</p> <p>Manual completo de instrucciones para la batidora de varilla Taurus HB1700X y HBA1700X. Aprenda a usar, cuidar y limpiar su electrodomstico de cocina de forma segura y eficiente.</p>

