


Audiobox REM-10S

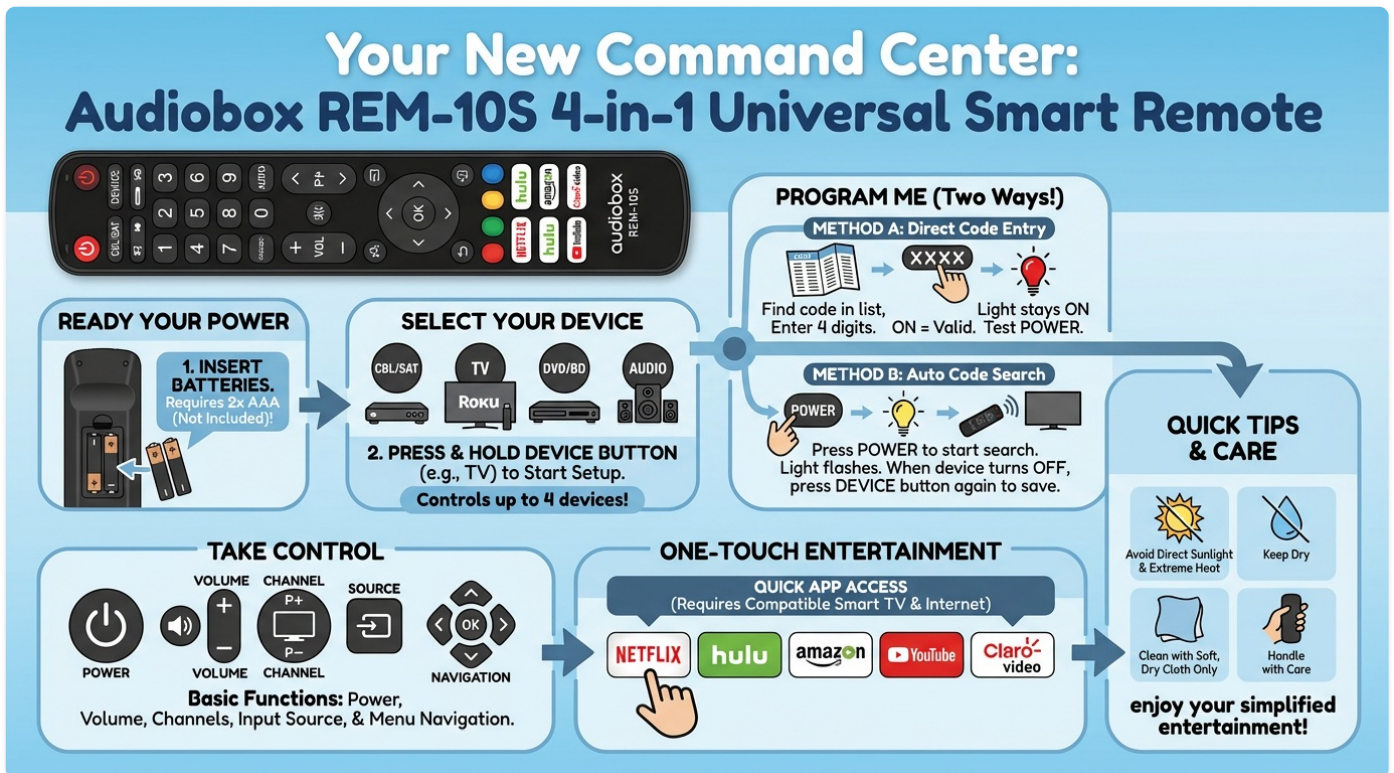

Learn how to set up and use your Audiobox REM-10S 4-in-1 Universal Smart Remote with this infographic, covering battery installation, device pairing, programming, basic functions, and quick app access.

Audiobox 10-in-1 Universal Smart Remote Control User Manual

Model: REM-10S

1. INTRODUCTION

Thank you for purchasing the Audiobox 10-in-1 Universal Smart Remote Control. This remote is designed to simplify your home entertainment experience by allowing you to control up to four different devices, including Smart TVs, analog TVs, DVD players, amplifiers, and Roku streaming sticks, with a single device. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping or subjecting the remote to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Audiobox 10-in-1 Universal Smart Remote Control (Model: REM-10S)
- User Manual (this document)





Image: The Audiobox Universal Smart Remote Control as it appears in its retail packaging, highlighting its 4-in-1 function and compatibility with various devices.

4. PRODUCT OVERVIEW

The Audiobox Universal Smart Remote Control features a comprehensive set of buttons for controlling various aspects of your devices. Familiarize yourself with the layout below.





Image: Full view of the Audiobox Universal Smart Remote Control, showcasing its complete button layout.

4.1 Button Functions

Button	Function
Power ()	Turns the selected device on or off.
CBL/SAT, TV, DVD/BD, AUDIO	Device selection buttons. Press to switch control to the corresponding device type.
0-9	Number buttons for direct channel input or menu navigation.

Button	Function
Volume (+/-)	Adjusts the volume level.
Channel (P+/P-)	Changes the channel up or down.
Source	Selects input source (HDMI 1, HDMI 2, etc.).
Navigation Arrows (Up, Down, Left, Right) & OK	Navigates menus and confirms selections.
MENU, GUIDE, TOOLS, INFO	Accesses device-specific menus, program guides, tools, and information displays.
RETURN, EXIT	Goes back to the previous screen or exits the current menu.
Netflix, Hulu, Amazon, YouTube, Claro video	Dedicated quick-access buttons for popular streaming applications.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback on compatible devices.

5. SETUP

5.1 Battery Installation

The remote requires 2x AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
3. Close the battery compartment cover securely.

5.2 Programming the Remote Control

The Audiobox Universal Remote can be programmed to control various devices. There are typically two methods for programming: Direct Code Entry and Auto Code Search.

5.2.1 Direct Code Entry (Recommended)

This method requires you to find the specific code for your device's brand from the provided code list (usually included in a separate leaflet or available online from Audiobox support). If a code list was not provided, please refer to the Auto Code Search method.

1. Turn on the device you wish to program (e.g., your TV).
2. On the remote, press and hold the desired device button (e.g., **TV**) for approximately 3 seconds until the indicator light (usually the power button LED) illuminates and stays on.
3. Enter the 4-digit code for your device's brand using the number buttons.
4. If the code is valid, the indicator light will turn off. Test the remote by pressing the **Power** button. If the device turns off, the programming was successful.
5. If the device does not respond, repeat the process with the next code listed for your brand, or try the Auto Code Search method.

Note: Some users have reported that direct code entry can be inconsistent. If you encounter issues, try multiple codes for your brand or proceed to the Auto Code Search.

5.2.2 Auto Code Search

This method allows the remote to search for the correct code automatically.

1. Turn on the device you wish to program.
2. On the remote, press and hold the desired device button (e.g., **TV**) for approximately 3 seconds until the indicator light

illuminates and stays on.

3. While the indicator light is on, press the **Power** button once. The indicator light will start flashing, indicating it is searching for a code.
4. Point the remote at your device and wait. The remote will send out power signals every few seconds. When your device turns off, immediately press the same device button (e.g., **TV**) again to save the code.
5. The indicator light will turn off, confirming the code has been saved. Test the remote's functions (volume, channel, etc.) to ensure full compatibility.
6. If the remote cycles through all codes without turning off your device, or if it turns off but doesn't control other functions, repeat the process.

Tip: For Roku streaming sticks, ensure the stick is powered on and connected to your TV. You may need to select the TV input that the Roku is connected to before programming.

6. OPERATING INSTRUCTIONS

Once programmed, using your Audiobox Universal Remote is straightforward.

6.1 Switching Between Devices

To control a specific device, simply press the corresponding device button at the top of the remote:

- Press **TV** to control your television.
- Press **DVD/BD** to control your DVD or Blu-ray player.
- Press **CBL/SAT** to control your cable box or satellite receiver.
- Press **AUDIO** to control your amplifier or sound system.

The remote will remain in control of the selected device until another device button is pressed.

6.2 Basic Functions

- **Power:** Press the **Power** button to turn the currently selected device on or off.
- **Volume:** Use the **Volume +/-** buttons to adjust the sound output of the selected device.
- **Channel:** Use the **P+/P-** buttons to change channels.
- **Number Pad:** Use the **0-9** buttons for direct channel entry or numerical input in menus.
- **Input/Source:** Press the **Source** button to cycle through available input sources on your TV or amplifier.

6.3 Dedicated App Buttons

The remote features dedicated buttons for popular streaming services. These buttons are designed to launch the respective applications directly on compatible Smart TVs or streaming devices (e.g., Roku).

- Press **Netflix** to open the Netflix app.
- Press **Hulu** to open the Hulu app.
- Press **Amazon** to open the Amazon Prime Video app.
- Press **YouTube** to open the YouTube app.
- Press **Claro video** to open the Claro video app.

Note: The functionality of these dedicated app buttons depends on the compatibility of your device and its operating system. Some devices may not support direct app launch from a universal remote, or may require specific programming.

7. MAINTENANCE

7.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

7.2 Battery Replacement

Replace batteries when the remote's range decreases or if the indicator light does not illuminate when a button is pressed. Follow the battery installation steps in Section 5.1.

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote does not work after programming.	<ul style="list-style-type: none">• Batteries are low or incorrectly inserted. Check battery orientation and replace if necessary.• Incorrect code entered. Try another code from the list for your device brand, or use the Auto Code Search method.• Remote is not pointed directly at the device's IR receiver.• Obstruction between remote and device.
Only some functions work (e.g., power, but not volume).	<ul style="list-style-type: none">• The programmed code may only offer partial compatibility. Try another code for your device brand.• Ensure the correct device button (TV, DVD/BD, etc.) is selected on the remote.
Dedicated app buttons (Netflix, Hulu) do not work.	<ul style="list-style-type: none">• Your device may not support direct app launch from a universal remote, or it may require a specific code.• Ensure your Smart TV or streaming device is connected to the internet and the apps are installed and updated.• Try reprogramming the remote with a different code for your TV/streaming device.
Remote stops working after a period of time.	<ul style="list-style-type: none">• Batteries are depleted. Replace them.• The remote may have lost its programming. Re-program the remote following the steps in Section 5.2.

9. SPECIFICATIONS

Feature	Detail
Model Number	REM-10S
Brand	Audiobox
Compatible Devices	Smart TVs, Analog TVs, DVD Players, Amplifiers, Roku Streaming Sticks, Cable/Satellite Boxes
Max Number of Supported Devices	4
Power Source	2x AAA Batteries (not included)
Color	Black
Item Weight	4.2 ounces

Feature	Detail
Package Dimensions	9.8 x 3.94 x 1.3 inches
ASIN	B0BWCVNNHV
Manufacturer	General Sound Co

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Audiodex website. You may also contact the manufacturer, General Sound Co, for assistance.

- **Manufacturer:** General Sound Co
- **Brand Store:** [Audiodex Amazon Store](#)

Please retain your proof of purchase for warranty claims.