

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Suttik](#) /

> [Suttik Professional Hair Clippers and Electric Shavers Set Instruction Manual](#)

Suttik B0BWDKQMTF

Suttik Professional Hair Clippers and Electric Shavers Set Instruction Manual

Model: B0BWDKQMTF

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Suttik Professional Hair Clippers and Electric Shavers Set. Please read all instructions carefully before initial use and retain this manual for future reference.



Image: The complete Suttik Professional Hair Clippers and Electric Shavers Set, including the hair clipper, detail trimmer, electric shaver, and various accessories.

IMPORTANT SAFETY INFORMATION

Adherence to these safety guidelines is crucial for preventing injury and ensuring proper device function.

- Always unplug the trimmer before cleaning.
- Avoid use on infants or near water sources.
- Keep the trimmer away from heat and direct sunlight.
- Do not use while charging.
- Always hold the trimmer away from the face and body while in use.
- Always supervise children when using the trimmer.
- Always replace guards if they become damaged.
- Always follow the recommended cleaning and maintenance procedures.
- Always store the trimmer out of reach of children and pets.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x Cordless Hair Clipper
- 8x Hair Clipper Guide Combs (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)
- 1x Detail Hair Trimmer
- 3x Detail Hair Trimmer Guide Combs (1mm, 2mm, 3mm)
- 1x Electric Foil Shaver with 2 Foil Heads
- 1x Barber Cape
- 1x Cleaning Brush
- 2x USB Charging Cables
- 1x Barber's Comb
- Protective Covers

SETUP AND CHARGING

Before first use, ensure your devices are fully charged.

1. **Initial Charge:** Connect the USB charging cable to the charging port on the hair clipper, detail trimmer, or electric shaver, and plug the other end into a compatible USB power adapter (not included).
2. **Charging Time:**
 - Hair Clipper: Approximately 2.5 hours for 240 minutes of running time.
 - Detail Trimmer: Approximately 1.5 hours for 120 minutes of running time.
 - Electric Shaver: Approximately 1.5 hours for 90 minutes of running time.
3. **LED Display:** The smart LED display will indicate the battery percentage and charging status. A charging reminder icon will appear when the battery is low.

High Performance Battery Life



Image: Illustration of battery life and charging times for the hair clipper (2500mAh, 240 mins run, 2.5 hrs charge) and detail trimmer (600mAh, 120 mins run, 1.5 hrs charge).

Smart Digital Display



Image: Close-up of the smart digital display showing battery indicator percentage, oiled reminder, and charging reminder icons.

OPERATING INSTRUCTIONS

1. Using the Hair Clipper

- Select Guide Comb:** Choose one of the 8 guide combs (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm) and securely attach it to the hair clipper blade.
- Power On:** Press the power button to turn on the clipper.
- Clipping:** Guide the clipper through the hair against the direction of hair growth for an even cut. Use the barber's comb to lift hair as needed.
- Power Off:** Press the power button to turn off the clipper after use.

Clippers for Hair Cutting



Trimmers for Precise Cutting



Image: Demonstrations of the Suttik hair clipper being used for hair cutting and the detail trimmer being used for precise beard trimming.

Get Fresh Style with Multi Guards

8 Guide Combs



3 Guide Combs



Image: Display of the 8 guide combs for the hair clipper (3mm to 25mm) and 3 guide combs for the detail trimmer (1mm to 3mm).

2. Using the Detail Hair Trimmer

1. **Select Guide Comb:** For precise trimming, attach one of the 3 guide combs (1mm, 2mm, 3mm) or use without a comb for a close trim.
2. **Power On:** Press the power button.
3. **Trimming:** Use the trimmer for detailing beards, sideburns, necklines, and other precise areas.
4. **Power Off:** Press the power button to turn off.

Note: For a smoother shave with the electric shaver, it is recommended to first trim down longer hair with the detail trimmer.

3. Using the Electric Foil Shaver

1. **Preparation:** Ensure hair is trimmed short for optimal shaving results.
2. **Power On:** Press the power button.

3. **Shaving:** Gently glide the shaver across the skin, moving against the direction of hair growth. The dual foil heads are designed for an ultra-close shave.
4. **Wet/Dry Shave:** This shaver supports both dry shaving for convenience and wet shaving with gel or foam for enhanced skin protection.
5. **Power Off:** Press the power button to turn off.



Image: The Suttik Electric Foil Head Shaver, highlighting its all-metal housing, double-foil system, and LCD screen.



Image: The Suttik Pro Hair Trimmer and Electric Shaver together, emphasizing features like strong power, bump-free shaving, ultra-close results, Type-C recharge, low noise, and washable blades.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your grooming tools.

1. **Power Off and Unplug:** Always ensure the device is turned off and unplugged from any charging cable before

cleaning.

2. **Remove Guide Combs:** Detach any guide combs from the clipper or trimmer.
3. **Brush Cleaning:** Use the provided cleaning brush to remove loose hairs from the blades and internal components.
4. **Rinse Blades:** The devices feature a washable design (IPX4 for the shaver). You can quickly rinse the blade heads under running water. Ensure the device is completely dry before storage or next use. Do not submerge the entire device in water unless specified for that model.
5. **Lubrication:** Periodically apply a small amount of clipper oil (not included) to the blades to maintain smooth operation and prevent rust. The smart LED display includes an "Oiled Reminder" icon.
6. **Storage:** Store the devices and accessories in a dry, cool place, out of reach of children and pets.



Image: The Suttik Electric Shaver being rinsed under running water, illustrating its IPX4 washable feature for easy cleaning.

TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully. Check the LED display for battery status.
Poor cutting/shaving performance.	Blades are dull, clogged with hair, or not lubricated.	Clean the blades thoroughly with the brush. Rinse if washable. Apply clipper oil. Consider replacing blades if excessively dull.
Device stops during use.	Battery depleted.	Recharge the device.
Excessive noise or vibration.	Blades may be misaligned or require lubrication.	Clean and lubricate blades. Ensure blades are properly seated.

SPECIFICATIONS

- **Brand:** Suttik
- **Model:** B0BWDKQMTF
- **Power Source:** Battery Powered
- **Battery Type:** Lithium Ion (1 included per device)
- **Hair Clipper Battery:** 2500mAh (approx. 240 mins run time, 2.5 hrs charge)
- **Detail Trimmer Battery:** 600mAh (approx. 120 mins run time, 1.5 hrs charge)
- **Electric Shaver Battery:** (approx. 90 mins run time, 1.5 hrs charge)
- **Water Resistance:** IPX4 (Shaver - Washable)
- **Item Weight:** 1 Kilogram (total package weight is 2.2 Pounds)
- **Recommended Uses:** Clipping, Grooming, Shaving
- **Color:** Bronze

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Suttik brand store.

Suttik Brand Store: [Visit Suttik Store on Amazon](#)

