

[Manuals.plus](#) /

› [DOLPHIN PLAYGROUND T](#) /

› Dolphin Playground Wooden Swing Set Instruction Manual

DOLPHIN PLAYGROUND T B0BWDVJNRS

Dolphin Playground Wooden Swing Set Instruction Manual

Model: B0BWDVJNRS

Brand: DOLPHIN PLAYGROUND T

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Dolphin Playground Wooden Swing Set. This outdoor playset is designed for children aged 3-10 years and features a 2-in-1 outdoor table, a 6-foot wave slide, a rock climbing wall, a fort with a telescope, and two belt swings. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.

The swing set is constructed from high-quality cedar wood, known for its durability and resistance to weather conditions. It is designed to provide a safe and engaging play environment for children.



Image: A Dolphin Playground Wooden Swing Set installed in a grassy backyard, with three children actively engaged in play. One child is on the slide, another is on a swing, and a third is seated at the integrated picnic table.

SAFETY INFORMATION

Adherence to the following safety guidelines is crucial for preventing injuries and ensuring a safe play environment. Adult supervision is required at all times.

- **Age Range:** This playset is intended for children aged 3 to 10 years.
- **Weight Capacity:** The swing hangers provide a load capacity of 400 pounds. Do not exceed this limit.
- **Installation Surface:** Install the playset on level ground with adequate safety surfacing. A minimum of 6 feet of clear space should be maintained around all sides of the playset.
- **Regular Inspection:** Periodically check all nuts, bolts, and connections for tightness. Inspect wooden components for cracks, splinters, or rot. Replace worn or damaged parts immediately.
- **Pinch-Free Chains:** The swing chains are designed to be pinch-free to prevent finger injury and hair entanglement.
- **Ground Anchors:** Ensure the playset is securely anchored to the ground to prevent tipping.
- **Weather Conditions:** Do not use the playset during wet, icy, or extremely windy conditions.
- **No Modifications:** Do not modify the playset in any way, as this may compromise its structural integrity and safety.

SAFETY SURFACING REQUIREMENTS

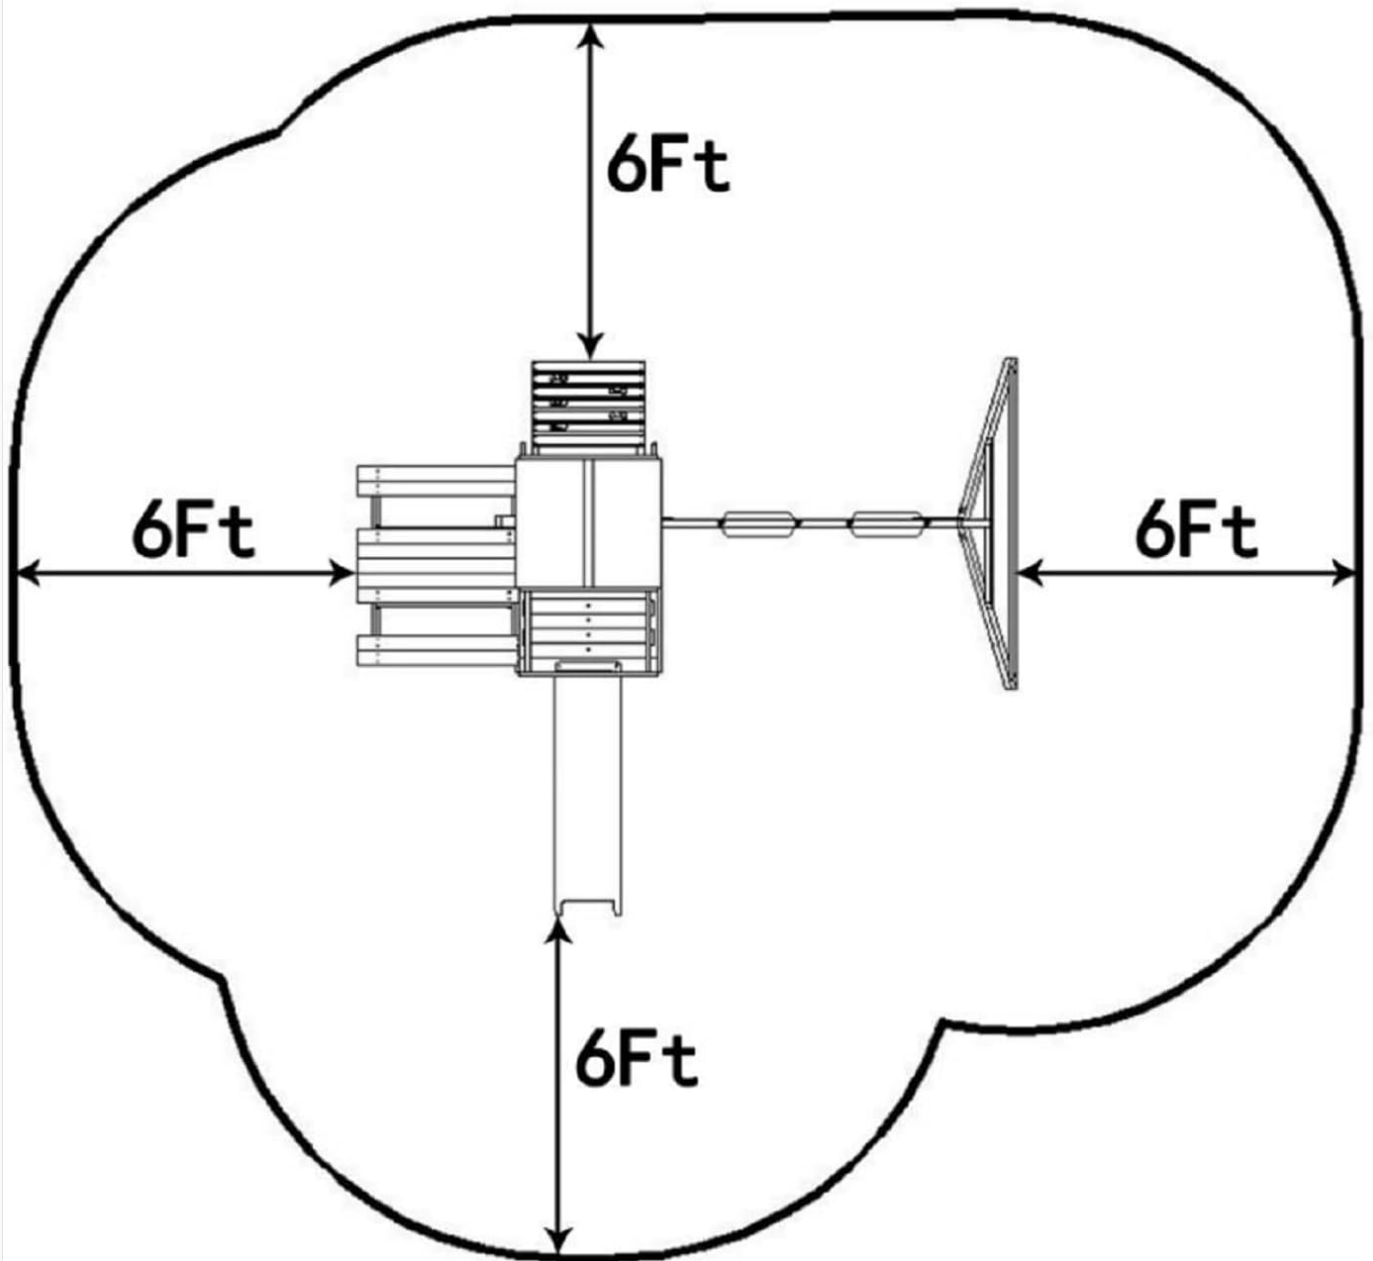


Image: A top-down diagram illustrating the safety surfacing requirements for the swing set. It shows a 6-foot clearance zone around all sides of the playset structure, indicating the minimum safe area for installation.

COMPONENTS LIST

Before beginning assembly, verify that all parts are present and undamaged. Refer to the packing list included with your product for specific part numbers and quantities. Key components include:

- Wooden beams and planks (cedar wood)
- 6FT Wave Slide (blue plastic)
- 2-in-1 Outdoor Table components
- 2 Belt Swings with pinch-free chains
- Rock Climbing Wall holds and panels
- Fort structure with roof and telescope

- Hardware package (bolts, nuts, washers, screws, swing hangers, ground anchors)

Note: The hardware is orderly packaged according to building steps, with an additional 10% spare parts included.

SETUP AND ASSEMBLY

Assembly of the Dolphin Playground Wooden Swing Set requires two adults and typically takes 4-5 hours. Follow the detailed 3D building plan provided in your product packaging. Ensure you have adequate space and tools before starting.

1. **Unpacking and Sorting:** Carefully unpack all boxes. The product consists of 3 boxes; if they do not arrive simultaneously, please allow 1-2 days for all boxes to be delivered. Sort all wooden pieces and hardware according to the provided instructions.
2. **Base Structure Assembly:** Begin by assembling the main A-frame legs and the fort base. Ensure all connections are secure and level.
3. **Fort Construction:** Build the fort structure, attaching the walls, floor, and roof components. Install the telescope as indicated in the instructions.
4. **Slide and Climbing Wall Installation:** Attach the 6FT wave slide to the designated platform on the fort. Secure the rock climbing wall panels and holds.
5. **Swing Beam Assembly:** Assemble the swing beam and attach it to the main structure. Install the swing hangers securely.
6. **Swing Attachment:** Attach the two belt swings to the swing hangers. Verify that the pinch-free chains are properly connected.
7. **2-in-1 Outdoor Table Assembly:** Assemble the outdoor table components, ensuring the convertible feature (picnic table to sand table) functions correctly.
8. **Final Inspection and Anchoring:** After complete assembly, perform a thorough inspection of all nuts, bolts, and connections to ensure they are tight. Securely anchor the playset to the ground using the provided ground anchors.

2 in 1 Outdoor Table



Image: A detailed diagram displaying the dimensions of the Dolphin Playground Wooden Swing Set, including height, width, and depth measurements. It also highlights the recommended age range of 3-10 years and a load-bearing capacity of 200KG (400LB).

Specialized Safety Design



- Pinch Free Chain
- Double Ground Anchors

Image: An illustration depicting the sequential assembly steps for the Dolphin Playground Wooden Swing Set, showing the progression from initial components to the fully assembled structure.

OPERATING INSTRUCTIONS

Once assembled, the Dolphin Playground Wooden Swing Set offers multiple play features for children:

- **2-in-1 Outdoor Table:** This versatile table can be used as a picnic table for snacks or activities. By opening the table cover, it transforms into a storage table, ideal for sand play or storing toys.
- **6FT Wave Slide:** Children can enjoy sliding down the wave slide from the fort platform. Ensure the landing area is clear before use.
- **Belt Swings:** The two belt swings provide traditional swinging fun. Always ensure children are seated properly and hold onto the chains.
- **Rock Climbing Wall:** The climbing wall allows children to ascend to the fort. Encourage proper hand and foot placement.
- **Fort with Telescope:** The elevated fort provides a lookout point, enhanced by the included telescope for imaginative play.

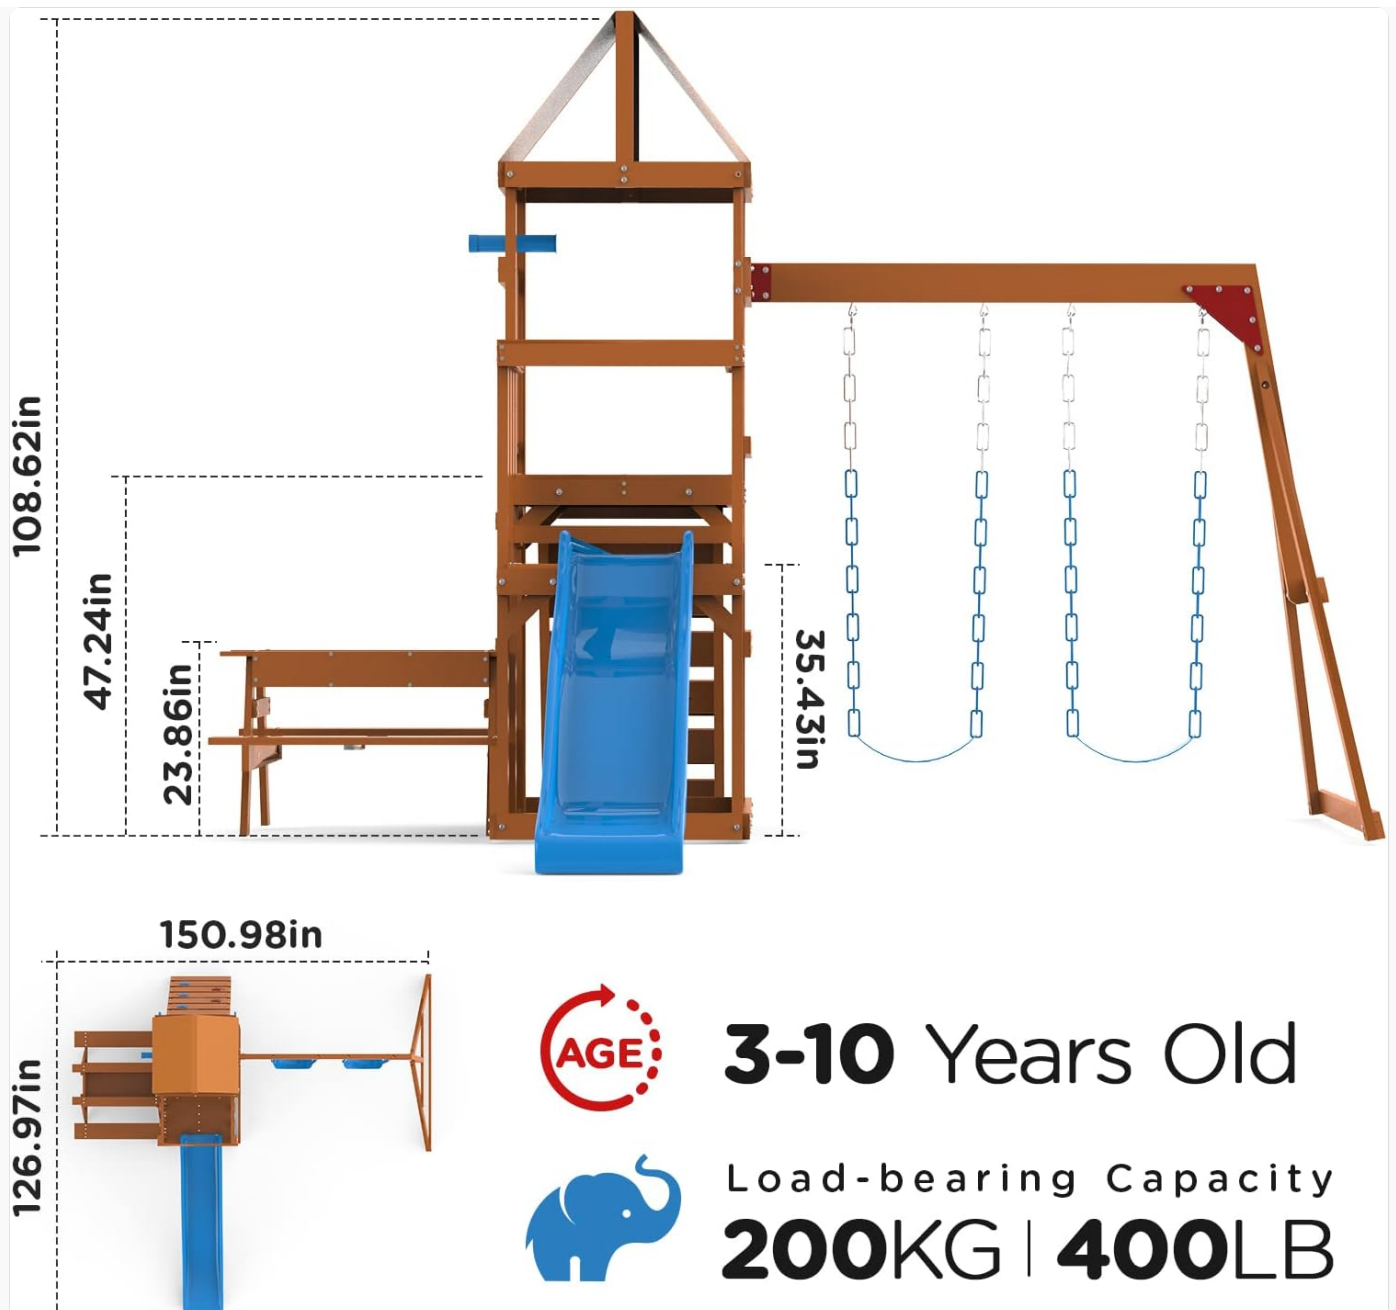


Image: Two children enjoying the playset. One child is sliding down the blue 6-foot wave slide, while another child is climbing the rock wall to reach the fort structure.

Enjoy Your Playtime



Image: A split image demonstrating the versatility of the 2-in-1 outdoor table. The left side shows children using it as a picnic table for play, and the right side shows it converted into a sand table for sensory play.



Image: A child standing inside the playset's fort structure, looking through a blue telescope, indicating the fort's feature for imaginative play.

MAINTENANCE

Regular maintenance is essential to ensure the longevity and safety of your wooden swing set. The premium cedar wood is designed for durability in various weather conditions, but consistent care is recommended.

- **Hardware Check:** Annually, or more frequently if used heavily, check all nuts, bolts, and screws for tightness. Tighten any loose fasteners to prevent structural instability.
- **Wood Inspection:** Inspect all wooden components for signs of wear, splintering, cracking, or rot. Sand down any rough spots or splinters. Apply a wood sealant or stain annually to protect the wood from moisture and UV damage, enhancing its waterproof, anti-corrosion, and anti-crack functions.
- **Swing Chains and Hangers:** Check swing chains for rust, wear, or damage. Ensure swing hangers are securely fastened and show no signs of excessive wear.
- **Slide and Plastic Parts:** Clean the slide and other plastic components with mild soap and water. Inspect for cracks

or damage.

- **Ground Anchors:** Verify that the ground anchors remain firmly in place and are not loose or corroded.
- **Cleaning:** Clean the playset periodically to remove dirt, debris, and mildew. Use a soft brush and mild cleaning solution.



Image: A close-up view of the swing chain, highlighting the blue plastic coating on the lower links, which is designed to be pinch-free for user safety.



Images: (Left) A pile of raw cedar wood logs, representing the material quality. (Middle) A close-up of a swing hanger, showing its robust construction. (Right) A close-up of a crack resistance bolt on an A-frame leg, illustrating a safety feature.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Dolphin Playground Wooden Swing Set.

Problem	Possible Cause	Solution
Playset feels wobbly or unstable.	Loose bolts or inadequate ground anchoring.	Check and tighten all bolts and nuts. Ensure ground anchors are fully secured and the playset is on level ground.
Wood shows signs of cracking or splintering.	Natural weathering or lack of protective sealant.	Sand down splinters. Apply a wood sealant or stain to protect the wood. For significant cracks, contact customer support.
Swings are squeaky or do not move freely.	Dry swing hangers or worn chains.	Apply a silicone-based lubricant to the swing hangers. Inspect chains for damage and replace if necessary.
Missing parts upon delivery.	Shipment arrived in multiple boxes or packing error.	Confirm all 3 boxes have arrived. If parts are still missing, contact customer support with your packing list and order details.

SPECIFICATIONS

- **Material:** Wood (Premium Cedar)
- **Brand:** DOLPHIN PLAYGROUND T
- **Color:** Orange (referring to roof and slide accents)
- **Maximum Weight Recommendation:** 400 Pounds
- **Assembly Required:** Yes
- **Age Range (Description):** Kid (3-10 Years)
- **UPC:** 740907183276
- **Product Dimensions:** 126.91 x 150.98 x 108.62 inches (Length x Width x Height)
- **Manufacturer:** DOLPHIN PLAYGROUND T
- **ASIN:** B0BWDVNJRS
- **Date First Available:** February 21, 2023

WARRANTY AND SUPPORT

DOLPHIN PLAYGROUND T is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official DOLPHIN PLAYGROUND T brand store on Amazon.

Return Policy: The product is eligible for a refund/replacement within 30 days of purchase.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact DOLPHIN-QH, the seller, directly through your Amazon order details. They are responsive and can provide support.

You can also visit the [DOLPHIN PLAYGROUND T Store](#) for more information and product offerings.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BWDVNJRS>

More documents and user manuals: <https://manuals.plus/>