

ESOXOFFORE ABS-681

ESOXOFFORE Instant Print Camera for Kids - Model ABS-681 User Manual

Your guide to capturing and printing memories instantly.

1. INTRODUCTION

Thank you for choosing the ESOXOFFORE Instant Print Camera for Kids, Model ABS-681. This versatile digital camera is designed to provide children with an engaging way to capture photos and videos, offering the unique ability to print black-and-white images instantly. It also includes various fun features such as games, music playback, and creative filters to enhance the user experience.

This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly to ensure proper use and to maximize your enjoyment of the product.

2. SAFETY INFORMATION

- This product is intended for children aged 3 and above. Adult supervision is recommended.
- Do not disassemble or attempt to repair the camera yourself. Contact customer support if issues arise.
- Keep the camera away from water and excessive moisture to prevent damage.
- Use only the provided USB Type-C cable for charging.
- Ensure proper paper installation to avoid jamming or damage to the printing mechanism.
- The thermal print paper is safe and odor-free.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- ESOXOFFORE Instant Print Camera (Model ABS-681)
- USB Type-C Charging Cable

- Lanyard
- 32GB SD Card
- Thermal Print Paper Rolls (3 rolls included)
- Color Markers (for decorating printed photos)
- Sticker Sheet (for decorating camera or photos)



Image: The ESOXOFFORE Instant Print Camera in purple, shown with its included accessories: a 32GB SD card, three rolls of thermal print paper, a USB Type-C charging cable, and a lanyard.

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera using the provided USB Type-C cable. Connect the cable to the camera's charging port and a compatible USB power source. The charging indicator light will show the charging status.

4.2 Inserting the SD Card

Locate the SD card slot on the side of the camera. Gently insert the 32GB SD card until it clicks into

place. Ensure the card is inserted in the correct orientation.

4.3 Installing Print Paper

1. Push up the part with the lens to open the paper slot.
2. Insert a roll of thermal print paper into the slot, ensuring the paper feeds out from the top.
3. Close the camera securely.



Image: Visual guide demonstrating the three steps to correctly install thermal print paper into the camera.

How to correctly install paper

1



2



Pay attention to the direction of the paper installation.

If put it in wrong direction, it can not print with image.

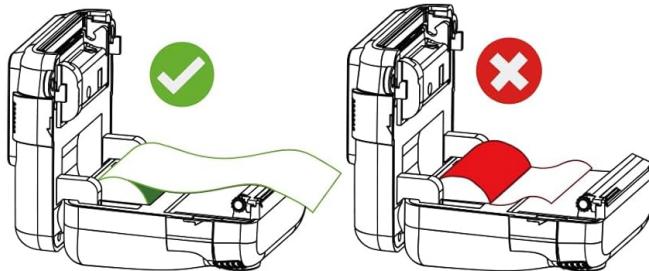


Image: Diagram illustrating the correct and incorrect direction for installing the thermal print paper roll.

4.4 Attaching the Lanyard

Thread the lanyard through the designated loops on the camera to prevent accidental drops and allow for easy carrying.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button (usually located on the side or front) to turn the camera on or off. The screen will display a welcome message upon startup.

5.2 Navigation

Use the directional buttons (up, down, left, right) to navigate through the menu options displayed on the 2.4-inch screen. Press the 'OK' button to select an option.

5.3 Taking Photos

- Select the 'Camera' icon from the main menu.

- Frame your shot using the screen. The camera features 16X digital zoom and a flash.
- Press the shutter button (often the 'OK' button or a dedicated camera button) to capture the image.
- The camera will instantly print a black-and-white thermal photo. Color versions are saved to the SD card.
- Experiment with 15 scene filters and 16 sticker options to add creativity to your photos.



Image: A collage showing children taking instant photos, which can then be decorated with stickers or colored in.

5.4 Recording Videos

- Select the 'Video' icon from the main menu.
- Press the 'OK' button to start recording 1080P video. Press again to stop.
- Videos are saved directly to the 32GB SD card.

Ultra HD 1080P Video

Record the wonderful childhood



16X Digital Zoom



Image: A child recording a video with the camera, highlighting its 1080P video capability and 16X digital zoom.

5.5 Playing Music

- Select the 'Music' icon from the main menu.
- The camera supports MP3 playback. Transfer MP3 files to the SD card to listen to music.

5.6 Playing Games

- Select the 'Games' icon from the main menu.
- Choose from 4 built-in puzzle games for entertainment.

5.7 App Printing (Optional)

The camera supports app printing for additional customization and printing options:

1. On the camera, navigate to 'Settings' and select 'APP Printing'. A QR code will appear on the screen.
2. Scan the QR code with your smartphone to download the 'JoyPrinter' app.
3. Open your phone's Bluetooth settings and connect to 'JoyPrinter'.
4. Open the 'JoyPrinter' app. You can select various materials (characters, graffiti, animals, anime) or print images from your phone's gallery.
5. Choose your desired image or material, select print options (e.g., grayscale), and tap 'Start'.

printing'. The camera will print the selected image.

Your browser does not support the video tag.

Video: Demonstration of the app printing feature, showing how to connect the camera to a smartphone via Bluetooth and print images using the JoyPrinter app.

6. MAINTENANCE

6.1 Replacing Print Paper

When the current paper roll is depleted, follow the steps in Section 4.3 to install a new roll. Ensure you use compatible thermal print paper.

6.2 Battery Care

Recharge the camera when the battery indicator is low. Avoid fully draining the battery frequently to prolong its lifespan. If the camera is not used for an extended period, charge it periodically.

6.3 Cleaning the Camera

Use a soft, dry cloth to clean the exterior of the camera. Do not use liquid cleaners or abrasive materials. For the lens, use a specialized lens cleaning cloth.

6.4 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the SD card if storing for very long periods.

7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to the charger and try again.
- **Photos not printing:** Check if there is enough thermal paper installed correctly (refer to Section 4.3). Ensure the print function is enabled in settings if you are not using instant print mode.
- **Poor print quality:** Ensure the paper is installed correctly. The print quality is black-and-white thermal; for higher quality color images, view them on the screen or transfer from the SD card.
- **SD card error:** Reinsert the SD card. If the issue persists, try a different compatible SD card. Ensure the card is not full.
- **App connection issues:** Ensure Bluetooth is enabled on both the camera and your smartphone. Restart both devices and try connecting again.

8. SPECIFICATIONS

Feature	Detail
Model Number	ABS-681


Brand	ESOXOFFORE
Dimensions	7.8 x 4.61 x 2.48 inches
Item Weight	13.1 ounces
Battery	1 Lithium Ion battery (included)
Screen Size	2.4 inches
Video Resolution	1080P
Digital Zoom	16X
Film Format Type	Instant (Thermal)
Film Color	Black-and-white
Storage	32GB SD Card (included)
Charging Type	USB Type-C

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact ESOXOFFORE customer service directly. Keep your purchase receipt as proof of purchase.

Related Documents - ABS-681

	<p><u>DIY Instant Digital Camera - User Guide and Instructions</u></p> <p>Comprehensive user guide for the Careenoah DIY Instant Digital Camera, detailing setup, usage tips, paper installation, and important cautions for this fun, child-friendly digital camera.</p>
LAGAN FRÖSLUNDA 	<p><u>IKEA LAGAN FRÖSLUNDA Integrated Dishwasher Installation Guide</u></p> <p>Comprehensive installation guide for the IKEA LAGAN FRÖSLUNDA integrated dishwasher, covering all steps from unpacking to final setup. Includes safety information and part identification.</p>

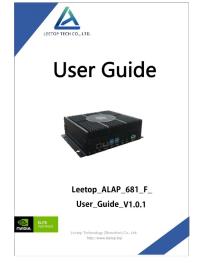	<p><u>Instant Print Camera - User Manual and Specifications</u></p> <p>User manual and specifications for the Instant Print Camera, detailing product information, features, component descriptions, installation, charging, and FCC compliance.</p>
	<p><u>Leetop ALP-681-F User Guide: Embedded AI Computer Specifications and Setup</u></p> <p>Comprehensive user guide for the Leetop ALP-681-F embedded artificial intelligence computer, detailing specifications, setup, system configuration, developer tools, and FCC compliance. Features NVIDIA Jetson AGX Orin.</p>
ÖSTVEDA 	<p><u>ÖSTVEDA Integrated Dishwasher Manual</u></p> <p>Comprehensive user manual for the IKEA ÖSTVEDA integrated dishwasher, covering safety instructions, installation, operation, maintenance, and troubleshooting.</p>
	<p><u>Aneng 681: Zaawansowany Multimetr Cyfrowy TruRMS LCD 0-1000V 0-10A</u></p> <p>Odkryj Aneng 681, zaawansowany multimeter cyfrowy TruRMS LCD, idealny do precyzyjnych pomiarów napięcia AC/DC, prądu, rezystancji, pojemności i temperatury. Wyposażony w duży wyświetlacz 4,8 cala, funkcję NCV i test diod, zapewnia bezpieczeństwo i wygodę użytkowania dla profesjonalistów i hobbyistów.</p>