

ekon 8018417310126

Ekon Universal 5-in-1 TV Remote Control User Manual

Model: 8018417310126

1. INTRODUCTION

This manual provides instructions for the Ekon Universal 5-in-1 TV Remote Control, designed for use with Samsung, LG, Sony, Panasonic, and Philips HD LED LCD televisions. This remote control is ready for immediate use and requires no complex installation. It offers an operating range of up to 8 meters and is constructed from durable ABS material for long-lasting performance.

2. KEY FEATURES

- **Universal Compatibility:** Designed for LG, Samsung, Sony, Philips, and Panasonic TVs and Smart TVs.
- **Instant Use:** Functions immediately after battery insertion, no installation required.
- **Streaming App Button:** Provides one-click access to your favorite streaming applications for quick and convenient entertainment.
- **Extended Operating Range:** Reliable operation up to 8 meters, allowing control from various distances.
- **Durable Design:** Made from high-quality ABS material for comfort, durability, and a pleasant tactile experience.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.

4. Close the battery compartment cover securely.

Note: The Ekon Universal Remote Control is designed for immediate use with compatible TVs after battery installation. No additional programming or setup is typically required.



ekon home partner **TV**

Compatible with
**SAMSUNG | LG | SONY
PHILIPS | PANASONIC**

UK
Remote control compatible with Samsung/LG/Sony/Philips/Panasonic

I
Telecomando compatibile con Samsung/LG/Sony/Philips/Panasonic

D
Fernbedienung kompatibel mit Samsung/LG/Sony/Philips/Panasonic

F
Télécommande compatible avec Samsung/LG/Sony/Philips/Panasonic

ES
Mando a distancia compatible con Samsung/LG/Sony/Philips/Panasonic

TV 5 IN 1

App Shortcut keys
Gives you direct access to your favorite streaming services

Ideal for Smart tv

Ready to use

ekon

The advertisement features a central image of a black remote control with various buttons including power, volume, channel, and app shortcuts. The layout is clean and modern, with a focus on compatibility and ease of use.

TV REMOTE CONTROL

ECREMOTEALLIN 19942

Image: Back of the remote control packaging, illustrating battery installation.

4. OPERATING INSTRUCTIONS

The Ekon Universal Remote Control features a comprehensive button layout for easy navigation and control of your television.





Image: Detailed view of the remote control's button layout.

4.1 Basic Functions

- **Power Button (U)**: Turns the TV on or off.
- **Volume Up/Down (VOL +/-)**: Adjusts the sound volume.
- **Channel Up/Down (CH +/-)**: Changes TV channels.
- **Mute Button**: Mutes or unmutes the TV sound.
- **Number Buttons (0-9)**: Directly select channels.

4.2 Navigation and Menu Control

- **Directional Arrows (Up, Down, Left, Right)**: Navigate through menus and options.
- **OK Button**: Confirms selections or opens menus.
- **Return/Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Menu Button**: Opens the TV's main menu.

4.3 Smart TV and Streaming Functions

- **APP TV Button**: Provides direct access to smart TV applications.
- **NET Button**: Often used for network-related functions or specific streaming services.
- **SMART Button**: Activates the Smart TV interface or features.
- **Colored Buttons (A, B, C, D)**: These buttons often correspond to specific functions within Smart TV apps or teletext, as indicated on your TV screen.



Image: Remote control in use, demonstrating its functionality with a Smart TV.

5. MAINTENANCE

5.1 Battery Replacement

When the remote control's performance diminishes or it stops responding, replace the batteries. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the surface or internal components.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly inserted and not depleted. Replace if necessary.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- Ensure you are within the operating range (up to 8 meters) and pointing the remote directly at the TV.

- **Limited operating range:**

- Replace batteries with fresh ones.
- Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the infrared signal.

- **Specific buttons not working:**

- Clean the remote control surface, especially around the problematic buttons, to remove any dirt or debris.
- If the issue persists, it may indicate a hardware fault.

7. SPECIFICATIONS

Brand	ekon
Model Number	8018417310126
Compatible Brands	Samsung, LG, Sony, Panasonic, Philips
Connectivity Technology	Infrared
Maximum Range	8 Meters
Power Source	2 x AAA Batteries (not included)
Color	Black
Manufacturer	SBS
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information, please refer to the retailer or manufacturer's official website. Warranty terms and conditions may vary depending on your region and point of purchase.

For further assistance, technical support, or inquiries, please visit the Ekon website or contact their customer support channels. Keep your purchase receipt for any warranty claims.