

- Manuals.plus /
- > [LELO](#) /
 - > LELO TOR 3 Vibrating Ring Instruction Manual

LELO TOR 3

LELO TOR 3 Vibrating Ring Instruction Manual

Model: TOR 3
Brand: LELO

PRODUCT OVERVIEW

The LELO TOR 3 is an app-connected vibrating ring designed for enhanced sensation. Crafted from smooth, high-quality silicone, it features a flexible design to accommodate various sizes. The device offers 8 distinct vibration settings, ranging from gentle to intense, and is fully waterproof for easy cleaning and versatile use.



This image illustrates the key features of the LELO TOR 3. It highlights the vibrating body for dual sensation, the eight powerful settings, the extra-soft silicone material, the flexible ring design, its 29 mm / 1.1 inch diameter, and its app-controlled functionality.

WHAT'S IN THE BOX

Upon unboxing your LELO TOR 3, please ensure all the following components are present:

- LELO TOR 3 Vibrating Ring
- USB Charging Cable
- Satin Storage Pouch
- Moisturizer Sachet (water-based lubricant)
- Instruction Manual (this document)
- Warranty Registration Card

TOR™ 3

vibrating couples' ring



MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD

USB cable



WARRANTY CARD

verifies product authenticity



SATIN POUCH

for storage

This image displays the complete contents of the LELO TOR 3 package. Visible items include the TOR 3 vibrating ring in its box, the user manual, a moisturizer sachet, a USB charging cable, a warranty card, and a satin pouch for storage.

SETUP

Initial Charging

Before first use, fully charge your LELO TOR 3 for **2 hours**. Connect the provided USB charging cable to the device's charging port and plug the other end into a USB power source. The LED lights will blink to indicate the battery level during charging.

App Connection

The LELO TOR 3 can be controlled via the LELO app. To connect:

1. Download the LELO app from the App Store (iOS) or Google Play Store (Android).
2. Ensure Bluetooth is enabled on your smartphone.

3. Open the LELO app and follow the on-screen instructions to pair your TOR 3 device.

OPERATING INSTRUCTIONS

Power On/Off

- **To Turn On:** Press the '+' button. The LED lights will blink to indicate the battery level.
- **To Turn Off:** Press and hold the '-' button until the device powers down.

Changing Settings

The LELO TOR 3 features 8 distinct pleasure settings. To switch between these settings, press the '+' or '-' button on the device.

Using the LELO App

For advanced control and additional vibration patterns, use the LELO app. Once connected via Bluetooth, you can select and customize settings directly from your smartphone.

How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press the + button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 8 PLEASURE SETTINGS

press the + or the - button

TO USE THE APP

activate bluetooth on your phone and open the LELO APP

TO TURN IT OFF

press and hold the - button



This image provides a quick guide on how to operate the LELO TOR 3. It details the steps for charging the device for 2 hours before first use, turning it on by pressing the '+' button, observing LED lights for battery level, switching between 8 pleasure settings using the '+' or '-' buttons, activating Bluetooth and opening the LELO app for app control, and turning the device off by pressing and holding the '-' button.

MAINTENANCE

Cleaning

The LELO TOR 3 is IPX7-certified waterproof, making it safe for cleaning with warm water and a mild, toy-safe soap. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using alcohol, petroleum-based cleaners, or harsh chemicals, as these can damage the silicone.

Storage

Store your LELO TOR 3 in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

Charging Best Practices

Always ensure the charging port is completely dry before connecting the USB cable. Use only the original LELO charging cable. Do not overcharge the device; disconnect it once fully charged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low or no battery charge.	Charge the device for 2 hours. Ensure the charging cable is securely connected.
App connectivity issues (drops connection, fails to pair).	Bluetooth interference, app malfunction, device out of range, low device battery.	Ensure Bluetooth is active on your phone. Keep the device close to your phone. Restart the LELO app. Fully charge the TOR 3. Try restarting your phone.
Device unexpectedly shuts down during use.	Low battery, temporary malfunction.	Ensure the device is fully charged before use. If the issue persists after charging, contact LELO support.
Vibrations are weak or inconsistent.	Low battery, incorrect setting selected.	Recharge the device. Cycle through the 8 settings to find the desired intensity.

SPECIFICATIONS

- **Model Name:** TOR 3
- **Model Number:** 85090
- **Material:** Body-safe Silicone
- **Dimensions:** 2.36 x 1.84 x 0.87 inches (60 x 46.7 x 22 mm)
- **Weight:** 1.23 ounces (35 grams)
- **Diameter:** 29 mm / 1.1 inches (flexible)
- **Battery:** 1 Lithium Polymer battery (rechargeable)
- **Charging:** USB rechargeable
- **Water Resistance:** IPX7 Waterproof
- **Settings:** 8 vibration patterns
- **Control:** Device buttons and LELO App (Bluetooth)
- **Manufacturer:** LELO
- **First Available:** February 21, 2023

WARRANTY AND SUPPORT

Warranty Information

Your LELO TOR 3 comes with a warranty. Please refer to the included Warranty Registration Card for specific terms and conditions. It is recommended to register your product to activate your warranty and for future support needs.

Customer Support

For any questions, technical assistance, or warranty claims, please contact LELO customer support. You can typically find contact information on the LELO official website or on your warranty card. Please have your product model and serial number (if applicable) ready when contacting support.

Visit the official LELO website for the most up-to-date support information:www.lelo.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question