



[Manuals.plus](#) /

> [GreenPan](#) /

> GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle User Manual

GreenPan CC006242-001

GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle User Manual

Model: CC006242-001 | Brand: GreenPan

1. INTRODUCTION

Welcome to the user manual for your new GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle. This versatile appliance is designed to bring a world of flavor to your countertop, offering multiple cooking functions including contact grilling, panini pressing, griddling, and waffle making. It features GreenPan's pioneering Thermolon™ Volt ceramic nonstick coating, ensuring healthy, toxin-free cooking and easy cleanup.

Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Figure 1.1: GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle with interchangeable plates.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The Thermolon™ Volt ceramic nonstick coating is free of PFAS, PFOA, lead, and cadmium.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your GreenPan Elite Multi-Function Contact Grill & Griddle:

- **Adjustable Cover:** Locks in four height positions for various cooking needs.
- **Interchangeable Plates:** Includes grill plates and waffle plates. Made from cast aluminum for optimal heat conduction.
- **Thermolon™ Volt Ceramic Nonstick Coating:** Diamond-infused, extra tough, and easy to clean.
- **One-Touch Sear Control:** For achieving a perfect finish on meats.
- **Dual-Zone Heating:** Allows for independent temperature control of upper and lower plates.
- **Shade Control:** Unique setting to dial in the perfect temperature, especially for waffles.
- **Easy-to-Read LED Display:** Provides clear information on settings.
- **Integrated Drip Tray:** Collects grease for easy cleaning.
- **Cord Wrap:** For simple storage.

ELITE MULTI-GRILL, GRIDDLE & WAFFLE MAKER

COUNTERTOP CONVENIENCE



Figure 3.1: Key components of the GreenPan Elite Multi-Function Grill.

INTERCHANGEABLE PLATES



CAST ALUMINUM CONSTRUCTION

DURABLE PLATES DELIVER OPTIMAL HEATING & SUPERIOR PERFORMANCE

Figure 3.2: The durable cast aluminum plates ensure optimal heat distribution.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels or stickers from your appliance.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. The removable cooking plates and drip tray are dishwasher safe; however, for best results and to prolong their lifespan, hand washing with warm soapy water is recommended. Rinse thoroughly and dry completely.
3. **Plate Installation:** Ensure the appliance is unplugged and cool. Insert the desired cooking plates (grill or waffle) into their respective slots on the upper and lower heating elements. Press down firmly until they click into place. Ensure the drip tray is properly inserted at the front of the unit.
4. **Placement:** Place the appliance on a clean, dry, flat, heat-resistant surface, away from walls or heat-sensitive materials, ensuring adequate ventilation.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Plug the appliance into a 120V AC electrical outlet. The LED display will illuminate.
2. Select your desired plate configuration using the "PLATE SELECT" dial (Upper, Lower, Both, Waffle).
3. Adjust the temperature using the "TEMP / SHADE" dial. The display will show the selected temperature.
4. Allow the appliance to preheat. The indicator light will change or the display will indicate when the desired temperature is reached.
5. Place food on the cooking plates. Close the cover, adjusting the height if necessary using the adjustable cover lock.
6. Monitor cooking progress. Use the "TIME" dial to set a cooking timer if desired.
7. Once cooking is complete, carefully remove food using heat-resistant utensils.
8. Press the "START | STOP" button to turn off the heating elements, then unplug the appliance.

5.2 Cooking Modes

The GreenPan Elite offers 7-in-1 functionality:

- **Contact Grill:** Use both upper and lower grill plates for quick, even cooking of meats, vegetables, and sandwiches.
- **Panini Press:** Ideal for pressing sandwiches, quesadillas, and wraps. The adjustable cover accommodates varying thicknesses.
- **Grill and Griddle:** Utilize one grill plate and one griddle plate simultaneously for diverse cooking.
- **Grill on One Side:** Cook on the open flat grill surface.
- **Griddle on the Other:** Cook on the open flat griddle surface.
- **Open Flat Surface:** Open the unit completely flat to double your cooking area, perfect for larger meals or multiple items.
- **Real Waffles:** Insert the waffle plates and use the dedicated waffle setting for perfectly golden Belgian waffles. The shade control allows for customization.

7-IN-1 DESIGN



CONTACT GRILL



PANINI PRESS



GRILL AND GRIDDLE



GRILL ON ONE SIDE



GRIDDLE ON THE OTHER



PLUS REAL WAFFLES

Figure 5.1: The versatile 7-in-1 design allows for a wide range of cooking options.

VERSATILE DESIGN



AMPLE SURFACE AREA

OPENS FLAT FOR LARGER COOKING AREA & MULTI-SURFACE GRILLING

Figure 5.2: The appliance opens flat to provide an ample cooking surface.

5.3 Temperature and Shade Control

Use the "TEMP / SHADE" dial to precisely control the cooking temperature. For waffle making, this dial also functions as a shade control, allowing you to achieve your preferred level of crispness and browning.

CHOOSE YOUR HEAT



UNIQUE SHADE CONTROL

EASILY DIAL IN THE PERFECT TEMPERATURE

Figure 5.3: Easily dial in the perfect temperature or waffle shade.

5.4 One-Touch Sear Control

For a professional finish on steaks, burgers, and other meats, activate the "SEAR" function. This provides a burst of high heat to create a delicious crust while keeping the interior juicy.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your GreenPan Elite Multi-Function Grill.

1. **Always Unplug and Cool:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Removable Plates:** The cooking plates are removable and dishwasher safe. For best results and to preserve the nonstick coating, hand wash with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that can damage the nonstick surface. Rinse thoroughly and dry completely before storing or re-installing.
3. **Drip Tray:** The integrated drip tray is also removable and dishwasher safe. Empty and clean it after each use to

prevent grease buildup.

4. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Once clean and dry, the appliance can be stored upright to save space. The adjustable cover locks for secure storage, and the cord wrap helps keep the power cord tidy.

EASY TO CLEAN



DISHWASHER SAFE PLATES

THE REMOVABLE PLATES POP OUT AND RINSE CLEAN

Figure 6.1: The removable plates are easy to clean by hand or in a dishwasher.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If problem persists, contact customer support.

Problem	Possible Cause	Solution
Food sticking to plates.	Plates not properly cleaned; insufficient preheating; damaged nonstick coating.	Ensure plates are clean and free of residue. Allow sufficient time for preheating. Avoid using metal utensils that can scratch the coating.
Uneven cooking.	Improper food placement; plates not fully heated.	Ensure food is evenly distributed on the plates. Allow the appliance to fully preheat before adding food.
Smoke or unusual odor during cooking.	Food residue on heating elements; excessive grease; first use odor.	Ensure plates and drip tray are clean. Use less oil/fat. A slight odor on first use is normal. If excessive smoke or burning smell, unplug immediately and contact support.

8. SPECIFICATIONS

- **Model Number:** CC006242-001
- **Brand:** GreenPan
- **Color:** Black
- **Material:** Healthy Ceramic Nonstick, PFAS-Free, Aluminum
- **Product Dimensions:** 16.7"D x 11.5"W x 16.9"H
- **Wattage:** 1500 watts
- **Voltage:** 120 Volts
- **Item Weight:** 23.9 pounds
- **Special Feature:** Temperature Control
- **Included Components:** Contact Grill and Two Reversible/Removable Plates
- **Material Type Free:** Bisphenol-A (BPA) Free, Cadmium Free, Lead Free, PFAS Free, PFOA Free, Perfluorooctane Sulfonate (PFOS) Free
- **UPC:** 885837032505

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official GreenPan website. Keep your purchase receipt as proof of purchase.

If you encounter any issues or have questions regarding your GreenPan Elite Multi-Function Contact Grill & Griddle, please contact GreenPan customer support. Contact details can typically be found on the GreenPan website or on the product packaging.

Online Resources: Visit the [GreenPan Store on Amazon](#) for more product information and support.