

[Manuals.plus](#) /

> [AceGamer](#) /

> AceGamer Wireless Controller for PS4 User Manual

AceGamer LBER-P4-01

AceGamer Wireless Controller User Manual

CUSTOM DESIGN V2 GAMEPAD JOYSTICK FOR PS4 (LIGHTNING)

Model: LBER-P4-01

1. INTRODUCTION

Thank you for choosing the AceGamer Wireless Controller. This manual provides detailed instructions to help you set up, operate, and maintain your new controller. Designed for an enhanced gaming experience, this controller features advanced functionalities and a unique Lightning design.

This controller is compatible with PS4, PS4 Pro, PS4 Slim, and Windows PC. Please read this guide thoroughly before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x AceGamer Wireless Controller (Lightning Design)
- 1x USB Charge Cable
- 1x Controller Instruction Manual (This document)
- 2x Thumb Caps

3. PRODUCT FEATURES

The AceGamer Wireless Controller is engineered with several features to elevate your gaming sessions:

- **Custom Lightning Design:** Unique water transfer printing process for a durable and visually striking

aesthetic.

- **Non-Slip Grip:** Textured grips on both sides for enhanced comfort and control during extended gameplay.
- **Dual Vibration Motors:** Provides timely and immersive haptic feedback for a more realistic gaming experience.
- **Sensitive 6-Axis Somatosensory:** Built-in gyroscope for precise motion sensing and enhanced control in compatible games.
- **Evolved Analog Sticks & Trigger Buttons:** Designed for unparalleled accuracy and responsiveness.
- **Clickable Touch Pad:** Integrated touch pad offers new ways to interact with games.
- **Integrated Light Bar:** Provides visual cues and enhances the gaming atmosphere.
- **3.5mm Audio Jack:** Connect your headset for immersive audio and communication.
- **USB Charging:** Convenient charging via the included USB cable.



Front view of the AceGamer Wireless Controller, showcasing its unique Lightning design and included thumb caps.



Detailed diagram labeling the D-pad, joysticks, Share, Light Bar, Options, Action Buttons, 3.5mm Headphone Port, USB Charging Jack, RB, LB, RT, and LT buttons.

RESET FUNCTION



ANTI-SLIP HANDLE

Rear view of the controller highlighting the reset function button and the textured anti-slip handles for improved grip.



Illustration demonstrating the vibration feedback feature of the controller, providing a more authentic game experience.



Visual representation of the sensitive G-axis somatosensory feature, indicating smoother and faster response for precise control.



A gamer using the controller, highlighting its ergonomic design and sensitive touch control panel for comfortable and responsive gameplay.

4. SETUP & CONNECTION

Follow these steps to connect your AceGamer Wireless Controller to your device:

4.1 Initial PS4 Connection

Important: For the very first pairing and connection with a PS4 console, you must use the included USB cable to activate the device. After this initial wired connection, normal wireless connection can be made.

1. Connect one end of the USB Charge Cable to the controller's USB Charging Jack.
2. Connect the other end of the USB Charge Cable to an available USB port on your PS4 console.
3. Press and hold the HOME button on the controller. The controller's LED light bar will flash.
4. Once successfully connected, the LED light bar will remain lit. You can now enjoy your controller wired or wirelessly.



Visual guide for the initial wired connection of the controller to a PS4 console.

4.2 PC Connection (Windows)

To connect to a Windows PC without Bluetooth, you will need to install a compatible receiver (not included). For PCs with Bluetooth, follow these steps:

1. Ensure your PC's Bluetooth is enabled.
2. On the controller, press and hold the SHARE button and the HOME button simultaneously until the light bar begins to flash rapidly. This indicates pairing mode.
3. On your PC, go to Bluetooth settings and search for new devices.
4. Select the "Wireless Controller" or similar device name from the list and complete the pairing process.

4.3 Tablet/Mobile Connection (Bluetooth)

The controller can also be paired with compatible tablets and mobile devices via Bluetooth:

1. Enable Bluetooth on your tablet or mobile device.
2. On the controller, press and hold the SHARE button and the HOME button simultaneously until the light bar begins to flash rapidly.
3. On your device, go to Bluetooth settings and search for new devices.
4. Select the "Wireless Controller" or similar device name from the list to pair.



The AceGamer controller is a third-party product designed as an excellent replacement for the PS4 controller, compatible with various PlayStation 4 models and PCs.

 
Official product video showcasing the AceGamer Blue-Lightning Custom PS4 Controller, demonstrating its design and functionality.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

Familiarize yourself with the controller's layout and button functions:


- **D-pad:** Directional input for menu navigation and specific game actions.
- **Analog Sticks (Left/Right Joystick):** Precise 360-degree movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Primary interaction buttons for in-game actions.
- **SHARE Button:** Access sharing options for screenshots and video clips.
- **OPTIONS Button:** Pause games, access in-game menus, or view options.
- **HOME Button:** Return to the console's home screen or power on/off the controller.
- **L1/R1 (Bumper Buttons):** Often used for quick actions or weapon selection.
- **L2/R2 (Trigger Buttons):** Analog triggers for precise control in driving or shooting games.

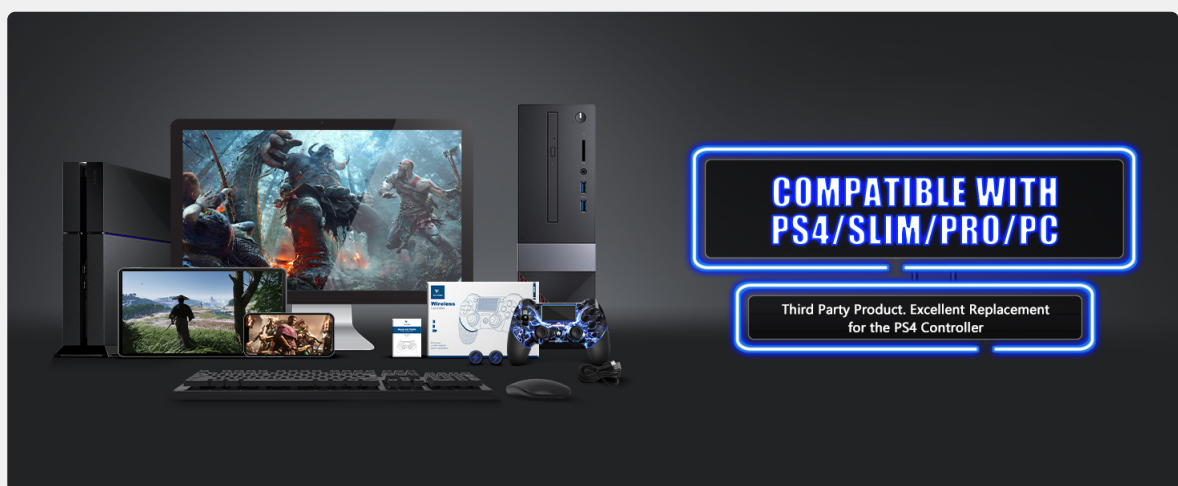

The controller features optimized buttons and a high-sensitive design for improved accuracy and response time during critical moments in gameplay.

5.2 Advanced Features

 - **Touch Pad:** The clickable touch pad can be used for navigation, specific game inputs, or as a mouse in some applications.
- **Light Bar:** The integrated light bar changes color to indicate player number, health status, or other in-game information.
- **Audio Jack:** Plug in any standard 3.5mm headset for game audio and voice chat.

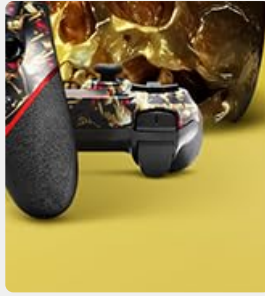


A gamer utilizing the 3.5mm audio port on the controller to connect a headset for immersive sound.

5.3 Charging the Controller

To charge your AceGamer Wireless Controller:

 1. Connect the included USB Charge Cable to the controller's USB Charging Jack.
2. Connect the other end of the USB Charge Cable to a USB port on your PS4 console, PC, or a compatible USB wall adapter.
3. The light bar will slowly pulse while charging and turn off when fully charged.

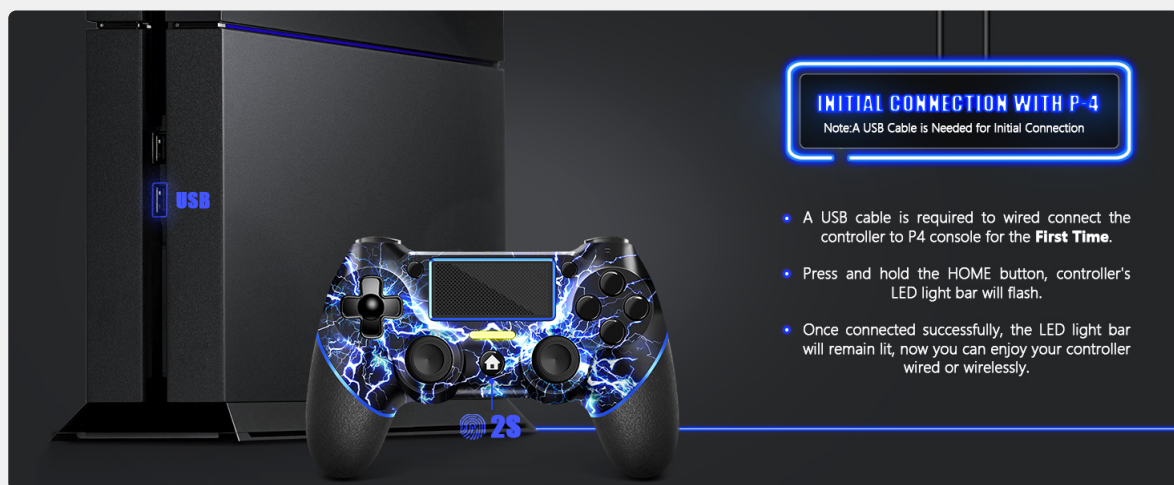

The controller is equipped with a high-quality, large-capacity battery that supports fast charging and provides super long battery life for extended gameplay.

6. MAINTENANCE & CARE

To ensure the longevity and optimal performance of your controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Do not expose the battery to high temperatures or attempt to disassemble it. Charge the controller regularly, even if not in use, to maintain battery health.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

7. TROUBLESHOOTING

If you encounter any issues with your AceGamer Wireless Controller, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Controller does not connect/pair.	Not in pairing mode, low battery, interference.	Ensure controller is charged. Press and hold SHARE + HOME buttons until light bar flashes rapidly. Move closer to the console/PC. Try re-pairing.
Buttons are unresponsive or sticky.	Dirt/debris under buttons, internal malfunction.	Clean around buttons with a soft, dry cloth or compressed air. If issue persists, contact support.
Vibration not working.	Vibration feature disabled in game/console settings.	Check in-game and console settings to ensure vibration is enabled.
Controller disconnects frequently.	Low battery, signal interference, distance from device.	Ensure controller is fully charged. Reduce distance to console/PC. Minimize wireless interference from other devices.
Controller does not charge.	Faulty cable, faulty charging port, power source issue.	Try a different USB cable and a different USB port/power source.

If the problem persists after trying these solutions, please contact AceGamer customer support for further assistance.

8. SPECIFICATIONS

Brand	AceGamer
Model Number	LBER-P4-01
Compatibility	PS4 / PS4 Pro / PS4 Slim / Windows PC
Connectivity	Wireless (Bluetooth) / Wired (USB)
Battery Type	Lithium Ion (included)
Item Weight	10.4 ounces (approx. 295 grams)
Product Dimensions	3.94 x 1.97 x 5.91 inches (approx. 10 x 5 x 15 cm)
Country of Origin	China

9. WARRANTY & SUPPORT

AceGamer products are designed for quality and performance. For any warranty claims, technical support, or inquiries regarding your controller, please refer to the contact information provided with your purchase or visit the official AceGamer website.

We are dedicated to enhancing your gaming journey and are here to assist you with any questions or concerns.