

[Manuals.plus](#) /

› [Canal Toys](#) /

› Canal Toys Personalize Airbrush Plush Large Kitty Instruction Manual

Canal Toys 228350

Canal Toys Personalize Airbrush Plush Large Kitty Instruction Manual

Model: 228350 | Brand: Canal Toys

INTRODUCTION

The Canal Toys Personalize Airbrush Plush Large Kitty offers a unique creative experience, allowing users to design and re-design their plush toy using an airbrush gun, markers, and stencils. This manual provides detailed instructions to ensure a fun and safe experience.

WHAT'S INCLUDED

- 1 x Plush Kitty
- 1 x Battery-Powered Airbrush Gun
- 4 x Airbrush Markers (various colors)
- 120 x Stick-On Stencils
- 1 x Pair of Plastic Gloves



Image: All components included in the Airbrush Plush Large Kitty kit.

SAFETY INFORMATION

Conforms to all ASTM D-4236. Remove all packaging before giving to a child. Styles and colors may vary from pictures. Read instructions before use. Please retain this information for future reference. Contents contain colorants that may stain certain surfaces. Do not eat or ingest contents. Do not put near eyes or mouth. Wash hands after use. In case of adverse reaction stop using the item. Do not aim or spray the Airbrush at your face or eyes.

SETUP

- 1. Prepare Your Workspace:** Lay down newspaper or a protective covering to prevent accidental staining.
- 2. Install Batteries:** The airbrush gun requires 2 x AA / LR6 batteries (not included). Open the battery compartment on the airbrush gun and insert the batteries, ensuring correct polarity. Close the compartment securely.
- 3. Insert Marker:** Remove the cap from an airbrush marker. Insert the marker firmly into the nozzle of the airbrush gun until it clicks into place.



Image: Proper insertion of an airbrush marker into the airbrush gun.

OPERATING INSTRUCTIONS

1. **Apply Stencils:** Select your desired stick-on stencils from the provided sheets. Carefully peel them off and firmly press them onto the plush toy in your chosen design.
2. **Airbrush Color:** Hold the airbrush gun approximately 0.5 to 1 cm away from the plush. Press the trigger to spray color onto the plush, covering the stencil area. Practice on paper first to get a feel for the spray.
3. **Change Colors:** To use a different color, remove the current marker from the airbrush gun. Clean the nozzle by spraying for a few seconds onto a piece of paper until no residue of the previous color remains. Then insert the new marker.
4. **Remove Stencils:** Once the color is dry, carefully peel off the stencils to reveal your design.

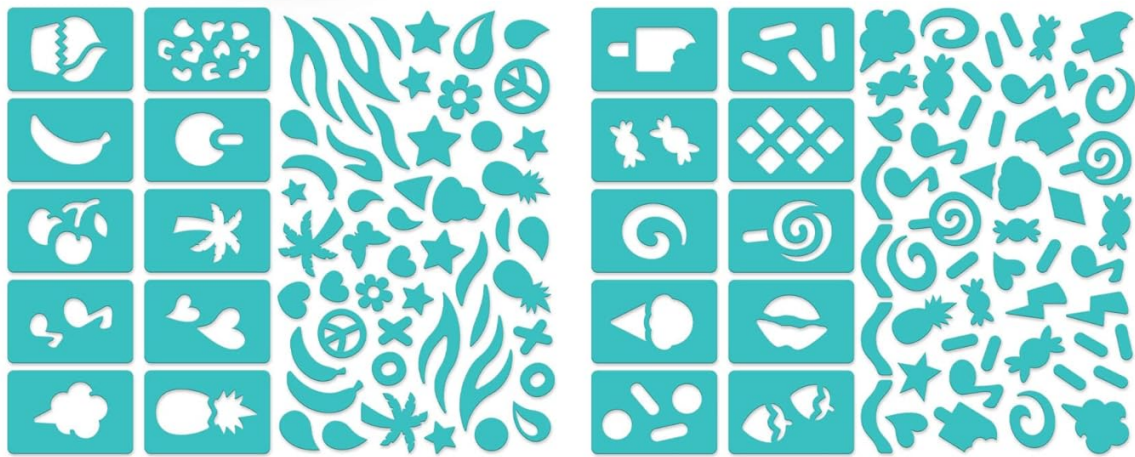


Image: Applying a stick-on stencil to the plush toy.



Image: Using the airbrush gun to apply color through a stencil.

Demonstration Video

Your browser does not support the video tag.

Video: This video demonstrates the process of airbrushing the plush kitty with stencils and markers.

CUSTOMIZATION TIPS

- Experiment with different stencil combinations to create unique patterns.
- Layer colors by allowing the first color to dry before applying another.
- Use the airbrush markers freehand for custom details without stencils.



Image: An example of a customized plush kitty with multiple patterns.

WASHING AND REPEATING

The Airbrush Plush is designed for endless customization. When you are ready for a new design, simply wash the plush to remove the existing colors.

1. **Hand Wash:** Rinse the plush under cold running water until all colors are removed. Gently squeeze out excess water.
2. **Machine Wash:** For a thorough clean, machine wash separately in cold water on a gentle cycle.
3. **Drying:** Allow the plush to air dry completely before re-decorating. Avoid direct sunlight or heat.



Image: The plush kitty being washed to remove colors.



Image: The plush kitty is clean and ready for new designs after washing.

Product Overview and Washing Demonstration

Your browser does not support the video tag.

Video: This video provides an overview of the Airbrush Plush line and demonstrates the washing process.

MAINTENANCE

- **Airbrush Gun Care:** After each use, especially when changing colors, ensure the nozzle is clear of any residual ink. If the airbrush gun becomes clogged, gently clean the nozzle with a damp cloth.
 - **Marker Storage:** Always replace the caps on the airbrush markers tightly after use to prevent them from drying out. Store them in a cool, dry place.
 - **Plush Care:** To maintain the plush's softness, avoid excessive scrubbing during hand washing. Allow it to air dry completely to prevent mildew.
-

TROUBLESHOOTING

- **Airbrush Gun Not Spraying:**
 - Check if batteries are correctly installed and have sufficient power.
 - Ensure the marker is fully inserted into the nozzle.
 - Verify the nozzle is not clogged. Clean as described in the Maintenance section.
 - **Colors Not Washing Out Completely:**
 - Ensure cold water is used for washing.
 - For stubborn stains, a gentle rub with mild soap during hand washing may be necessary.
 - Ensure the plush is thoroughly rinsed.
-

SPECIFICATIONS

- **Brand:** Canal Toys
 - **Model Name:** Airbrush Plush Pink Kitty Small Box
 - **Item Model Number:** 228350
 - **UPC:** 850041019512
 - **Age Range:** 3 years and up (Manufacturer recommended)
 - **Material:** Polyester
 - **Item Dimensions (L x W x H):** 6.5 x 4.5 x 12.2 inches
 - **Item Weight:** 1.15 pounds
 - **Power Source (Airbrush Gun):** 2 x AA / LR6 batteries (not included)
 - **Paint Type:** Water-based
-

WARRANTY AND SUPPORT

For any product inquiries, support, or warranty information, please contact Canal Toys customer service directly. Refer to the product packaging for specific contact details or visit the official Canal Toys website.
