

Sejoy BMQ-MOCHA-BLA

Sejoy BMQ-MOCHA-BLA Electric Nose and Ear Hair Trimmer User Manual

Model: BMQ-MOCHA-BLA

INTRODUCTION

Thank you for choosing the Sejoy BMQ-MOCHA-BLA Electric Nose and Ear Hair Trimmer. This manual provides essential information for the safe and effective operation, maintenance, and care of your device. Please read these instructions thoroughly before first use and retain them for future reference.

PRODUCT OVERVIEW

The Sejoy BMQ-MOCHA-BLA is designed for precise and comfortable trimming of nose and ear hair. It features a double-edged rotary blade system for efficient hair removal without pulling.

Components

- **Cutter Head:** Double-edged floating blade for fast shaving.
- **Protective Cap:** Covers the cutter head for hygiene and protection.
- **Hair Brush:** For cleaning the cutter head.
- **Power Switch:** One-click operation to turn the device on/off.
- **Indicator Light:** Illuminates during low power or charging.
- **USB Charging Cable:** Type-C cable for recharging the device.
- **Type-C Charging Port:** Input for the charging cable.



Figure 1: Sejoy BMQ-MOCHA-BLA Trimmer Components

SETUP

Charging the Device

Before initial use, fully charge the trimmer. Connect the provided Type-C USB charging cable to the charging port on the device and plug the other end into a suitable USB power source (e.g., wall adapter, computer, power bank). The indicator light will show the charging status. A full charge takes approximately 90 minutes and provides up to 120 minutes of use.



Figure 2: Charging the Trimmer and Battery Life

OPERATING INSTRUCTIONS

1. Ensure the device is fully charged.
2. Remove the protective cap from the cutter head.
3. Press the power switch to turn on the trimmer.
4. Gently insert the conical tip of the trimmer into your nostril or ear canal. Avoid inserting too deeply.
5. Move the trimmer slowly to allow the double-edged rotary blades to cut the hair. For optimal results, allow the trimmer to operate for at least 60 seconds in the desired area.
6. After trimming, press the power switch to turn off the device.
7. Clean the cutter head as described in the "Cleaning and Maintenance" section.
8. Replace the protective cap after use.

Nose/Ear Hair Trimmer

Versatile trimmer trims quickly,neatly and comfortably



Trim ear hair



Trim nose hair



Figure 3: Trimming Nose and Ear Hair

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. Turn off the trimmer before cleaning.
2. Remove the cutter head by turning it counter-clockwise.
3. Rinse the cutter head directly under running water. The device is IPX7 waterproof, allowing for easy cleaning.
4. Use the provided hair brush to remove any stubborn hair residues from the blade area.
5. Ensure the cutter head is completely dry before reattaching it.
6. Install the cutter head by turning it clockwise until it clicks into place.
7. Store the trimmer with the protective cap on in a dry, cool place.

IPX7

Waterproof



Remove the nose hair cutter head by turning it in anti-clock-wise direction



Clean the cutter head directly with water



Install the nose hair cutter head by turning it in clockwise direction

Long Battery Life & Ultra Quiet

90

minutes charge

120

minutes use



Figure 4: Cleaning the Trimmer Head

TROUBLESHOOTING

- **Device does not turn on:** Ensure the device is fully charged. If the indicator light shows low power, recharge the device.
- **Poor trimming performance:** The cutter head may be clogged with hair. Clean the cutter head thoroughly as per the "Cleaning and Maintenance" section. Ensure the blades are free from debris.
- **Device stops working:** If the device stops working unexpectedly, ensure it is charged. If the issue persists after charging and cleaning, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Sejoy

Feature	Specification
Model Number	BMQ-MOCHA-BLA
Dimensions (L x W x H)	20.07 x 8.38 x 3.56 cm
Weight	159 grams
Rated Voltage	3.7V
Rated Power	1W
Charging Time	Approximately 90 minutes
Usage Time	Up to 120 minutes (after full charge)
Waterproof Rating	IPX7
Motor Speed	6000 RPM
UPC	754708206317



Figure 5: Product Dimensions and Key Features

SAFETY INFORMATION

- Keep the device out of reach of children.
- Do not disassemble or attempt to repair the device yourself.
- Avoid using the trimmer on irritated or broken skin.
- Do not immerse the main body of the trimmer in water beyond its IPX7 rating. The cutter head is washable, but ensure the charging port is dry before charging.
- Store in a dry place when not in use.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Sejoy website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question