

[Manuals.plus](#) /

› [ZNIARAKL](#) /

› ZNIARAKL WDC901-4K 4K Waterproof Digital Camera Instruction Manual

ZNIARAKL WDC901-4K

ZNIARAKL WDC901-4K 4K Waterproof Digital Camera Instruction Manual

Model: WDC901-4K | Brand: ZNIARAKL

1. INTRODUCTION

Thank you for choosing the ZNIARAKL WDC901-4K 4K Waterproof Digital Camera. This manual provides essential information for the safe and effective use of your new camera. Please read it thoroughly before operation and retain it for future reference.



Figure 1.1: ZNIARAKL WDC901-4K 4K Waterproof Digital Camera and included batteries.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x ZNIARAKL WDC901-4K Digital Camera
- 2 x 700mAh Lithium Batteries
- 1 x USB Cable
- 1 x User Manual
- 1 x Wrist Strap
- 1 x Camera Pouch
- 1 x Charger

Video 2.1: Unboxing and demonstration of the ZNIARAKL WDC901-4K camera and its contents.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the side of the camera.
2. Use one hand to push the cover lock, and simultaneously use the other hand to push out the battery cover. *(Note: The battery compartment is designed to be compact for waterproofing and may require firm force to open.)*
3. Insert the 700mAh lithium battery into the compartment, ensuring correct polarity.
4. Close the battery cover firmly until it clicks into place, and ensure the security lock is in the LOCK position.

3.2 Micro SD Card Installation

This camera supports Micro SD cards up to 128GB (not included). Please format the Micro SD card before first use.

1. With the battery cover open, locate the Micro SD card slot.
2. Insert the Micro SD card into the slot until it clicks.
3. Close the battery cover securely.

3.3 Charging the Battery

Connect the camera to the charger using the provided USB cable. The charging indicator will illuminate. Charging time may vary. The camera supports shooting while charging.

Video 3.1: Demonstration of battery and Micro SD card installation, and initial camera power-on.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

4.2 Switching Modes (Photo/Video)

Use the 'Mode' button to switch between photo and video recording modes. The current mode will be displayed on the screen.

4.3 Autofocus Function

To use autofocus:

1. Half-press the shutter button. A yellow focus frame will appear on the screen.
2. Once the frame turns green, the camera has achieved focus.
3. Fully press the shutter button to capture the image.

Autofocus Camera

Autofocus for Crisp, Vivid Macro Images



Ours: Vivid micro images



Others: Blurry images

Figure 4.1: Autofocus function for clear images.

4.4 Dual Screen & Selfie Mode

The camera features a 1.7-inch front display and a 2.8-inch rear display. To activate selfie mode, flip the camera to face you. The front screen will activate, allowing you to frame your self-portraits. Utilize the built-in 2s, 5s, or 10s self-timer for convenience.

Dual Screen Waterproof Digital Camera



Figure 4.2: Dual screen functionality for easy selfies.

4.5 Digital Zoom

The camera supports 16X digital zoom. Use the 'W' (Wide) and 'T' (Telephoto) buttons to adjust the zoom level.

4.6 Anti-Shake Function

The anti-shake feature helps to stabilize images and videos, reducing blur caused by camera movement. This function is automatically enabled in certain modes or can be toggled via the menu settings.



Figure 4.3: Anti-shake function for stable images.

4.7 Connecting to a PC

To transfer photos and videos, connect the camera to your computer using the provided USB cable. The camera will appear as a removable disk, allowing you to access your files.

5. MAINTENANCE

5.1 Waterproof Usage Guidelines

The camera is waterproof up to 11 feet (3.5 meters). To ensure its waterproof integrity:

- Always ensure the battery door is securely closed and locked before submerging the camera in water.
- Avoid opening the battery compartment while the camera is wet or underwater.
- Rinse the camera with fresh water after use in saltwater and allow it to air dry completely.



Figure 5.1: Camera designed for underwater use up to 11 feet.

5.2 Cleaning

Use a soft, lint-free cloth to clean the camera body and screens. For stubborn smudges, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.

5.3 Battery Care

Store batteries in a cool, dry place. Avoid exposing them to extreme temperatures. If the camera will not be used for an extended period, remove the batteries.

6. TROUBLESHOOTING

- **Camera will not power on:** Ensure the battery is correctly inserted and fully charged.
- **"No Card" error:** Verify that a Micro SD card is inserted correctly and is not damaged. Try reformatting the card (this will erase all data).
- **Blurry images:** Ensure autofocus is properly engaged (yellow frame turns green). Check for smudges on the lens.

- **Water leakage:** Immediately remove the camera from water. Open the battery compartment and remove the battery and SD card. Allow the camera to dry completely. Contact customer support if issues persist.

7. SPECIFICATIONS

Feature	Specification
Model Name	WDC901
Maximum Webcam Image Resolution	48 MP
Video Resolution	4K (2160p)
Digital Zoom	16X
Water Resistance Level	Waterproof (up to 11 feet / 3.5 meters)
Front Display Screen	1.7-inch, 240*280 IPS HD
Rear Display Screen	2.8-inch, 640*480 IPS HD
Battery Type	Lithium Ion (700mAh)
Supported File Format	JPEG, MP4
Connectivity Technology	USB
Special Features	Autofocus, Dual Screens, Anti-Shake, Self-Timer

8. WARRANTY AND SUPPORT

For any questions or issues regarding your ZNIARAKL WDC901-4K camera under normal use, please contact our customer support team. We are committed to providing assistance and will respond within 12 hours to resolve your concerns.

© 2023 ZNIARAKL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question