

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Primy](#) /

› [Primy Kids Desk Chair Instruction Manual](#)

Primy PR777

Primy Kids Desk Chair Instruction Manual

Model: PR777 Grey

PRODUCT OVERVIEW

The Primy Kids Desk Chair (Model PR777) is a versatile and ergonomic seating solution designed for children aged 4 to 12. This chair features height adjustability, a swivel function, and smooth-rolling casters, making it ideal for various activities such as studying, reading, and office tasks. Its design prioritizes comfort, breathability, and proper posture support for growing children.



Image: The Primy Kids Desk Chair in grey, showcasing its design and features.

SAFETY INFORMATION

Warning: Keep out of reach of children when not in use or during assembly to prevent accidents. Ensure all parts are securely fastened before use.

- Do not stand on the chair.
- Ensure the chair is on a stable, flat surface before use.
- Do not exceed the maximum weight recommendation of 250 pounds.
- Supervise children during initial use and adjustment.

SETUP AND ASSEMBLY

Assembly of the Primy Kids Desk Chair is designed to be straightforward and can typically be completed in about 15 minutes. For detailed step-by-step instructions, please refer to the official Installation Manual PDF provided by Primy.

[Download Installation Manual
\(PDF\)](#)

Assembly Overview Video

Your browser does not support the video tag.

Video: An overview of the assembly process for the Primy Kids Armless Desk Chair, demonstrating key steps like attaching the base, casters, and seat.

Key Assembly Components

- **Chair Seat:** The main seating component.
- **Chair Backrest:** Provides back support.
- **Chair Base:** The five-star base with caster attachment points.
- **Air Rod (Gas Lift):** For height adjustment.
- **Casters:** Wheels for mobility.



Image: A diagram illustrating the height adjustment mechanism and recommended age/weight ranges for the chair.

OPERATING INSTRUCTIONS

Height Adjustment

The seat height of the Primy Kids Desk Chair can be adjusted from 16.7 inches to 20.7 inches. To adjust

the height, locate the lever under the seat on the right side. Pull the lever upwards while seated to lower the chair, or pull the lever upwards while standing to raise the chair. For users weighing less than 100 lbs, parental assistance may be required to activate the gas lift mechanism.



Image: Detailed dimensions of the chair, including the adjustable height range, and recommended age (4-12 years) and maximum load (250 lbs).

Swivel and Rolling Function

The chair features a 360-degree swivel function, allowing for easy rotation. The smooth casters enable effortless movement across hard floor surfaces without causing damage. This mobility is designed to enhance convenience and flexibility in various study or play environments.



Image: A child seated at a desk using the Primy Kids Desk Chair, demonstrating its practical use.

Ergonomic Design Benefits

The 17.5-inch wide wrap-around backrest and C-shaped design are engineered to conform to the natural curve of the body, promoting good sitting posture and reducing back stress during long periods of sitting. The 3D woven breathable mesh and high-density sponge padded seat ensure comfort and ventilation.

COMFORTABLE & BREATHABLE DESIGN



Image: Visual representation of the chair's comfortable and breathable design, highlighting high-density cushion, breathability, strong tension, and anti-scratch properties.

17.5" EXTRA WIDE WRAP-AROUND BACKREST

Better fit and support for the back and improve sitting posture.

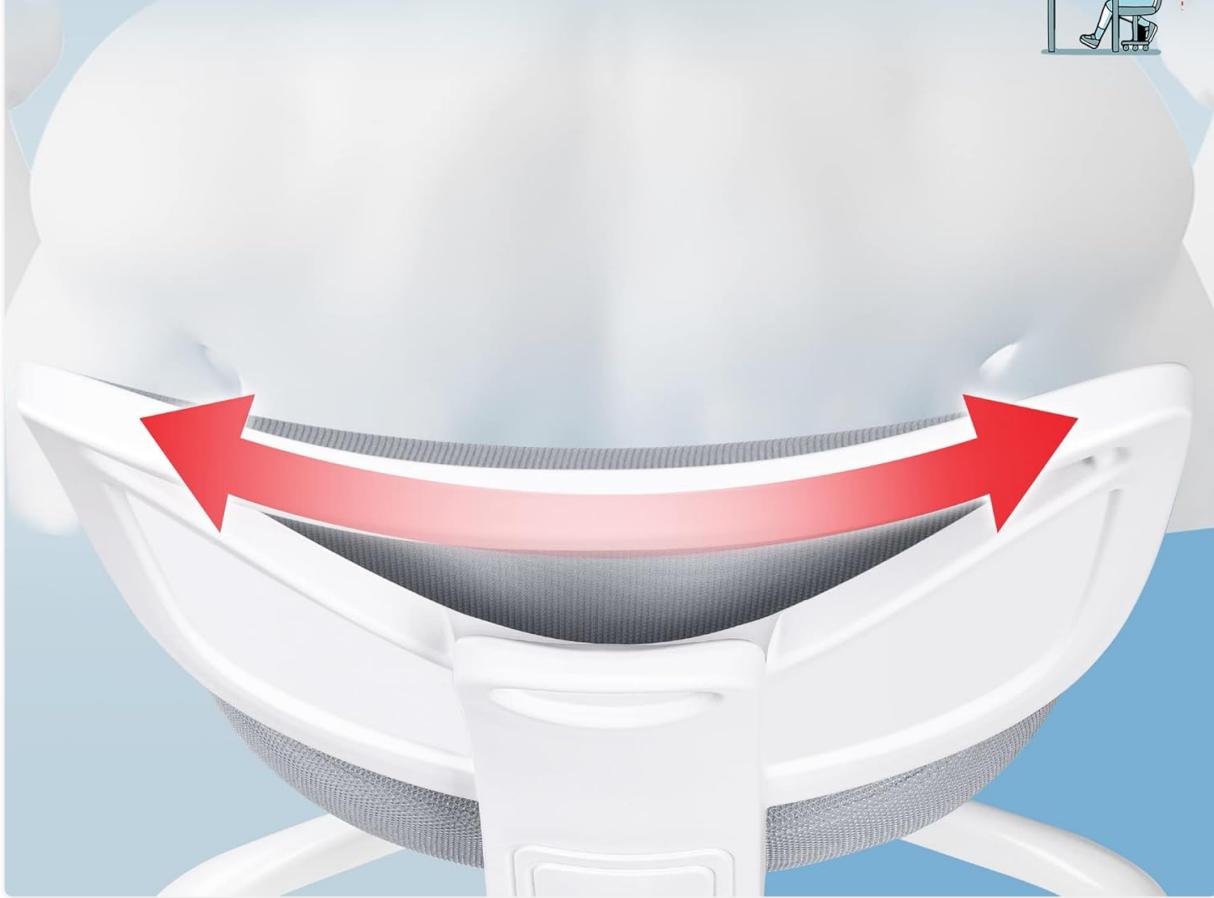


Image: A diagram illustrating how the extra-wide wrap-around backrest supports proper spinal alignment and improves sitting posture.

MAINTENANCE

To maintain the quality and appearance of your Primy Kids Desk Chair, follow these simple care instructions:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Re-tighten if necessary.
- **Casters:** Keep casters free of debris (hair, lint) to ensure smooth rolling.

TROUBLESHOOTING

If you encounter any issues with your Primy Kids Desk Chair, please refer to the following common troubleshooting tips:

- **Chair not adjusting height:** Ensure the gas lift lever is fully engaged. For users under 100 lbs, apply more downward pressure or seek parental assistance.
- **Chair wobbles:** Check that all screws are securely tightened, especially those connecting the seat to

the base and the backrest.

- **Casters not rolling smoothly:** Inspect casters for any trapped debris (e.g., hair, lint) and remove it. Ensure they are properly inserted into the base.

For further assistance, please contact Primy customer service.

SPECIFICATIONS

Feature	Detail
Brand	Primy
Model Name	PR777
Color	Grey
Product Dimensions	18"D x 9"W x 18.5"H
Seat Height Adjustment	16.7" - 20.7"
Maximum Weight Recommendation	250 Pounds
Age Range (Description)	Child (4-12 years)
Special Features	Adjustable Height, Swivel, Rolling
Material	Mesh, High-density Sponge
Product Care Instructions	Wipe Clean
Item Weight	17.64 pounds

WARRANTY AND SUPPORT

Primy offers a **1-year after-sales warranty** for the Kids Desk Chair (Model PR777). This warranty covers manufacturing defects and issues arising from normal use.

If you have any questions, concerns, or require assistance with your product, please do not hesitate to contact Primy customer service. Our team is dedicated to providing prompt and helpful support.

Contact Information:

- For customer service inquiries, please refer to the contact details provided on your purchase receipt or the official Primy website.
- You can also visit the [Primy Store on Amazon](#) for more information and support resources.

© 2025 Primy. All rights reserved.

Related Documents - PR777

	PR959-Z Assembly Instructions Detailed assembly instructions for the PR959-Z chair, including a list of accessories, usage notices, and step-by-step assembly guidance with diagrams.
---	--

 PRIMY PR-777-Z Assembly Instructions Scan the QR code to view the assembly video.	<p>Primy PR-777-Z Office Chair Assembly Instructions</p> <p>Step-by-step assembly guide for the Primy PR-777-Z office drafting chair. Includes a detailed parts list, usage instructions, safety notices, and warranty activation information.</p>
 PRIMY PR-934 Assembly Instructions Scan the QR code to view the assembly video.	<p>Primy PR-934 Office Chair Assembly Instructions</p> <p>Detailed assembly guide for the Primy PR-934 office chair, including parts list, safety precautions, and step-by-step instructions for a smooth setup.</p>
 PRIMY PR-777 Assembly Instruction Manual Scan the QR code to view the assembly video.	<p>Primy PR-777 Assembly Instruction Manual</p> <p>Detailed assembly instructions for the Primy PR-777 chair, including parts list, step-by-step guidance, and usage notes. Learn how to assemble your Primy chair safely and correctly.</p>
 PRIMY PR-934-Z Assembly Instructions Scan the QR code to view the assembly video.	<p>Primy PR-934-Z Assembly Instructions</p> <p>Detailed assembly instructions for the Primy PR-934-Z office chair, including a list of accessories and step-by-step guidance with diagrams.</p>