

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LEVOIT](#) /
- › [LEVOIT LTF-F361-WEU Tower Fan User Manual](#)

LEVOIT LTF-F361-WEU

LEVOIT LTF-F361-WEU Tower Fan User Manual

Model: LTF-F361-WEU

[Instructions](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the LEVOIT LTF-F361-WEU Tower Fan. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The LEVOIT LTF-F361-WEU Tower Fan, a sleek and modern cooling device.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please read and follow all instructions and warnings in this manual.

- Always place the fan on a stable, level surface.

- Do not use the fan in wet or damp locations, such as bathrooms.
- Keep the fan away from water and other liquids.
- Do not insert fingers or foreign objects into the grille while the fan is operating.
- Unplug the fan from the power outlet when not in use, when moving it, or before cleaning.
- Do not operate the fan with a damaged cord or plug.
- Keep the power cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Please check the package contents upon receipt. If any items are missing or damaged, contact customer support.

- LEVOIT LTF-F361-WEU Tower Fan
- Remote Control
- User Manual

4. SETUP AND ASSEMBLY

The LEVOIT LTF-F361-WEU Tower Fan is designed for easy assembly. Follow these steps to set up your fan:

1. **Unpack the Fan:** Carefully remove all components from the packaging.
2. **Assemble the Base:** The base is designed for straightforward attachment. Align the fan body with the base and secure it according to the instructions provided in the quick start guide (if applicable).
3. **Connect Power:** Plug the power cord into a suitable electrical outlet.

The rear grille is detachable for easy cleaning, secured by a single nut.

Plus Facile à Utiliser et à Entretienir



Image 4.1: Overview of the fan's control panel, remote control storage, and the detachable rear cover for maintenance.

5. OPERATING INSTRUCTIONS

Your LEVOIT Tower Fan offers multiple settings for personalized comfort. You can control the fan using the touch control panel on top or the included remote control.

5.1 Power On/Off

Press the power button on the control panel or remote to turn the fan on or off.

5.2 Fan Speeds

The fan features 5 adjustable speeds. Use the speed buttons on the control panel or remote to cycle through the speed settings (1-5).

5.3 Wind Modes

Select from 4 distinct wind modes to suit your preference:

- **Normal Mode:** Provides a constant airflow at your selected speed.

- **Auto Mode:** Adjusts fan speed automatically based on ambient temperature, ensuring optimal comfort and energy efficiency.
- **Sleep Mode:** Operates at a very low noise level (as low as 23 dB) with automatic display dimming for an undisturbed night's sleep.
- **Turbo Mode:** Delivers the highest fan speed for rapid cooling.

Réactif à La Température



Image 5.1: Illustration of the fan's Auto Mode, demonstrating how it adjusts speed based on room temperature for optimal comfort.

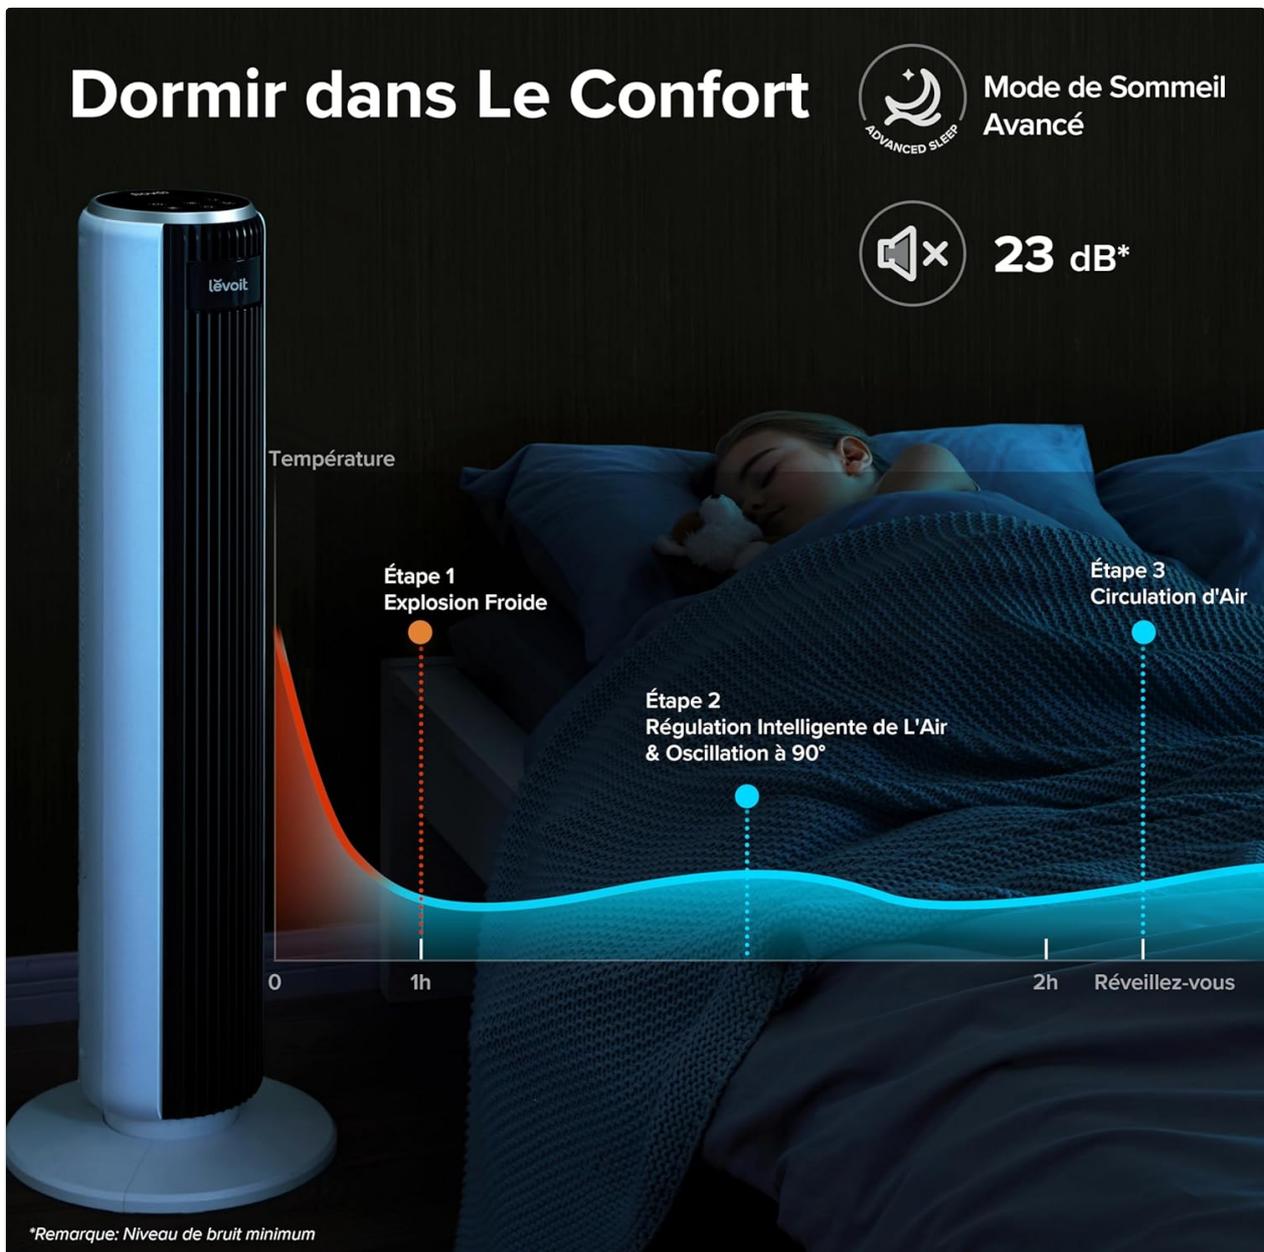


Image 5.2: The fan operating in Advanced Sleep Mode, providing quiet airflow (23 dB) for a comfortable night's rest.

5.4 Oscillation

Activate the 90° oscillation feature to distribute airflow across a wider area. This ensures comprehensive room coverage with a maximum range of 7 meters.



Image 5.3: The fan's 90-degree oscillation feature, illustrating how it provides wide-ranging cool air.

5.5 Timer Function

Set the fan to automatically turn off after a specified period, up to 12 hours. Use the timer button on the control panel or remote to adjust the duration.

5.6 Remote Control

The included remote control allows convenient operation from a distance. Ensure the remote has working batteries and is pointed towards the fan's receiver.

Video 5.4: A short preview demonstrating the LEVOIT Tower Fan's oscillation feature and quiet operation. This video highlights the fan's movement and low noise level.

Video 5.5: An official product video showcasing the various features and modes of the LEVOIT Tower Fan, including its quiet operation, multiple speeds, and oscillation.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your fan.

6.1 Exterior Cleaning

- Always unplug the fan before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the fan is completely dry before plugging it back in.

6.2 Internal Cleaning (Detachable Rear Cover)

The rear cover is detachable for easy access to the internal components for cleaning.

1. Unplug the fan.
2. Locate the single nut securing the rear cover and unscrew it.
3. Carefully remove the rear cover.
4. Use a soft brush or vacuum cleaner to remove dust and debris from the fan blades and internal components.
5. The rear cover can be washed with water. Ensure it is completely dry before reattaching.
6. Reattach the rear cover and secure it with the nut.



Image 6.1: Illustration of the detachable rear cover and internal fan components, highlighting the ease of cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Weak airflow.	Air inlet/outlet blocked or dirty.	Clean the air inlet and outlet grilles. Ensure there are no obstructions around the fan.
Fan makes unusual noise.	Foreign object inside or fan not on a level surface.	Unplug the fan and check for any foreign objects. Place the fan on a stable, level surface.
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace the batteries with new ones, ensuring correct polarity. Point the remote directly at the fan.

If the problem persists after trying these solutions, please contact LEVOIT customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	LTF-F361-WEU
Dimensions (L x W x H)	16.51 x 16.51 x 91.95 cm
Weight	3.6 Kilograms
Power	39 Watts
Voltage	220.0 V
Noise Level	23 dB (lowest) - 28 dB (typical)
Wind Speed	Up to 7 m/s
Oscillation	90 degrees
Timer	12 hours
Special Features	Portable, Automatic Shut-off Function, Remote Control

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Warranty Information

LEVOIT provides a **2-year warranty** for this tower fan. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

If you have any questions about your product, warranty, or need technical assistance, please contact LEVOIT customer support. Our professional team is ready to assist you.
For more information, visit the official LEVOIT website or contact your local distributor.