

Pigeon VIN 750 W Mixer Grinder

Pigeon by Stovekraft VIN 750 W Mixer Grinder with 4 Multipurpose Jars User Manual

1. INTRODUCTION

Thank you for choosing the Pigeon by Stovekraft VIN 750 W Mixer Grinder. This appliance is designed for efficient and convenient food preparation in your kitchen. Please read this manual carefully before operating the mixer grinder to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Supervise children closely when the appliance is in use.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Ensure all parts are correctly assembled before operating.
- Avoid processing excessively hot ingredients. Allow them to cool before blending.
- Do not overload the mixer grinder. Refer to the capacity guidelines for each jar.

3. PRODUCT OVERVIEW

The Pigeon by Stovekraft VIN 750 W Mixer Grinder comes with a powerful motor and multiple jars for various grinding and

blending needs.

3.1 Key Features

- 750 W powerful motor for efficient grinding.
- Equipped with 4 multipurpose jars for different applications.
- ISI certified for quality and safety.
- Durable stainless steel jars and blades.
- Portable design for easy handling.

3.2 Components Included

- 1 x Mixer Grinder Unit (Motor Base)
- 3 x Stainless Steel Jars (various sizes for dry grinding, wet grinding, chutney making)
- 1 x Juicer Jar
- 1 x User Manual

3.3 Product Diagram

Refer to the image below for an overview of the mixer grinder and its components.



Figure 1: Pigeon by Stovekraft VIN 750 W Mixer Grinder with 4 Jars. This image shows the main mixer grinder unit along with the four accompanying jars.



Figure 2: Close-up view of the mixer grinder jars and their respective blades. This image highlights the different types of jars and their blade configurations for various grinding tasks.



Figure 3: The motor base of the Pigeon Mixer Grinder. This image displays the main unit where the jars are attached for operation.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, wash all removable parts (jars, lids, blades) with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
3. **Placement:** Place the mixer grinder unit on a stable, flat, and dry surface, away from heat sources and water.
4. **Power Connection:** Ensure the power switch is in the "OFF" position before plugging the appliance into a suitable electrical outlet.
5. **Initial Run (Optional):** For the first use, run the mixer grinder with an empty jar for a minute or two to remove any manufacturing odors.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your mixer grinder.

5.1 General Operation

1. **Prepare Ingredients:** Cut ingredients into small pieces suitable for grinding. Do not overfill the jar beyond the maximum fill line.
2. **Attach Jar:** Place the desired jar onto the motor unit and twist clockwise until it locks securely into place. Ensure the lid is properly secured on the jar.
3. **Select Speed:** Turn the speed control knob to the desired speed setting. The mixer grinder features 3 speed settings for varying grinding requirements. Start with a lower speed and gradually increase if needed.
4. **Operate:** Switch on the appliance. For tough ingredients, use the pulse function (if available) for short bursts.
5. **Monitor:** Do not run the mixer grinder continuously for more than 3-5 minutes. Allow a cooling period between cycles to prevent motor overheating.
6. **Switch Off:** Once grinding is complete, turn the speed control knob to the "OFF" position and unplug the appliance from the power outlet.
7. **Remove Jar:** Wait for the blades to stop completely before removing the jar by twisting it counter-clockwise.

5.2 Usage Tips for Different Jars

- **Small Jar (Chutney/Spice Grinding):** Ideal for grinding small quantities of spices, chutneys, and pastes.
- **Medium Jar (Wet Grinding):** Suitable for preparing idli/dosa batter, purees, and gravies. Add water as needed for smooth consistency.
- **Large Jar (Dry Grinding):** Use for grinding larger quantities of dry spices, grains, or making powders.
- **Juicer Jar:** For extracting juices from fruits and vegetables. Ensure seeds and tough skins are removed before juicing.

6. CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your mixer grinder.

1. **Cleaning the Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse it in water.
2. **Cleaning Jars and Lids:** Wash jars, lids, and blades immediately after use to prevent food from drying and sticking. Use warm soapy water and a brush for thorough cleaning. Rinse well and dry completely.

3. **Blade Care:** Handle blades with extreme caution as they are sharp. Do not attempt to sharpen the blades yourself.
4. **Dishwasher Safety:** The jars and blades are **NOT** dishwasher safe. Hand wash only.
5. **Storage:** Store the mixer grinder and its accessories in a clean, dry place when not in use.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Mixer grinder does not start.	Not plugged in. Power switch off. Jar not properly locked. Overload protector tripped.	Check power connection. Ensure power switch is ON. Securely lock the jar onto the motor unit. Unplug, reduce load, wait 2-3 minutes, then press the reset button (usually at the bottom of the unit).
Burning smell during operation.	New motor smell (normal for first few uses). Overloading. Continuous operation for too long.	This is normal for new appliances. Reduce the quantity of ingredients. Allow the motor to cool down. Do not run continuously for more than 3-5 minutes.
Loud noise or vibration.	Jar not properly seated. Uneven load in the jar. Blades are dull or damaged.	Ensure the jar is securely locked. Distribute ingredients evenly. Contact customer support if blades are damaged.

If the problem persists after trying these solutions, please contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Pigeon
Model Name	Pigeon by Stovekraft VIN 750 W Mixer Grinder with 4 Multipurpose Jars
Model Number	15761
Colour	Black
Wattage	750 Watts
Voltage	750 Volts
Material	Stainless Steel (Jars), Plastic (Controls)
Blade Material	Stainless Steel
Number of Jars	4 (3 SS Jars, 1 Juicer Jar)
Number of Speeds	3

Feature	Detail
Product Dimensions (D x W x H)	37D x 22W x 25.5H Centimeters
Item Weight	4300 Grams (4.3 kg)
Special Feature	Portable
Dishwasher Safe	No
Manufacturer	Pigeon, Stovekraft Limited
Manufacture Year	2025

9. WARRANTY AND SUPPORT

Your Pigeon by Stovekraft VIN 750 W Mixer Grinder comes with a**2-year manufacturer warranty** on the product and motor from the date of purchase.

For warranty claims, service, or technical support, please contact:

Stovekraft Limited

81/1 Harohalli Industrial Area Kanakapura Taluk Bangalore Kanakapura, Bengaluru, Karnataka 562112
Phone: 080 26985800

Please retain your purchase receipt for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question