



[Manuals.plus](#) /

> [Mid drivr](#) /

> Mid drivr Black Anti-Theft License Plate Screw Kit (M6) - Instruction Manual

Mid drivr mjqp2013

Mid drivr Black Anti-Theft License Plate Screw Kit (M6) - Instruction Manual

Brand: Mid drivr | Model: mjqp2013

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Mid drivr Black Anti-Theft License Plate Screw Kit. Designed for enhanced security and durability, these M6 (1/4") tamper-proof screws are made from rustproof stainless steel, offering reliable protection for your vehicle's license plates.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 4 x Black Stainless Steel Anti-Theft Screws (M6 x 20mm)
- 4 x Black Screw Covers
- 4 x Black Screw Washers
- 4 x Nylon Screw Inserts
- 4 x Foam Anti-Rattle Pads
- 1 x Special Hex L-Wrench (for installation/removal)
- 1 x Hex Drill Bit (for power tool use)



Figure 1: Complete contents of the Middrivr Black Anti-Theft License Plate Screw Kit.

SPECIFICATIONS

Material	Stainless Steel
Color	Black
Fastener Type	Tamper-Proof Bolt, Cap
Head Style	Hexagonal (Torx with center pin)
Fastener Size	M6 x 20mm (1/4" x 3/4")
Thread Type	Metric, Right Hand, Fully Threaded
Number of Pieces	4 screws, 4 covers, 4 washers, 4 nylon inserts, 2 wrenches

Model Number	mjqp2013
UPC	749877653406

Product Size



Figure 2: Product dimensions for the screws, washers, and caps.

SETUP AND INSTALLATION

Follow these steps to securely install your anti-theft license plate screws:

1. **Prepare the Mounting Area:** Ensure the license plate mounting holes on your vehicle are clean and free from debris.
2. **Insert Nylon Inserts (if needed):** If your vehicle's mounting holes are not threaded or are oversized, gently push the provided nylon screw inserts into the holes. These provide a secure anchor for the screws.
3. **Attach Foam Pads:** Peel the backing from the foam anti-rattle pads and apply them to the back of your license plate, aligning them with the screw holes. This prevents vibration and scratching.

ENJOY THE NOISE.FREE LICENSE PLATES

Scratch your car
Rust & Rattle

NO!



RUST FREE, NO RATTLE
SCRATCHPROOF,

On the back of the license plate
No vibration noise Protect the paint does not wear



Back self-adhesive stickers

8 adhesive backed foam anti-rattle pads



Figure 3: Applying foam anti-rattle pads to the license plate.

4. **Position License Plate:** Align your license plate and any frame (not included) with the mounting holes on your vehicle.
5. **Assemble Screw and Washer:** Place a black screw washer onto each anti-theft screw.
6. **Secure the Screws:** Insert the assembled screw and washer through the license plate (and frame) into the vehicle's mounting hole. Use the provided special hex L-wrench or the hex drill bit with a power tool to tighten the screws. Ensure they are snug but do not overtighten.

BRIEF INTRODUCTION OF VARIOUS PARTS



Torx screws with thimble can prevent license plate theft



Use this special wrench to unscrew Torx screws with thimble



Foam cushion can reduce the noise of license plate

Figure 4: Securing the license plate with the anti-theft screws.

7. **Attach Screw Covers:** Once the screws are tightened, snap the black screw covers over the screw heads. These covers provide an aesthetic finish and an additional layer of tamper deterrence.

HIGH QUALITTY BLACK SCREW CAPS

BETTER DECORATION OF YOU LICENE PLATE AND PROTECION SREWS



NEVER BROKEN, NEVER LOOSE

Not Easily Deformed

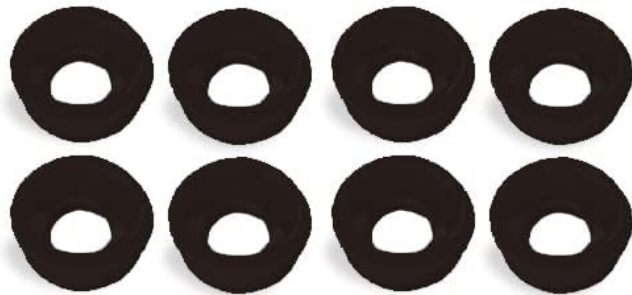


Figure 5: Black screw covers for an aesthetic finish and added security.

Installation Demonstration Video

Your browser does not support the video tag.

Video 1: A step-by-step demonstration of installing the anti-theft license plate screws and covers.

OPERATION

The Middrivr Anti-Theft License Plate Screws are designed for simple operation by authorized users while deterring unauthorized removal. The unique hexagonal head with a central pin requires the specialized L-wrench or drill bit provided in the kit for installation and removal.

- **Installation:** Use the provided L-wrench or hex drill bit to tighten the screws clockwise until snug.
- **Removal:** To remove the screws, use the provided L-wrench or hex drill bit to turn the screws counter-clockwise.
- **Screw Covers:** The screw covers are designed to snap firmly into place over the screw heads. To remove them, carefully pry them off using a small, flat tool, taking care not to damage the cover or surrounding area.



Figure 6: Overview of the anti-theft screw design and specialized tools.

MAINTENANCE

To ensure the longevity and continued performance of your anti-theft license plate screws, follow these maintenance guidelines:

- **Regular Cleaning:** Clean the screws and covers periodically with mild soap and water to remove dirt and road grime. Avoid abrasive cleaners that could damage the black coating.
- **Inspect for Damage:** Periodically check the screws, washers, and covers for any signs of wear, damage, or loosening. Replace any damaged components immediately.
- **Rust Prevention:** The screws are made from stainless steel for rust resistance. However, in harsh environments (e.g., coastal areas, areas with road salt), occasional inspection and cleaning can further prevent any potential corrosion.

100% STAINLESS STEEL WILL NEVER RUST



Rust prevention
Corrosion protection



Figure 7: Rust prevention features of the stainless steel screws.

TROUBLESHOOTING

If you encounter any issues during installation or use, refer to the following common solutions:

- **Screws do not fit:**
 - Verify your vehicle's license plate mounting holes are M6 (1/4") compatible.
 - Ensure you are using the nylon screw inserts if the holes are unthreaded or too large.
 - Some vehicles may require a different screw size. Please check your vehicle's specifications before purchase.
- **Screw covers do not stay on:**
 - Ensure the screw is fully tightened and the washer is properly seated before attempting to snap on the cover.
 - Apply firm, even pressure when snapping the cover into place.
 - If covers are damaged, they may not secure properly and should be replaced.

- **License plate rattles:**

- Confirm that the foam anti-rattle pads are correctly installed on the back of the license plate.
- Ensure all screws are tightened securely.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Mid drivr Black Anti-Theft License Plate Screw Kit, please contact Mid drivr customer service. Specific warranty details may vary; refer to your purchase documentation or the official Mid drivr website for the most current information.