

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [IRIS OHYAMA](#) /

› [Iris Ohyama LED Ceiling Light Remote Control CL-RNS2 \(Model 58149\) Instruction Manual](#)

## IRIS OHYAMA CL-RNS2

# Iris Ohyama LED Ceiling Light Remote Control CL-RNS2 Instruction Manual

Model: 58149

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Iris Ohyama LED Ceiling Light Remote Control, model CL-RNS2. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: Iris Ohyama LED Ceiling Light Remote Control CL-RNS2. This image shows the remote control unit with its various buttons and digital display.

## 2. SETUP

### 2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

#### Caution:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.

### 2.2 Pairing with Ceiling Light

The remote control typically comes pre-paired with compatible Iris Ohyama LED ceiling lights. If the remote does not respond, follow these steps to pair it:

1. Ensure the ceiling light is powered on at the main switch.
2. Within 5 seconds of turning on the light, press and hold the 'Pairing' button (if available, or a designated button like 'On' or 'Full Brightness') on the remote control for approximately 3-5 seconds.
3. The ceiling light should flash or blink to indicate successful pairing.
4. If pairing fails, turn off the light, wait 10 seconds, and repeat the process.

## 3. OPERATING INSTRUCTIONS

---

The CL-RNS2 remote control features 18 buttons for various functions, including a digital display for precise control.

### 3.1 Basic Functions

- **ON/OFF Button:** Press once to turn the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light brightness. The digital display will show the current brightness level.
- **Color Temperature Adjustment:** Use the 'Warm' and 'Cool' buttons (or similar icons) to adjust the light's color temperature from warm white to cool white. The digital display may show a corresponding value.
- **Full Brightness Button:** Instantly sets the light to its maximum brightness and often a neutral white color temperature.
- **Night Light Mode:** Activates a low-level light setting suitable for night use.

### 3.2 Advanced Functions (Digital Display)

The digital display provides visual feedback for precise adjustments. Specific functions may vary based on the connected ceiling light model.

- **Timer Function:** Set the light to turn off automatically after a specified period (e.g., 30 minutes, 60 minutes). Refer to the ceiling light's manual for specific timer settings.
- **Scene Presets:** Some models allow saving preferred brightness and color temperature settings as presets for quick recall.

## 4. MAINTENANCE

---

### 4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's range decreases or it becomes unresponsive. Follow the battery installation steps in Section 2.1.

## 5. TROUBLESHOOTING

---

### 5.1 Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly and are not depleted. Replace with fresh alkaline batteries if necessary.

- **Obstructions:** Make sure there are no objects blocking the line of sight between the remote control and the ceiling light.
- **Range:** Ensure you are within the effective operating range of the remote control.
- **Re-pairing:** Attempt to re-pair the remote control with the ceiling light as described in Section 2.2.

## 5.2 Light Does Not Turn On/Off

- **Main Power:** Verify that the main power switch for the ceiling light is turned on.
- **Light Fixture Issue:** If the remote control is functioning (e.g., its digital display lights up), the issue might be with the ceiling light fixture itself. Consult the ceiling light's manual or contact support.

## 6. SPECIFICATIONS

Feature	Specification
Brand	IRIS OHYAMA
Model Number	CL-RNS2 (58149)
Color	White
Battery Type	AAA Alkaline (not included)
Number of Buttons	18
Special Features	Digital Display
Package Dimensions	20.6 x 6.6 x 2.1 cm
Weight	120 g
First Available Date	February 23, 2023

## 7. WARRANTY INFORMATION

Specific warranty details for the Iris Ohyama LED Ceiling Light Remote Control CL-RNS2 are typically provided with the product packaging or can be found on the official Iris Ohyama website. Please refer to these sources for comprehensive warranty terms and conditions.

## 8. SUPPORT

For further assistance, technical support, or inquiries regarding your Iris Ohyama LED Ceiling Light Remote Control, please contact:

- The retailer from whom you purchased the product.
- The official Iris Ohyama customer support channels, which can typically be found on their website.

