



[Manuals.plus](#) /

> [BBRKIN](#) /

> BBRKIN TBG01 Depository Drop Safe User Manual

BBRKIN TBG01

BBRKIN TBG01 Depository Drop Safe User Manual

Model: TBG01

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your BBRKIN TBG01 Depository Drop Safe. Please read this manual thoroughly before installation and operation to ensure proper functionality and security. Keep this manual for future reference.

2. SAFETY INFORMATION

- Always keep backup keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Do not expose the safe to extreme temperatures or humidity.
- Change the factory default password immediately after initial setup.
- Keep the electronic keypad dry and clean.
- The safe is not water-resistant. Avoid placing it in areas prone to water exposure.
- Do not attempt to force the safe open if the electronic lock fails. Use the backup key.

ALARM SYSTEM

Entering the wrong password three times in a row triggers the alarm system



Figure 2.1: The safe features an alarm system that activates after three incorrect password entries.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- BBRKIN TBG01 Depository Drop Safe
- Backup Keys (2)
- Mounting Hardware (bolts and anchors)
- User Manual

4. PRODUCT OVERVIEW

The BBRKIN TBG01 Depository Drop Safe is designed for secure storage of cash, documents, and valuables. It features a robust construction and a dual-locking mechanism for enhanced security.

TWO METHODS UNLOCK



Figure 4.1: Front view of the BBRKIN TBG01 Depository Drop Safe, showing the electronic keypad and deposit slot.

Key Features:

- **Durable Construction:** Heavy-duty carbon steel with a 0.5-inch thick steel plate door and four 1-inch thick locking bolts.
- **Deposit Slot:** Front deposit drawer with a saw-tooth edge tilting baffle to prevent fishing out contents.
- **Electronic Lock System:** Programmable 3-8 digit password with digital screen.
- **Key Backup:** Two manual backup keys for emergency access.
- **Alarm System:** Triggers after three incorrect password entries.
- **Spacious Interior:** 2.2 cubic feet capacity.

STURDY CONSTRUCTION



Figure 4.2: Interior view highlighting the four solid steel locking bolts and the 0.5-inch thick door.

PRODUCT DIMENSION



Figure 4.3: Dimensions of the safe and a detailed view of the deposit slot and drawer.

5. SETUP

5.1 Unpacking

Carefully remove the safe from its packaging. Inspect for any damage. Retain packaging for future transport if needed.

5.2 Battery Installation

The electronic keypad requires four AA batteries (not included). Open the safe using the backup key. Locate the battery compartment on the inside of the door, usually behind a small panel secured by a screw. Install the batteries, ensuring correct polarity. Close the compartment.

5.3 Mounting the Safe

For maximum security, it is recommended to mount the safe to a wall, floor, or cabinet using the provided mounting hardware.

1. Choose a suitable location for mounting.
2. Open the safe door. Remove the felt lining from the bottom to expose the pre-drilled holes.

3. Mark the drilling points on the wall or floor through the holes in the safe.
4. Drill pilot holes using an appropriate drill bit for your mounting surface.
5. Position the safe and secure it using the provided bolts and anchors. Ensure all bolts are tightened firmly.
6. Replace the felt lining.

6. OPERATING INSTRUCTIONS

6.1 Initial Password Setup

When first powered on, the safe typically has a default password (e.g., "159"). It is crucial to change this immediately.

1. With the door open, press the red reset button located on the inside of the door. The display will show "SET".
2. Enter your new 3-8 digit password on the keypad.
3. Press the "#" key to confirm. The display will show "DONE".
4. Test the new password with the door open before closing it.



Figure 6.1: The electronic keypad and backup keys, illustrating the two methods of unlocking the safe.

6.2 Opening the Safe with Electronic Keypad

1. Enter your 3-8 digit password on the keypad.
2. Press the "#" key. The display will show "OPENED".
3. Within 5 seconds, rotate the handle clockwise to open the door.

6.3 Opening the Safe with Backup Key

In case of battery failure or forgotten password, use the backup key:

1. Locate the keyhole cover on the keypad panel.
2. Remove the cover.
3. Insert the backup key and turn it counter-clockwise.
4. Simultaneously rotate the handle clockwise to open the door.

6.4 Using the Deposit Slot

The top deposit slot allows for quick and secure deposits without opening the main safe door.

1. Pull the deposit drawer forward.
2. Place items (cash, envelopes, etc.) into the drawer.
3. Push the drawer back into the safe. Items will drop into the main compartment.



Figure 6.2: The deposit slot features an anti-fishing baffle to prevent removal of contents from the outside.

6.5 Closing and Locking the Safe

Close the safe door and rotate the handle counter-clockwise until it is fully engaged. The safe will automatically lock.

7. MAINTENANCE

7.1 Battery Replacement

When the battery power is low, the keypad display may show a low battery indicator. Replace all four AA batteries promptly to ensure continuous operation. Use the backup key if the batteries die completely before replacement.

7.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Safe does not open with keypad.	Incorrect password entered; low batteries; keypad malfunction.	Re-enter password carefully. Replace batteries. Use backup key.
Keypad is unresponsive.	Dead batteries.	Replace all four AA batteries. Use backup key to open.
Alarm sounds frequently.	Incorrect password entered multiple times.	Ensure correct password entry. The alarm will reset after a correct entry or after a timeout.
Door does not close properly.	Obstruction in the door frame; locking bolts not retracting fully.	Check for any obstructions. Ensure the handle is fully rotated to retract bolts before closing.

9. SPECIFICATIONS

Feature	Detail
Brand	BBRKIN
Model Number	TBG01
Product Dimensions (L x W x H)	15"D x 13.4"W x 19"H
Capacity	2.2 Cubic Feet
Lock Type	Electronic Keypad & Key
Material	Alloy Steel, Carbon Steel
Door Thickness	0.5 inches (12 mm)
Locking Bolts	4 x 1-inch thick solid steel bolts
Mounting Type	Wall Mount / Floor Mount
Power Source	4 x AA Batteries (not included)
Water Resistance	Not Water Resistant
Item Weight	51.3 pounds

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official BBRKIN website. If you encounter any issues after receiving your safe, please contact customer service for assistance.

