

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SOKANY](#) /

› [Sokany SK-7028 Chopper & Grinder User Manual](#)

SOKANY SK-7028

Sokany SK-7028 Chopper & Grinder User Manual

Model: SK-7028 | Brand: SOKANY

1. INTRODUCTION

Thank you for choosing the Sokany SK-7028 Chopper & Grinder. This appliance is designed to simplify your food preparation tasks with its powerful 800W motor and durable stainless steel construction. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Ensure the appliance is unplugged from the power outlet before assembling, disassembling, or cleaning.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid processing extremely hard foods that may damage the blades or motor.
- Always ensure the lid is securely locked in place before operating the chopper.
- Use only original Sokany replacement parts and accessories.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Sokany SK-7028 Chopper & Grinder:

- Motor Unit (with power cord)
- Lid

- Chopping Blades
- 4-Liter Stainless Steel Bowl
- Anti-slip Base (integrated with bowl)



Image 3.1: Assembled Sokany SK-7028 Chopper & Grinder.



Image 3.2: Close-up of the stainless steel bowl with 'Food Contact' and 'Food Grade' markings.



Image 3.3: The motor unit of the Sokany SK-7028.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Clean:** Before first use, wash the stainless steel bowl, lid, and chopping blades in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Assemble:** Place the stainless steel bowl on a stable, flat surface. Carefully place the chopping blades onto the central shaft inside the bowl. Add your ingredients to the bowl.
4. **Secure Lid:** Place the lid onto the bowl, ensuring it is properly aligned and securely locked.
5. **Attach Motor Unit:** Position the motor unit on top of the lid, aligning the drive shaft with the blade assembly. Ensure it sits firmly.
6. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATION

The Sokany SK-7028 features two speed settings for versatile chopping and grinding.

1. **Prepare Ingredients:** Cut larger ingredients into smaller, manageable pieces (approximately 2-3 cm) before placing them in the bowl. Do not overfill the bowl; ensure ingredients are below the 'Meat limit' line if present, or approximately two-thirds full.

2. **Select Speed:** The motor unit has two buttons for speed control. Press the desired speed button (Speed 1 for softer ingredients or coarse chopping, Speed 2 for harder ingredients or fine grinding).
3. **Pulse Function:** For optimal results and to prevent over-processing, use short pulses rather than continuous operation. Press and release the speed button repeatedly until the desired consistency is achieved.
4. **Processing Time:** Processing times vary depending on the ingredient and desired consistency. Monitor the contents through the transparent lid.
5. **Finish:** Once processing is complete, release the speed button, unplug the appliance, and wait for the blades to stop completely before removing the motor unit and lid.



Image 5.1: Examples of food items that can be processed with the Sokany SK-7028.

Operational Overview Video

Your browser does not support the video tag.

Video 5.1: This video demonstrates the assembly and key features of the Sokany SK-7028, including its 4-liter bowl capacity, two adjustable speed settings, and powerful 800-watt motor. It shows the process of placing the motor unit onto the bowl and highlights the speed controls.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- 1. Unplug:** Always unplug the appliance from the power outlet before cleaning.
- 2. Disassemble:** Remove the motor unit, then the lid, and carefully take out the chopping blades.
- 3. Wash Components:** Wash the stainless steel bowl, lid, and chopping blades in warm, soapy water. Use a brush for the blades to ensure thorough cleaning and handle them with extreme care due to their sharpness. These parts are generally dishwasher safe, but hand washing is recommended for longevity.
- 4. Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or rinse it under running water.
- 5. Dry:** Ensure all parts are completely dry before reassembling or storing.
- 6. Storage:** Store the assembled or disassembled appliance in a dry, safe place away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; Lid not properly secured; Motor unit not correctly placed.	Check power connection; Ensure lid is locked; Re-position motor unit.
Blades not rotating	Too much food in the bowl; Food pieces are too large; Blades are jammed.	Reduce food quantity; Cut food into smaller pieces; Disassemble and clear any obstructions.
Unusual noise or odor	Overloading; Foreign object; Motor overheating.	Unplug immediately. Reduce load. Check for foreign objects. Allow motor to cool down. If problem persists, contact customer support.
Food not chopped evenly	Too much food; Insufficient pulsing; Ingredients stuck to sides.	Process in smaller batches; Use pulse function; Stop and scrape down sides of the bowl.

8. SPECIFICATIONS

Feature	Detail
Brand	SOKANY
Model Number	SK-7028
Color	Silver
Power / Wattage	800 watts

Feature	Detail
Voltage	220 Volts
Material	Stainless Steel
Number of Speeds	2
Bowl Capacity	4 Liters
Product Dimensions	30 x 10 x 20 cm
Item Weight	3 Kilograms
Special Features	Safety Lock
Product Care Instructions	Safe (refer to cleaning section)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Sokany customer service through their official channels. Keep your purchase receipt as proof of purchase.

© 2023 SOKANY. All rights reserved.