

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sokany](#) /

› [Sokany SK-7025 Multi-functional Food Chopper User Manual](#)

## Sokany SK-7025

# Sokany SK-7025 Multi-functional Food Chopper User Manual

Model: SK-7025 | Brand: Sokany

## INTRODUCTION

---

Thank you for purchasing the Sokany SK-7025 Multi-functional Food Chopper. This appliance is designed to simplify your food preparation tasks, offering efficient chopping and grinding for various ingredients. Featuring an 800W motor, a durable 2-liter glass bowl, and four stainless steel blades with a 4D design, it ensures thorough and consistent results. Please read this manual carefully before first use to ensure safe and optimal operation.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Blades are **extremely sharp**. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the lid is securely locked in place before operating the chopper.
- Do not attempt to process extremely hard foods that may damage the blades or motor.
- This appliance is intended for household use only.

## PACKAGE CONTENTS

---

Please check the package contents upon unboxing. Ensure all items are present and in good condition.

- Motor Unit (Power Head)
- 2-Liter Glass Bowl
- Lid
- Four Stainless Steel Blades (Upper and Lower Blade Assemblies)
- User Manual

## PRODUCT DIAGRAM

---

Familiarize yourself with the components of your Sokany SK-7025 Food Chopper:



**Figure 1:** Assembled Sokany SK-7025 Food Chopper. The image shows the motor unit, lid, glass bowl, and blades (visible through the glass bowl) with various ingredients.

1. Motor Unit (Power Head)
2. Lid

3. Upper Blade Assembly
4. Lower Blade Assembly
5. 2-Liter Glass Bowl
6. Control Buttons (Speed 1 & Speed 2)

## SETUP

---

Before first use, wash all parts except the motor unit in warm, soapy water. Rinse thoroughly and dry. The motor unit can be wiped with a damp cloth.

1. Place the 2-liter glass bowl on a stable, flat surface.
2. Carefully place the lower blade assembly onto the central shaft inside the glass bowl. Ensure it sits correctly.
3. If using both blade sets, place the upper blade assembly onto the central shaft above the lower blades.
4. Add your ingredients to the glass bowl. Do not overfill.
5. Place the lid onto the glass bowl, ensuring it is properly aligned and seated.
6. Position the motor unit on top of the lid, aligning the motor shaft with the blade assembly. Ensure it locks securely into place.

## OPERATING INSTRUCTIONS

---

Follow these steps for safe and effective operation:

1. Ensure the chopper is correctly assembled and the lid and motor unit are securely in place.
2. Plug the power cord into a suitable electrical outlet.
3. Press and hold the desired speed button (Speed 1 or Speed 2) on the motor unit to start chopping.
  - **Speed 1:** For softer ingredients or coarser chopping (e.g., vegetables, herbs).
  - **Speed 2:** For harder ingredients or finer grinding (e.g., meat, nuts).
4. Process ingredients in short pulses for better control over consistency. Do not operate continuously for more than 30 seconds to prevent overheating. Allow a short break between pulses.
5. Once the desired consistency is achieved, release the button and unplug the appliance from the power outlet.
6. Carefully remove the motor unit, then the lid.
7. Remove the blade assemblies by holding the plastic shaft, then carefully empty the processed food from the glass bowl.

**Note:** The stainless steel connection between the blade and motor unit is designed for durability and secure operation.

## CLEANING AND MAINTENANCE

---

Proper cleaning ensures the longevity and hygiene of your food chopper.

1. Always unplug the appliance before cleaning.
2. Disassemble the motor unit, lid, blade assemblies, and glass bowl.
3. Wash the glass bowl, lid, and blade assemblies in warm, soapy water. Use a brush for the blades to ensure thorough cleaning and avoid direct contact with the sharp edges.
4. Rinse all washed parts under running water.
5. Dry all parts thoroughly before reassembling or storing.
6. Wipe the motor unit with a damp cloth. **Never immerse the motor unit in water or any other liquid.**
7. Store the chopper in a dry place, out of reach of children.

## TROUBLESHOOTING

---

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; motor unit not correctly assembled; safety lock not engaged.	Ensure the power cord is securely plugged in. Reassemble the motor unit and lid, ensuring they are properly locked.
Ingredients are not chopped evenly.	Overfilling the bowl; ingredients are too large; insufficient processing time.	Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Process in short pulses for better control.
Motor unit overheats or stops.	Continuous operation for too long; processing overly hard ingredients.	Do not operate continuously for more than 30 seconds. Allow the appliance to cool down for several minutes before resuming use. Avoid processing extremely hard foods.
Unusual noise during operation.	Improper assembly of blades or motor unit; foreign object in the bowl.	Unplug the appliance and check assembly. Ensure no foreign objects are present in the bowl before operating.

## SPECIFICATIONS

---

<b>Brand</b>	Sokany
<b>Model Number</b>	SK-7025
<b>Color</b>	Black
<b>Capacity</b>	2 Liters
<b>Power / Wattage</b>	800 Watts
<b>Material</b>	Plastic, Glass, Stainless Steel
<b>Special Features</b>	Safety Lock, Shock Resistant
<b>Item Weight</b>	3 Kilograms
<b>Recommended Uses</b>	Grinding meat, chopping, vegetables, herbs
<b>Specific Uses</b>	Chopping, grinding
<b>Shipping Dimensions</b>	36.2 x 21.6 x 16.9 cm

## WARRANTY AND SUPPORT

---

This Sokany SK-7025 Multi-functional Food Chopper comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or warranty claims, please contact your retailer or the authorized Sokany service center in your region. Keep your purchase receipt as proof of purchase for warranty purposes.

For further assistance, you may visit the official Sokany website or contact their customer service department. Contact details are typically provided in the warranty documentation or on the product packaging.

