

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Sophia & William](#) /
- › [Sophia & William 20x40 ft Party Tent Instruction Manual](#)

## Sophia & William ACE-H-GA107BW-6

# Sophia & William 20x40 ft Party Tent Instruction Manual

Model: ACE-H-GA107BW-6

## 1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Sophia & William 20x40 ft Party Tent. This heavy-duty outdoor canopy is designed to provide a spacious and protected area for various events, including parties, weddings, and backyard gatherings. Crafted with durable materials, it offers premium UV protection, water resistance, and enhanced stability against wind. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your tent.



An overview of the Sophia & William 20x40 ft Party Tent, featuring a white canopy with blue trim and arched window sidewalls, suitable for various outdoor events.

## 2. SAFETY INFORMATION

Please read and adhere to all safety warnings and instructions to prevent injury and ensure the longevity of your tent.

- **Wear gloves** during installation to protect your hands from potential injury.
- Always **anchor the party tent securely** using all provided accessories, including sandbags, ground nails,

and wind ropes. Failure to do so may result in structural instability and potential damage or injury.

- Do not use the tent in **extreme weather conditions**, such as winds exceeding 40 mph, heavy snowfall, or severe thunderstorms. Disassemble the tent if such conditions are anticipated.
- Ensure the tent is assembled on a **level surface** to maintain stability.
- Keep all flame and heat sources away from the tent fabric.

### 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. The package typically includes:

- 1x Canopy Top (420D silver-coated UV50+ fabric)
- 1x Heavy-Duty Frame (Alloy Steel, commercial-grade full truss)
- 12x Galvanized Ground Nails
- 4x Sandbags (20 lbs each)
- 4x Reflective Wind Ropes
- 1x Instruction Manual
- Pre-attached Wheeled Bag (600D Oxford fabric)

*Note: The tent is shipped in multiple packages (typically 7). Ensure all packages have arrived before starting assembly.*



A visual representation of the tent's dimensions, indicating its 20 ft width, 40 ft length, and 10 ft peak height, along with the number of packages and storage bags included.

## 4. SETUP INSTRUCTIONS

Assembly of the Sophia & William Party Tent requires at least two to three people for efficient and safe setup due to the size and weight of the components. Follow these steps for assembly:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Lay out the frame components, canopy, and accessories in an organized manner.
- 2. Assemble the Frame:** Connect the alloy steel poles according to the diagrams in the separate assembly guide (included in the package). Ensure all connections are secure. The frame features a commercial-grade full truss design for enhanced stability.
- 3. Attach the Canopy Top:** Drape the canopy top over the assembled frame. Ensure it is centered and aligned correctly.
- 4. Secure the Canopy:** Use the high-quality elastic ball straps to firmly attach the canopy to the frame.
- 5. Install Sidewalls (Optional):** If using sidewalls, attach them to the frame using the provided fasteners. The tent offers customizable options for setup:

- **Basic Setup:** Open canopy for maximum airflow and unobstructed views.
  - **With Side Panels:** Provides a balance of privacy, natural light, and weather protection.
  - **With Doors & Side Panels:** Ideal for shielding against wind or creating a private area.
6. **Adjust Height:** The tent features a 3-level height adjustment (7ft/8.5ft/10ft). Adjust the leg poles to your desired height.
7. **Anchor the Tent:** This is a critical step for stability.
- Place the thick PVC foot pads on the ground to prevent sinking, especially on soft surfaces.
  - Drive the 12 galvanized ground nails through the base plates into the ground.
  - Attach the 4 reflective wind ropes to the designated points on the frame and secure them to the ground using additional stakes or anchors.
  - Fill the 4 sandbags (20 lbs each) and place them at the base of the tent legs for additional weight and stability.

*Party Tent*

**All-Weather Party Tent**

One tent handles rain and shine  
parties never stop

Sophia & William

 
Water Resistant

Fade Resistance

Wind Resistant

Sun Protection

This graphic details the customizable options for the tent, including an open canopy for maximum airflow, adding side panels for privacy and weather protection, and incorporating doors for a more enclosed space.

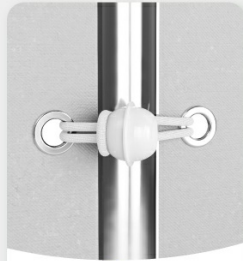

①

#### Fix Elastic Balls

Used to secure shelves



②

#### Galvanized Tee Pipe

Easily connect and disassemble the steel tubes



 
③

#### Wind Rope

Make the shed more stable

## Windproof And More Stable

Cover fits the frame tightly

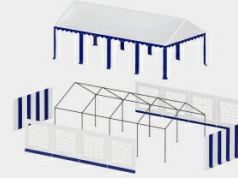

This image illustrates key components for enhancing the tent's stability and wind resistance, including elastic ball straps for securing the cover, galvanized tee pipes for strong frame connections, and the use of wind ropes for additional anchoring.

## 5. OPERATING INSTRUCTIONS (USAGE)

The Sophia & William Party Tent is designed for various outdoor applications:

- **Event Shelter:** Ideal for backyard events, weddings, parties, and vendor booths. The spacious interior can comfortably accommodate guests, tables, and chairs.
- **Weather Protection:** The 420D silver-coated UV50+ fabric blocks 99.99% of harmful UV rays, providing superior sun protection. The waterproof design, combined with upgraded spring-loaded brackets, helps prevent water pooling.
- **Privacy and Enclosure:** Utilize the sidewalls and double-zip doors with magic stickers for secure closure, offering privacy and protection from elements like wind and light rain.



This image displays the spacious interior of the tent, set up with tables and chairs, demonstrating its capacity for hosting events.

Sophia & William

# Elegant Event Shelter

Embrace the essence  
of luxury living



Wedding  
Ceremony



Garden party



Seaside leisure



Barbecue



Party outdoor  
activities

 
The party tent is shown in an outdoor setting, highlighting its suitability for various landscapes and events.




The tent is shown at night, demonstrating its aesthetic appeal and functionality for evening events when lit from within.

## Multiple Uses For Every Occasion

A great companion for outdoor leisure activities

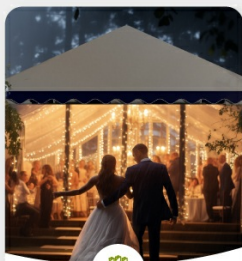

Wedding Ceremony

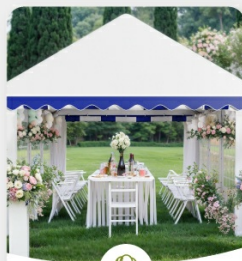 

Outdoor party



Parking



Storage

This graphic demonstrates the versatility of the tent, showcasing its potential use for various occasions such as wedding ceremonies, outdoor parties, temporary parking, and storage.

## 6. MAINTENANCE

Proper maintenance will extend the life of your Sophia & William Party Tent:

- **Cleaning:** Clean the canopy and sidewalls with mild soap and water. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric's protective coatings.
- **Drying:** Ensure all fabric components are completely dry before storing to prevent mold and mildew growth.
- **Storage:** Store the tent in a cool, dry place, preferably in its pre-attached wheeled bag, away from direct sunlight and extreme temperatures.
- **Frame Inspection:** Periodically inspect the alloy steel frame for any signs of rust, bending, or damage. Replace any compromised parts immediately.
- **Anchoring Check:** Before each use, verify that all ground nails, sandbags, and wind ropes are securely in place.



An informational graphic illustrating the tent's resilience against various weather conditions, including rain, wind, and sun, ensuring durability and comfort.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter:

- **Tent Instability:** If the tent feels unstable, ensure all frame connections are tight, ground nails are fully inserted, sandbags are filled and properly placed, and wind ropes are taut and securely anchored. Check for uneven ground.
- **Water Pooling on Canopy:** Verify that the frame is fully extended and the canopy is stretched tightly. The upgraded spring-loaded brackets are designed to prevent pooling, but extreme conditions or improper setup can still lead to it. Adjust height if necessary.
- **Difficulty with Assembly:** Ensure you have at least two to three people assisting with assembly. Refer to the detailed assembly guide for step-by-step visual instructions. Do not force connections; if parts do not fit, re-check the orientation.
- **Damaged Components:** If any part of the frame or fabric is damaged, do not attempt to use the tent. Contact customer service for replacement parts.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Sophia & William
Model Number	ACE-H-GA107BW-6
Product Dimensions	480"L x 240"W x 120"H (40 ft L x 20 ft W x 10 ft H)
Material	420D Silver-Coated UV50+ Fabric (Canopy), Alloy Steel (Frame)
Color	Blue White
Ultraviolet Light Protection	Yes (UV50+)
Water Resistance Level	Water Resistant
Frame Material	Alloy Steel
Pole Material Type	Alloy Steel
Number of Guylines	4 (Reflective Wind Ropes)
Recommended Uses	Party, Camping, Outdoor Activities
Assembly Required	Yes
UPC	665610907721



This image focuses on the quality components of the tent, such as the galvanized steel frame, waterproof PE fabric, and secure fastening mechanisms, emphasizing its strong and stable structure.

## 9. WARRANTY AND SUPPORT

---

Sophia & William offers lifetime support for this product, including 24/7 customer service. If you have any questions, require assistance with assembly, or need replacement parts, please contact our customer support team.

For support, please refer to the contact information provided with your purchase documentation or visit the official Sophia & William website.

