

 
BOSEN 20112BC

BOSEN 3500 PSI Electric Pressure Washer - User Manual

Model: 20112BC | Brand: BOSEN

1. INTRODUCTION

Thank you for choosing the BOSEN 3500 PSI Electric Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before first use and keep it for future reference.

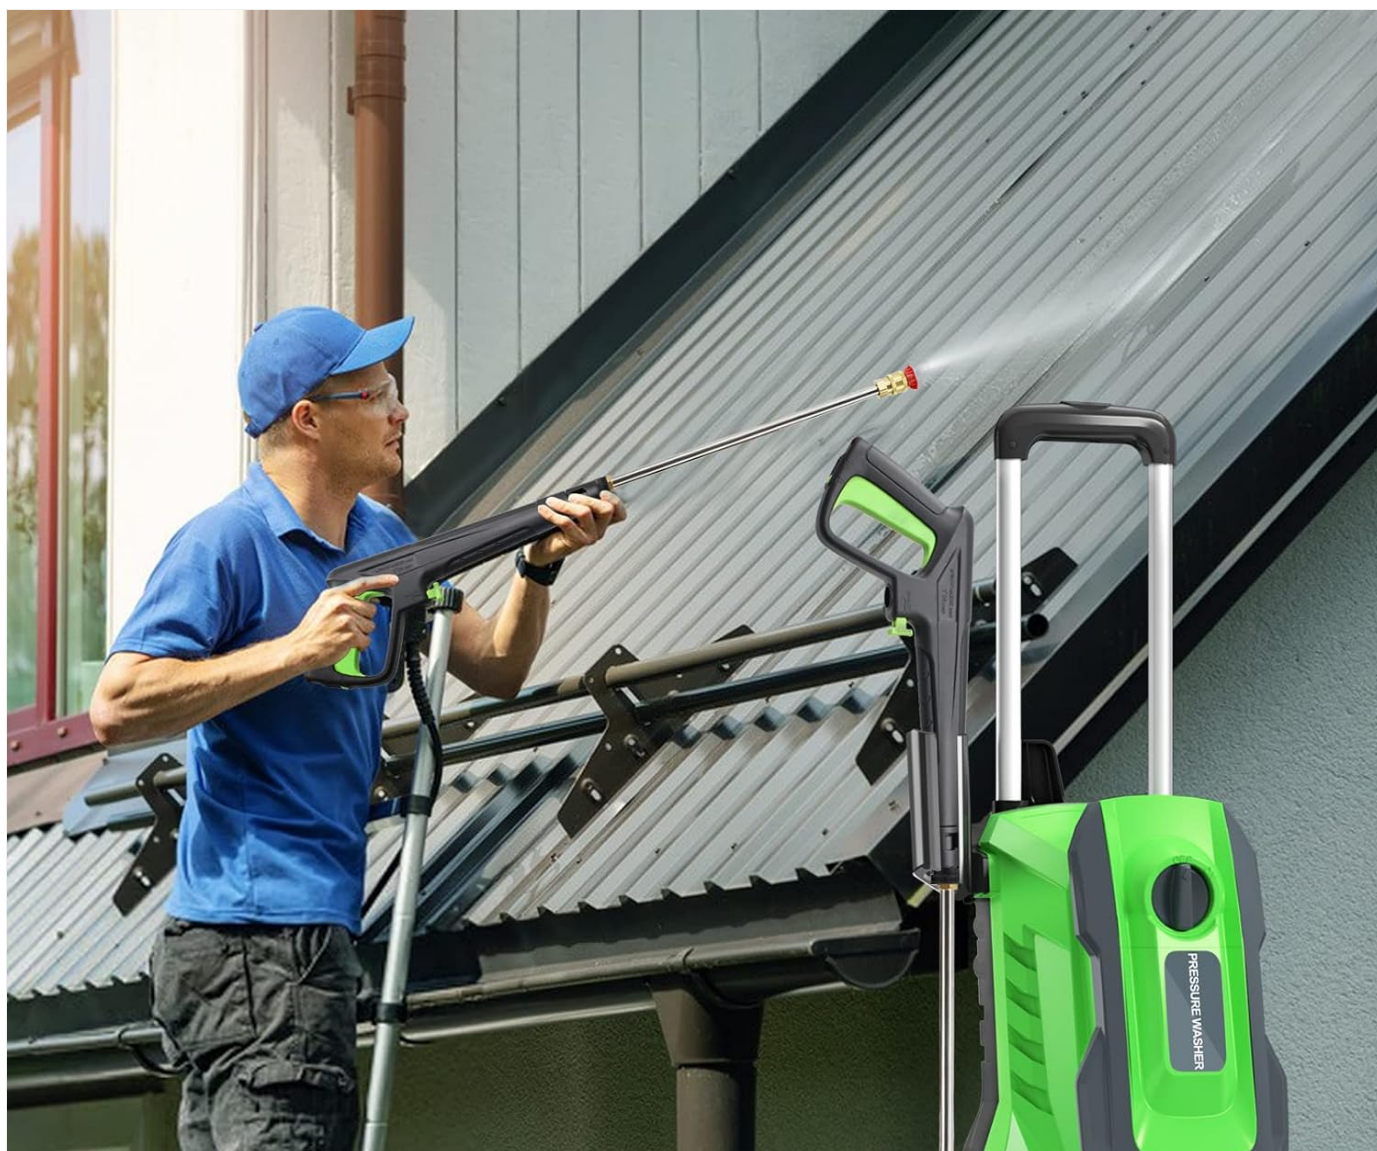

3500PSI



2.6GPM



TSS



The BOSEN Electric Pressure Washer is designed for various cleaning tasks around the home, including driveways, patios, and vehicles.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, or serious injury. Ensure the power cord and water connections are secure before operation. Do not direct the spray at people, animals, or electrical devices. Wear appropriate safety gear, including eye protection.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- BOSEN Electric Pressure Washer Unit
- High-Pressure Hose (25 ft)
- Spray Gun with Lance
- 4 Interchangeable Nozzles (0°, 15°, 25°, 40°)

- Foam Cannon/Detergent Bottle
- Power Cord (20 ft)
- User Manual

QUICK INSTALLATION



All components are securely packaged for delivery.

4. SETUP

Follow these steps to assemble and prepare your pressure washer for use:

1. **Attach the Handle:** Slide the telescopic handle into the designated slots on the main unit until it clicks into place.
2. **Connect the High-Pressure Hose:** Securely attach one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun.
3. **Connect Water Supply:** Attach a standard garden hose (not included) to the water inlet on the pressure washer. Ensure the connection is tight to prevent leaks.
4. **Insert Nozzle:** Select the desired nozzle (see Operating Instructions for details) and insert it into the quick-connect collar on the spray gun lance. Pull back the collar, insert the nozzle, and release the collar to lock it.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

QUICK INSTALLATION



Visual guide for quick installation steps.

Your browser does not support the video tag.

Video: Demonstration of the BOSEN 3500 PSI Electric Pressure Washer in action, showcasing its power and ease of use for various cleaning tasks.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Off


To turn on the pressure washer, ensure it is connected to a water source and power outlet, then flip the main ON/OFF switch. The unit features a Total Stop System (TSS) which automatically shuts off the pump when the trigger is not engaged, saving energy and prolonging pump life. The pump will restart when the trigger is pulled again.

5.2 Using Interchangeable Nozzles


The pressure washer comes with 4 color-coded quick-connect nozzles, each designed for specific cleaning tasks:

- **0° Red Nozzle:** Delivers a concentrated, high-pressure stream for tough, stubborn stains and crevices. Use with extreme caution.
- **15° Yellow Nozzle:** Provides a powerful, narrow spray for intense cleaning of hard surfaces like concrete and brick.
- **25° Green Nozzle:** Offers a medium-pressure, wider spray for general cleaning of painted surfaces, fences, and siding.
- **40° White Nozzle:** Produces a wide, gentle spray for delicate surfaces, windows, and light washing.

FIVE STYLES AT YOUR DISPOSAL

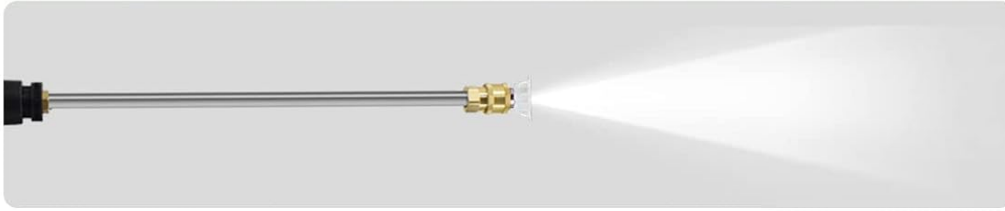


40°
A small icon representing the 40-degree spray pattern, showing a wide fan of dots.

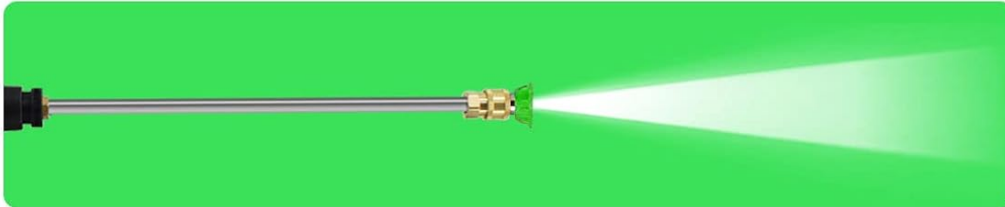

25°
A small icon representing the 25-degree spray pattern, showing a medium fan of dots.



15°
A small icon representing the 15-degree spray pattern, showing a narrow fan of dots.

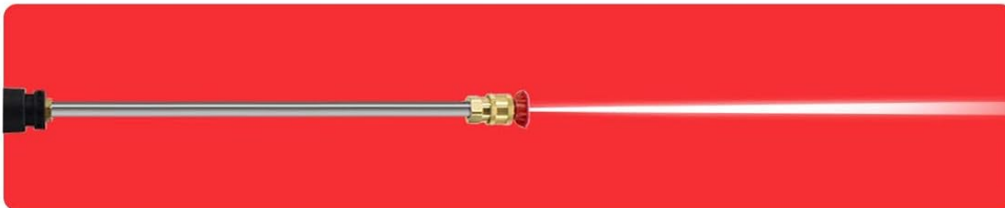

0°
A small icon representing the 0-degree spray pattern, showing a single vertical line of dots.



SOAP

Different nozzle types provide various spray patterns for diverse cleaning needs.

5.3 Using the Foam Cannon

For enhanced cleaning, especially on vehicles, attach the foam cannon. Fill the detergent bottle with appropriate pressure washer detergent, then connect it to the spray gun. The foam cannon mixes detergent with water to create a thick foam, which helps loosen dirt and grime before rinsing.


3 Step to Wash the Car



step1: **Wet**



step2: **Spray Foam**

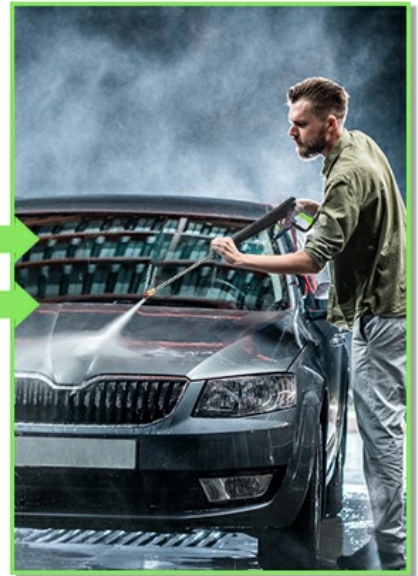

step3: **Cleaning**

Three steps to effectively wash a car using the pressure washer and foam cannon.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **After Each Use:** Flush the system with clean water to remove any detergent residue.
- **Nozzle Cleaning:** Clean nozzles regularly to prevent blockages. Use the included nozzle cleaning tool if necessary.
- **Storage:** Store the pressure washer in a dry, frost-free area. Disconnect all hoses and drain any remaining water from the pump and hoses.
- **Filter Maintenance:** Check the water inlet filter for debris and clean it as needed.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor does not start	No power supply; ON/OFF switch is OFF; Thermal overload activated	Check power connection; Turn ON switch; Allow motor to cool down
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump	Ensure full water flow; Clean nozzle; Purge air by running with trigger open
Water leaks	Loose connections; Damaged O-rings	Tighten connections; Replace O-rings

8. SPECIFICATIONS

- **Brand:** BOSEN
- **Model Number:** 20112BC
- **Maximum Pressure:** 3500 PSI
- **Maximum Flow Rate:** 2.6 GPM
- **Hose Length:** 25 Feet
- **Power Cord Length:** 20 Feet
- **Product Dimensions:** 1"L x 1"W x 1"H (Note: Actual dimensions may vary, refer to product packaging for precise measurements)
- **Safety Certification:** CSA
- **Features:** Total Stop System (TSS), 4 Interchangeable Nozzles, Foam Cannon, Hose Reel, Telescopic Handle



The telescopic handle allows for easy transport and compact storage.

9. WARRANTY AND SUPPORT

This BOSEN Electric Pressure Washer comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any questions regarding your product, please contact BOSEN customer service through the contact information provided on your warranty card or the official BOSEN website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question