

[Manuals.plus](#) /

› [Newbealer](#) /

› Newbealer Steam Mop Instruction Manual

Newbealer NB603C

Newbealer Steam Mop Instruction Manual

Brand: Newbealer

Model: NB603C

INTRODUCTION

The Newbealer Steam Mop is a versatile cleaning appliance designed for effective and chemical-free cleaning of various sealed hard floor surfaces, including hardwood, tile, stone, laminate, and marble. It also features a carpet glider attachment for refreshing carpets. With its powerful 1200W heating element, it achieves a maximum temperature of 248°F (120°C) and is ready to use in just 15 seconds. The 500ml water tank provides 20-35 minutes of continuous steam, and its lightweight design (3.75 lbs) combined with a swivel-steer mop head ensures easy maneuverability and access to hard-to-reach areas. The mop offers 3 adjustable steam modes to suit different cleaning needs.

WHAT'S IN THE BOX

Your Newbealer Steam Mop package includes all the necessary components for immediate use:

- 1 Main Body
- 1 Water Tank
- 1 Alum. Pole
- 1 Handle Grip
- 1 Filling Flask
- 1 Carpet Glider
- 2 Mop Pads
- 1 Screw Driver and Screw for Tank



Image: All components included in the Newbealer Steam Mop package.

SETUP

1. **Assemble the Steam Mop:** Connect the main body to the water tank, then attach the aluminum pole and handle grip. Secure all connections firmly. A screwdriver and screw are provided for the water tank connection.
2. **Attach Mop Pad:** Place one of the washable microfiber mop pads onto the bottom of the mop head. The pad attaches securely with hook-and-loop fasteners. Ensure it is properly aligned.
3. **Fill Water Tank:** Open the water tank lid and use the provided filling flask to pour distilled water into the tank. Do not overfill. The maximum water capacity is 500ml. **Warning:** Never put descaling, alcoholic, or detergent products into the steam mop, as this may damage it or make it unsafe for use.
4. **Optional: Attach Carpet Glider:** For carpet refreshing, place the carpet glider on the carpet with the smooth side down. Then, place the mop head (with the cleaning pad attached) on top of the carpet glider, ensuring it clicks into

place.



Image: The Newbealer Steam Mop ready for use, showing its sleek design and attached mop pad.

Setup Video Guide

Video: This video demonstrates the assembly process of the Newbealer Steam Mop, including attaching the pole, handle, and water tank, as well as securing the mop pad.

Video: Learn how to correctly attach the mop pad and carpet glider for optimal cleaning performance on different surfaces.

OPERATION

1. **Connect Power:** Plug the steam mop into a standard electrical outlet. Ensure the power supply voltage matches the nominal voltage calibrated on the steam mop.
2. **Power On:** Locate the power switch at the backside of the main body. Press the power switch firmly to boot up the unit. You will hear a distinct click sound confirming it is securely in place.
3. **Heat-up:** The device will begin to heat up. The three lights below the steam control button will begin a cycling glow. After approximately 15 seconds, these lights will blink to indicate standby mode.
4. **Start Steaming & Select Steam Level:** Press the steam button on the front to start working. For the first use, the medium steam level is selected by default. Short press the steam button briefly to switch between the three steam levels:
 - **Minimum Level (One light):** Low steam, ideal for delicate floors.
 - **Middle Level (Two lights):** Medium steam, suitable for regular cleaning.
 - **Maximum Level (Three lights):** High steam, for deep cleaning and heavy traffic areas.
5. **Begin Cleaning:** Slowly pass the unit over the floor surface. The swivel-steer mop head allows for easy cleaning around furniture and in hard-to-reach areas.
6. **Stop Steam Flow:** To stop the flow of steam, hold the steam button for two to three seconds.

Powerful

248°F(120°C) High-Temperature Cleaning

15s

Fast Heat-Up




Maneuverable

Effortlessly clean hard-to-reach corners with swivel steering

Image: Demonstrating the steam mop's powerful cleaning capability and quick heat-up time.

3-Level Steam Button

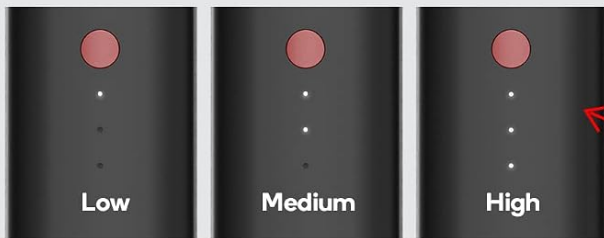

Power On/Off



Image: Detailed view of the steam mop's controls and water filling port.

Operation Video Guides

Video: This video illustrates the streamlined cleaning process with the button-enabled steam mop, showing how to power on and select steam levels.

Video: Witness the efficient deep cleaning capabilities of the Newbealer Steam Mop on various floor types.

Video: A short demonstration showing the powerful steam mop in action, effectively cleaning surfaces.

Video: Experience the magic of steam cleaning as the mop effortlessly cleans various surfaces.

MAINTENANCE

- **After Cleaning:** After finishing cleaning, you can short press the power button on the backside to power off the unit

or unplug the steam mop from the outlet.

- **Empty Water Tank:** It is recommended to empty any remaining water from the tank after each use to prevent mineral buildup and ensure longevity of the device.
- **Clean Mop Pads:** The microfiber mop pads are washable. Remove them from the mop head and wash them according to their care instructions. Allow them to air dry completely before storing or reusing.
- **Storage:** The Newbealer Steam Mop features a self-standing buckle, allowing it to stand on its own for easy storage in any corner of your home. The 16-foot power cord comes with a handy storage hook for neat organization. Ensure the unit is cool before storing.



Image: The steam mop's convenient self-standing design and integrated cord storage.

Problem	Possible Cause	Solution
Unit does not turn on or heat up.	Not properly plugged in; Power switch not fully engaged; Internal malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Press the power switch firmly until it clicks. If the issue persists, contact customer support.
No steam or insufficient steam.	Water tank empty; Unit not heated up; Steam button not pressed or held correctly; Mineral buildup.	Refill the water tank with distilled water. Allow 15 seconds for the unit to heat up (lights will blink). Press the steam button to activate steam. If mineral buildup is suspected, follow descaling instructions (refer to full user guide PDF).
Leaves too much water on the floor.	Mop pad is oversaturated or dirty; Incorrect steam level for surface.	Replace with a clean, dry mop pad. Use a lower steam setting for delicate or less soiled floors. Ensure you are moving the mop slowly enough for the steam to evaporate.
Unit does not have suction.	This product is a steam mop, not a vacuum cleaner.	The Newbealer Steam Mop is designed for steam cleaning and does not feature a suction function. For debris removal, a vacuum cleaner should be used prior to steam mopping.

If you encounter any issues not listed here or if troubleshooting steps do not resolve the problem, please refer to the full User Guide PDF or contact Newbealer customer support through Amazon.

SPECIFICATIONS

Feature	Detail
Brand	Newbealer
Model Name	NB603C
Wattage	1200 watts
Maximum Temperature	248 Degrees Fahrenheit (120°C)
Heat Time	15 seconds
Tank Volume	500 Milliliters
Continuous Steam Time	20-35 minutes (approx.)
Item Weight	3.75 pounds
Product Dimensions	13"D x 5.7"W x 17"H
Power Cord Length	16 feet

Feature	Detail
Surface Recommendation	Carpet, Floor, Tiles, Hardwood, Stone, Laminate, Marble
Special Features	3 Adjustable Steam Modes, Swivel-steer mop head, Self-standing buckle, Carpet Glider, Child & Pet Safe (chemical-free)

WARRANTY & SUPPORT

The Newbealer Steam Mop typically comes with a 1-year warranty from the date of purchase. For any issues, questions, or support needs, please contact Newbealer customer service directly through the Amazon platform. You may also refer to the comprehensive User Guide PDF for more detailed information and instructions.

User Guide PDF: [Download User Guide \(PDF\)](#)

© 2024 Newbealer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BWN7YL1B>

More documents and user manuals: <https://manuals.plus/>