

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [Allimity YKR-P/001E Replacement Remote Control User Manual for AUX/York/Innovair Mini Air Conditioners](#)

## ALLIMITY YKR-P001E

# Allimity YKR-P/001E Replacement Remote Control User Manual

For AUX, York, and Innovair Mini Split Air Conditioners

## INTRODUCTION

This manual provides instructions for the Allimity YKR-P/001E replacement remote control, designed for use with various AUX, York, and Innovair mini split air conditioner models, including those originally using the YKR-P/002E remote. This remote control offers essential functions for operating your air conditioning unit.

## PACKAGE CONTENTS

- 1 x Allimity YKR-P/001E Replacement Remote Control

*Note: AAA batteries are not included and must be purchased separately.*

## SETUP: BATTERY INSTALLATION

The Allimity YKR-P/001E remote control requires two (2) AAA batteries for operation. No programming or pairing is necessary; simply install the batteries to begin use.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off in the direction indicated by the arrow.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Figure 1:** Rear view of the remote control with the battery cover removed, illustrating the battery insertion process. Two AAA batteries are required.

After battery installation, the remote control is ready for immediate use with compatible air conditioner units.

## OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Allimity YKR-P/001E remote control. Refer to the image below for button layout.



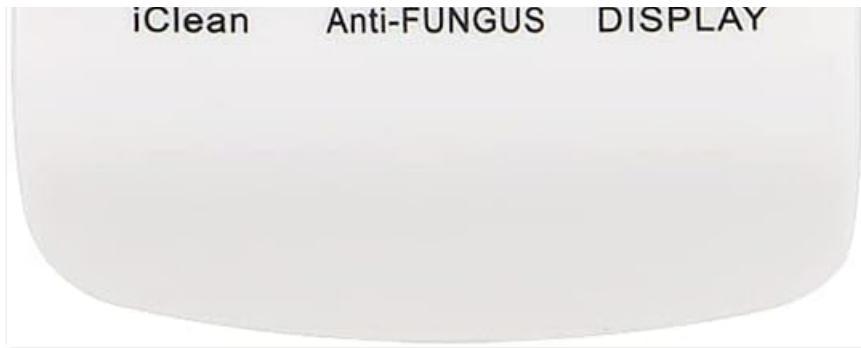


Figure 2: Front view of the Allimity YKR-P/001E remote control, displaying the LCD screen and various function buttons.

### Button Functions:

- **Power Button (Blue, Center Top):** Turns the air conditioner unit ON or OFF.
- **Temperature Up/Down Buttons (Below Power):** Adjusts the desired temperature setting.
- **MODE Button (Left of Power):** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **SPEED Button (Right of Power):** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **SWING ↔ Button (Left Middle):** Controls the horizontal louver swing direction.
- **SWING ↑↓ Button (Right Middle):** Controls the vertical louver swing direction.
- **TURBO Button (Left Bottom Row 1):** Activates rapid cooling or heating for quick temperature changes.
- **TIMER Button (Middle Bottom Row 1):** Sets the timer for automatic ON/OFF operation.
- **iFavor Button (Right Bottom Row 1):** Activates a pre-set preferred operating mode.
- **iFeel Button (Left Bottom Row 2):** Activates the "I Feel" function, which senses the temperature at the remote's location for more precise control.
- **HEALTH Button (Middle Bottom Row 2):** Activates health-related functions, such as air purification or ionizer (if available on the AC unit).
- **SLEEP Button (Right Bottom Row 2):** Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep.
- **iClean Button (Left Bottom Row 3):** Initiates a self-cleaning function for the indoor unit (if supported by the AC unit).
- **Anti-FUNGUS Button (Middle Bottom Row 3):** Activates an anti-fungus or mold prevention function.
- **DISPLAY Button (Right Bottom Row 3):** Toggles the display on the indoor unit or remote control.

For specific details on how each function interacts with your air conditioner, please refer to your air conditioner unit's original instruction manual.

## MAINTENANCE

---

### Cleaning the Remote Control:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface.

### Battery Replacement:

- Replace batteries when the remote's display becomes dim or the remote becomes unresponsive.
- Always replace both AAA batteries at the same time with new ones.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

- Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and AC unit. Remote out of range.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit.
Display is dim or blank	Low battery power.	Replace batteries with new AAA batteries.
AC unit does not respond to specific functions	Function not supported by your specific AC unit model.	Consult your air conditioner's original manual to confirm supported features.

## SPECIFICATIONS

- **Model:** YKR-P001E
- **Compatible with:** AUX, York, Innovair Mini Split Air Conditioners (replaces YKR-P/002E)
- **Power Supply:** 2 x AAA Batteries (not included)
- **Dimensions:** 5.5 x 1.5 x 0.5 inches (approximately)
- **Item Weight:** 2 ounces (approximately, without batteries)
- **Special Feature:** No Programming Required
- **Color:** White

## WARRANTY AND SUPPORT

This Allimity remote control comes with a **60-day warranty** from the date of purchase. This warranty covers manufacturing defects. For warranty claims or technical support, please contact your retailer or the manufacturer directly.

Please retain your proof of purchase for warranty purposes.