



Manuals.plus /

› Vusddy /

› Vusddy Magnetic Painting Board Instruction Manual

Vusddy 0DX69

Vusddy Magnetic Painting Board Instruction Manual

Model: 0DX69

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Vusddy Magnetic Painting Board. Please read these instructions carefully before use and retain them for future reference.

2. PRODUCT OVERVIEW

The Vusddy Magnetic Painting Board is an erasable drawing tool designed for children, promoting creativity and learning without the mess of traditional art supplies. It features a magnetic surface that allows for drawing in multiple colors and includes magnetic stamps for added fun. The board is constructed from durable ABS material and designed with child safety in mind.



Image 2.1: Vusddy Magnetic Painting Board shown with removable legs and handheld mode, alongside magnetic stamps and pen.

Key Features:

- **Erasable Design:** Allows for repeated use, reducing waste and providing a mess-free drawing experience.
- **Four-Color Drawing Zones:** The magnetic screen displays drawings in red, yellow, blue, and green, enhancing visual sensitivity.
- **Removable Table Legs:** The board can be used flat or with four detachable legs, converting it into a small drawing table for comfortable use.
- **Child-Safe Construction:** Made from high-quality ABS material with rounded corners to protect children.
- **Anti-Loss Pen:** The drawing pen is attached with a string to prevent misplacement.
- **Magnetic Stamps:** Includes magnetic stamps in various shapes for creative additions to drawings.
- **Portable Design:** Features a top handle for easy carrying.



Image 2.2: Detailed view of the board's features, including handle, rounded edges, solid table angle, durable pen, slide eraser, and four-color zones.

3. SETUP

The Vusddy Magnetic Painting Board offers versatile setup options for different play environments.

3.1 Attaching the Table Legs

1. Locate the four removable table legs included with your board.
2. Turn the magnetic board upside down to expose the leg attachment points.
3. Align each leg with its corresponding slot on the underside of the board.
4. Gently push and twist each leg until it securely clicks into place. Ensure all four legs are firmly attached before use.

3.2 Detaching the Table Legs

1. Turn the magnetic board upside down.
2. Twist each leg counter-clockwise and pull gently to detach it from the board.
3. Store the detached legs in a safe place to prevent loss.



Three Forms Can Be Changed



Image 3.1: The magnetic board can be configured with legs for table-top use, without legs for handheld use, or angled for comfortable drawing.

4. OPERATING INSTRUCTIONS

4.1 Drawing on the Board

1. Ensure the magnetic pen is securely attached to the board via its anti-loss string.
2. Use the magnetic pen to draw directly on the drawing surface. Different sections of the board will display colors (red, yellow, blue, green) as you draw.
3. Utilize the included magnetic stamps by pressing them onto the drawing surface to create shapes.

4.2 Erasing the Drawing

1. To clear the drawing surface, locate the slide eraser lever at the bottom of the board.
2. Slide the eraser lever completely across the board from one side to the other.
3. The drawing surface will be cleared, ready for new creations.



Quick and Complete Erasure



Image 4.1: The slide eraser mechanism allows for quick and complete clearing of the drawing surface.

5. MAINTENANCE

- **Cleaning:** Wipe the board surface and exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the material.
- **Storage:** Store the magnetic board in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the board or subjecting it to strong impacts, which could damage the internal magnetic screen.
- **Pen and Stamps:** Ensure the magnetic pen and stamps are kept with the board to prevent loss.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawing is faint or incomplete.	Magnetic particles may be unevenly distributed or the pen tip is worn.	Ensure the pen tip makes firm contact with the surface. If the issue persists, the magnetic screen may be nearing the end of its lifespan.
Eraser does not clear the screen completely.	Eraser lever not slid fully across, or debris obstructing the mechanism.	Slide the eraser lever completely from one end to the other. Check for any visible obstructions in the eraser track.
Table legs are unstable or detach easily.	Legs not properly secured.	Ensure each leg is twisted and clicked firmly into its slot during setup.

7. SPECIFICATIONS

Brand	Vusddy
Model Number	ODX69
Product Dimensions (Board)	Approx. 19 cm (width) x 12.5 cm (height)
Product Dimensions (with legs)	Approx. 30.5 cm (width) x 22 cm (height)
Item Weight	410 g
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Blue (also available in Pink)
Special Features	Magnetic Surface, Removable Legs, Anti-Loss Pen, Magnetic Stamps
Included Components	Magnetic Drawing Board, Magnetic Pen, Magnetic Stamps, 4 Removable Legs

Doodle the size of the children's board



Image 7.1: Dimensional overview of the Vusddy Magnetic Painting Board and its accessories.

8. WARRANTY INFORMATION

Specific warranty details for the Vusddy Magnetic Painting Board are not provided in the product information. Please refer to your point of purchase or the manufacturer's official website for any applicable warranty terms and conditions.

9. SUPPORT

For further assistance, product inquiries, or to report any issues, please contact the retailer from whom you purchased the Vusddy Magnetic Painting Board. You may also visit the official Vusddy brand website for potential support resources.