



[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Access Steam Easy DT7130 Garment Steamer User Manual

Tefal DT7130

Tefal Access Steam Easy DT7130 Garment Steamer User Manual

Model: DT7130

INTRODUCTION

Thank you for choosing the Tefal Access Steam Easy DT7130 Garment Steamer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

PRODUCT OVERVIEW



Image 1: The Tefal Access Steam Easy DT7130 Garment Steamer, shown with its main unit, a microfibre brush attachment, and a door hook accessory. The steamer is blue and white, designed for handheld use.

The Tefal Access Steam Easy DT7130 is a portable garment steamer designed for quick and efficient wrinkle removal and fabric refreshing. It features a compact design, rapid heating, and a removable water tank for convenience.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steamer away from children and pets.
- Always unplug the appliance when filling with water, emptying, or cleaning, and when not in use.
- Do not direct steam at people or animals. Steam is hot and can cause burns.
- Use the appliance only for its intended purpose as described in this manual.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Filling the Water Tank:**
 - Ensure the steamer is unplugged.
 - Remove the 150 ml removable water tank from the base of the steamer.
 - Fill the tank with clean tap water up to the maximum fill line. Do not overfill.
 - Reinsert the water tank securely into the steamer.
3. **Attaching Accessories:**
 - For delicate fabrics or to remove lint, attach the microfibre brush by aligning it with the steamer head and pressing firmly until it clicks into place.
 - The door hook can be used to hang garments for steaming.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the steamer into a suitable electrical outlet. The indicator light will illuminate, signaling that the appliance is heating up.
2. **Heating Time:** The steamer heats up rapidly in approximately 15 seconds. The indicator light will change or turn off when it is ready for use.
3. **Steaming:**
 - Hold the steamer upright.
 - Press and hold the steam trigger to release a continuous flow of steam (approximately 25 g/min).
 - Gently glide the steamer head over the fabric, moving from top to bottom. For best results, pull the fabric taut with your free hand.
 - The 150 ml water tank provides up to 8 minutes of continuous steaming.
4. **Hygienic Steaming:** The powerful steam helps eliminate up to 99.99% of viruses, bacteria, and germs on clothing and home textiles.
5. **After Use:** Release the steam trigger and unplug the appliance. Allow it to cool down completely before storing.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your steamer.

- **Emptying the Water Tank:** After each use, ensure the steamer is unplugged and cooled. Remove the water tank and empty any remaining water.
- **Cleaning the Steamer Head:** Wipe the steamer head with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Depending on water hardness, mineral deposits may build up. Refer to the full product manual for detailed descaling instructions. Generally, this involves using a descaling solution or a mixture of water and white vinegar.
- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is not tightly wrapped around the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or weak steam.	Water tank is empty or low. Appliance not heated sufficiently. Mineral buildup.	Fill water tank. Allow 15 seconds for heating. Perform descaling procedure.
Water leaking from steamer head.	Overfilled water tank. Steamer not fully heated.	Do not overfill the water tank. Wait for the steamer to fully heat up before use.
Steamer not turning on.	Not plugged in. Power outlet issue.	Ensure the appliance is securely plugged into a working power outlet. Check circuit breaker.

If the problem persists after attempting these solutions, please contact Tefal customer support.

SPECIFICATIONS

- **Model:** DT7130
- **Brand:** Tefal
- **Power:** 1400 Watts
- **Voltage:** 230 Volts (AC)
- **Water Tank Capacity:** 150 Milliliters
- **Continuous Steam Output:** 25 g/min
- **Heating Time:** Approximately 15 seconds
- **Dimensions:** 20.5 x 14.2 x 33 cm
- **Item Weight:** 946 g

WARRANTY AND SUPPORT

Tefal products are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Tefal website. For technical support, spare parts, or service, please contact Tefal customer service in your region.

Online Support: www.tefal.com

