

Tefal FR600D10

Tefal Clear Duo Fryer FR600D10

User Manual

INTRODUCTION

Thank you for choosing the Tefal Clear Duo Fryer, model FR600D10. This appliance is designed to provide efficient and convenient frying with reduced smoke and odors. Please read this manual carefully before using the fryer for the first time to ensure safe and optimal operation. Keep this manual for future reference.



Figure 1: Front view of the Tefal Clear Duo Fryer, highlighting its user-friendly control panel. The panel features a temperature dial on the right, a timer dial on the left, and an indicator light in the center. The appliance has a sleek silver and black design.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of

fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse the cord, plugs, or fryer body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Tefal Clear Duo Fryer FR600D10 is designed for ease of use and efficient frying. Key components include:

- **Main Unit:** Houses the heating element and control panel.
- **Removable Oil Tank:** For holding cooking oil.
- **Frying Basket:** For holding food during frying.
- **Lid with Viewing Window:** Features an anti-fog design for monitoring cooking.
- **Integrated Filter System:** Reduces smoke and odors.
- **Control Panel:** Includes adjustable temperature and timer dials.

SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the removable oil tank, frying basket, lid, aluminum filter, and filter cover in warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.
3. **Assembly:** Place the clean oil tank into the main unit. Insert the frying basket into the oil tank. Ensure the lid is properly seated on the main unit.
4. **Fill with Oil:** Fill the removable oil tank with cooking oil up to the maximum fill line indicated inside the tank. Do not overfill or underfill.
5. **Placement:** Place the fryer on a stable, heat-resistant surface, away from walls and flammable materials. Ensure adequate ventilation.

OPERATING INSTRUCTIONS

Frying Process

1. **Connect Power:** Plug the power cord into a grounded electrical outlet.
2. **Set Temperature:** Turn the temperature dial to your desired cooking temperature (e.g., 170°C for fries). The 'Ready' indicator light will illuminate when the oil reaches the set temperature.
3. **Preheat:** Allow the oil to preheat for approximately 10-15 minutes, or until the 'Ready' light indicates the correct temperature.
4. **Add Food:** Carefully lower the frying basket containing your food into the hot oil. Do not overload the basket. The fryer has a capacity for up to 1.2 kg of chicken nuggets or 650 g of frozen fries.
5. **Set Timer:** Use the timer dial to set the desired cooking time (up to 30 minutes). The fryer will automatically turn off when the timer expires.
6. **Monitor Cooking:** Utilize the extra-large anti-fog viewing window to monitor the cooking progress without lifting the lid.
7. **Remove Food:** Once cooking is complete, carefully lift the frying basket and allow excess oil to drain. Serve immediately.

Key Features in Operation

- **Reduced Smoke and Odors:** The fryer features an innovative active air flow system that significantly reduces smoke production by up to 70% and cooking odors by up to 43%.



Figure 2: Active air flow system for smoke reduction.

FRIRE AVEC MOINS DE FUMÉE



Figure 3: Odor reduction system with air filtration.

- **Anti-Fog Viewing Window:** The extra-large viewing window remains clear throughout the cooking process, allowing you to observe your food without opening the lid.

MOINS D'ODEURS

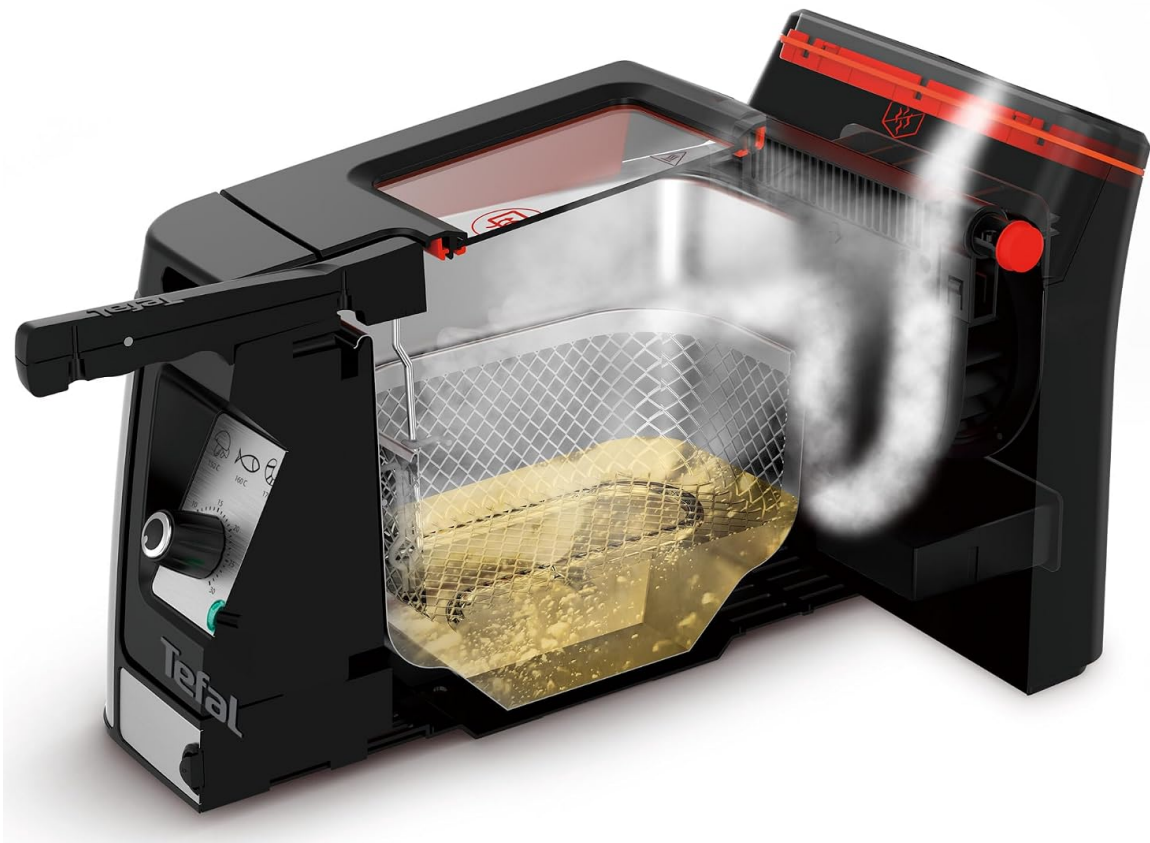


Figure 4: Anti-fog viewing window.

- **Adjustable Temperature and Timer:** Precise temperature control (150°C to 190°C) and a 30-minute timer ensure optimal cooking results for various foods.

FACILE À NETTOYER



Figure 5: Control panel with temperature and timer dials.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Tefal Clear Duo Fryer.

1. **Cool Down:** Always allow the fryer and oil to cool completely before cleaning. This can take several hours.
2. **Drain Oil:** Once cooled, carefully drain the oil from the removable tank. You may filter the oil for reuse if desired.
3. **Dishwasher Safe Parts:** The removable oil tank, lid, frying basket, aluminum filter, filter cover, and excess oil recovery tray are all dishwasher safe for easy cleaning.

HUBLLOT ANTI-BUÉE EXTRA-LARGE



Figure 6: Dishwasher-safe components.

4. **Hand Wash:** For parts not suitable for the dishwasher, wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
5. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
6. **Storage:** Ensure all parts are dry before reassembling and storing the fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Tefal Clear Duo Fryer, please refer to the following common problems and solutions:

- **Fryer does not turn on:**

- Check if the power cord is securely plugged into the outlet and the fryer.
- Ensure the ON/OFF switch (if present) is in the 'ON' position.

- **Oil is not heating:**

- Verify that the temperature dial is set to a desired temperature.
- Allow sufficient preheating time. The 'Ready' indicator light should illuminate when the target temperature is reached.

- **Excessive smoke or odor:**

- Ensure the oil level is correct and not overfilled.
- Check if the filter system is clean and properly installed.
- Old or dirty oil can cause more smoke and odor; consider changing the oil.

- **Food not cooking evenly or crispy:**

- Do not overload the frying basket. Fry in smaller batches if necessary.
- Ensure the oil is at the correct temperature before adding food.
- Check the recommended cooking times and temperatures for your specific food type.

If the problem persists after checking these points, please contact Tefal customer support.

SPECIFICATIONS

Specification	Detail
Brand	Tefal
Model Number	FR600D
Color	Silver
Dimensions (L x W x H)	50.3 x 25 x 26.8 cm
Capacity	1.2 Kilograms (food)
Power	2000 Watts
Material	Plastic, Stainless Steel
Automatic Shut-off	No
Features	3.5 L oil capacity, Dishwasher-safe accessories, Cool Touch handle, Reduces smoke and odors
Item Weight	4.35 Kilograms

TEMPÉRATURE ET MINUTERIE RÉGLABLES



Figure 7: Product dimensions.

WARRANTY AND SUPPORT

Tefal is committed to the quality and durability of its products. The Tefal Clear Duo Fryer FR600D10 is designed for long-term use and reparability.

- **Reparability:** This product is part of Tefal's commitment to reparability for 15 years at a fair price, supported by a network of 6200 authorized repair centers worldwide.



Figure 8: Tefal 15 Years Repairable logo.

- **Customer Support:** For any questions, concerns, or to locate an authorized service center, please refer to the official Tefal website or contact their customer service department.

