

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Tefal](#) /

> Tefal ActiFry & Grill Genius Air Fryer Instruction Manual

## Tefal FZ7758

# Tefal ActiFry & Grill Genius Instruction Manual

Model: FZ7758

[Introduction](#)   [Safety Information](#)   [Product Overview](#)   [Setup](#)   [Operating Instructions](#)  
[Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)



## 1. INTRODUCTION

The Tefal ActiFry & Grill Genius is a new generation healthy air fryer designed to cook crispy fries and snacks with little to no oil. It features an exclusive automatic stirring technology and optimized hot air circulation for even cooking and perfectly golden results without the need to turn food manually. The 1.2L ceramic non-stick cooking bowl offers a large capacity for cooking up to 1.2kg of food. This revolutionary fryer also includes a removable grill plate, allowing you to cook two different recipes simultaneously, such as crispy fries and grilled fish. With 9 automatic programs, it simplifies cooking a variety of dishes including fries, meats, fish, snacks, desserts, and even roasting or grilling.

## 2. IMPORTANT SAFETY INFORMATION

**Please read all instructions carefully before using the appliance and keep them for future reference.**

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

### 3. PRODUCT OVERVIEW

---



**Figure 3.1:** The Tefal ActiFry & Grill Genius air fryer, showcasing its main unit, the removable grill plate, and a smartphone displaying the companion recipe app. This image highlights the complete product package and its digital integration.



**Figure 3.2:** Top-down view of the Tefal ActiFry & Grill Genius with its lid open, revealing a steak cooking on the integrated grill plate. This illustrates the grill function and how food is placed inside the appliance.

## CUISSON PARFAITE ET HOMOGÈNE



**Figure 3.3:** An internal view of the Tefal ActiFry & Grill Genius, highlighting the patented automatic stirring paddle. Red arrows indicate the stirring motion, demonstrating how ingredients are continuously mixed for even cooking.

## DES REPAS SAINS ET SAVOUREUX SANS MATIERES GRASSES



**Figure 3.4:** The Tefal ActiFry & Grill Genius in a kitchen setting, with cooked chicken nuggets and fries displayed alongside. This image emphasizes the appliance's ability to prepare healthy and flavorful meals.

### Components:

- **Main Unit:** Houses the heating element, motor, and control panel.
- **Cooking Bowl:** 1.2L ceramic non-stick bowl for food preparation.
- **Automatic Stirring Paddle:** Patented paddle that continuously stirs ingredients for even cooking.
- **Removable Grill Plate:** Allows for grilling and cooking two different dishes simultaneously.
- **Lid:** Transparent lid to monitor cooking progress.
- **Control Panel:** Digital display and buttons for program selection and time/temperature adjustment.

## 4. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials and any promotional stickers from the appliance.
2. **Cleaning:** Before first use, wash the cooking bowl, stirring paddle, and grill plate with warm soapy water. Rinse thoroughly and dry all parts. Wipe the main unit with a damp cloth.
3. **Placement:** Place the ActiFry & Grill Genius on a flat, stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
4. **Assembly:** Ensure the cooking bowl is correctly seated in the main unit. Insert the stirring paddle into its designated slot at the bottom of the bowl. If using, place the grill plate on top of the stirring paddle, ensuring it clips securely onto the lid mechanism.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Operation

1. **Prepare Ingredients:** Cut ingredients to the recommended size (refer to recipe book or app for guidance).
2. **Add Ingredients:** Place your ingredients into the cooking bowl. If using the grill plate, place items to be grilled on the plate and other ingredients in the bowl below.
3. **Add Oil (Optional):** For some recipes, a small amount of oil may be added. Refer to specific recipe instructions.
4. **Close Lid:** Ensure the lid is securely closed.
5. **Select Program:** Use the control panel to select one of the 9 automatic cooking programs. The appliance will automatically set the optimal time and temperature.
6. **Start Cooking:** Press the start button to begin the cooking cycle. The stirring paddle will activate automatically.
7. **Monitor Progress:** You can monitor cooking through the transparent lid.
8. **End of Cooking:** The appliance will beep when the cooking cycle is complete. Carefully open the lid.
9. **Serve:** Carefully remove the cooked food.

### 5.2 Using the Grill Function

The removable grill plate allows for simultaneous cooking of different food types. To use:

- Ensure the stirring paddle is in place.
- Clip the grill plate onto the designated supports inside the lid.
- Place items to be grilled (e.g., steak, fish) on the grill plate.
- Place other ingredients (e.g., fries) in the main cooking bowl below.
- Select the appropriate program that supports dual cooking or grilling.

### 5.3 Automatic Programs

The ActiFry & Grill Genius features 9 automatic programs for various dishes:

- Fries
- Meats

- Fish
- Snacks
- Desserts
- Roast
- Grill
- And other specialized programs. Consult the digital recipe book or app for full details on each program.



**Figure 5.1:** The Tefal ActiFry & Grill Genius surrounded by a variety of cooked dishes, including fries, spring rolls, and chicken nuggets. A smartphone in the foreground shows the Tefal recipe app, encouraging users to explore diverse culinary options.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

### 6.1 Before Cleaning

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

## 6.2 Cleaning Removable Parts

The cooking bowl, stirring paddle, and grill plate are dishwasher-safe. Alternatively, they can be washed by hand:

- Wash with warm soapy water using a non-abrasive sponge.
- Rinse thoroughly under running water.
- Dry completely before reassembling or storing.

## 6.3 Cleaning the Main Unit

- Wipe the exterior of the main unit with a damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may damage the surface.
- Never immerse the main unit in water or any other liquid.

## 6.4 Storage

Store the appliance in a dry place, away from direct sunlight and out of reach of children.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Food not cooking evenly.	Stirring paddle not installed correctly; too much food in the bowl; ingredients not cut uniformly.	Ensure stirring paddle is properly seated; do not overload the bowl (max 1.2kg); cut ingredients to similar sizes.
Food not crispy.	Too much moisture in food; not enough cooking time; wrong program selected.	Pat food dry before cooking; extend cooking time if necessary; ensure correct program is selected for desired crispiness.
Smoke coming from appliance.	Excess oil or food residue; fatty food cooking.	Unplug and let cool. Clean the appliance thoroughly. Reduce amount of oil or fat. If smoke persists, contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	FZ7758
Brand	Tefal
Color	Black
Capacity	1.2 Kilograms
Power	1520 Watts
Voltage	230 Volts

Feature	Detail
Material	Plastic
Dimensions (L x W x H)	43.3 x 30.3 x 23.8 cm
Item Weight	4.58 Kilograms
Special Features	Dishwasher-safe accessories, Die-cast grill plate, Rotating stirring arm, Digital recipe book and free Tefal recipe app.



Figure 8.1: A visual representation of the Tefal ActiFry & Grill Genius with its key dimensions (length, width, and height) clearly marked in centimeters, providing a clear understanding of its physical size.

## 9. WARRANTY AND SUPPORT

## 9.1 Warranty Information

Tefal products are manufactured to high quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Tefal website. Typically, a standard manufacturer's warranty covers defects in materials and workmanship under normal household use.

## 9.2 Customer Support

If you encounter any issues with your Tefal ActiFry & Grill Genius that cannot be resolved using the troubleshooting guide, or if you require spare parts, please contact Tefal Customer Service.

- **Online Support:** Visit the official Tefal website for FAQs, product registration, and online support forms. [www.tefal.com](http://www.tefal.com)
- **Phone Support:** Refer to your product documentation for local customer service contact numbers.
- **Digital Recipe Book & App:** For recipe inspiration and usage tips, download the free Tefal recipe app or access the digital recipe book.