

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Ameriwood Home](#) /

› Ameriwood Home Fillmore Fireplace Mantel User Manual

Ameriwood Home 3696341COM

Ameriwood Home Fillmore Fireplace Mantel User Manual

Model: 3696341COM

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Ameriwood Home Fillmore Fireplace Mantel. Please read all instructions carefully before beginning assembly or use to ensure proper function and safety. Keep this manual for future reference.



Image: The Ameriwood Home Fillmore Fireplace Mantel in Ivory Oak, showcasing its compact design and realistic flame effect. It is positioned next to a grey armchair, illustrating its suitability for smaller spaces.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- Ensure the fireplace is plugged into a standard 120V outlet. Do not overload circuits.
- Keep combustible materials such as furniture, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Close supervision is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not use outdoors.

- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Refer to the full safety guidelines provided in the product packaging for complete details.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Fireplace Mantel (Ivory Oak panels)
- Electric Fireplace Insert
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly typically requires two adults. Ensure you have a clear, flat surface for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Assemble Mantel Frame:** Follow the detailed diagrams in your included assembly guide to connect the side panels, top panel, and base of the mantel using the provided hardware. Ensure all cam locks and screws are tightened securely.
3. **Insert Fireplace Unit:** Once the mantel frame is assembled, carefully slide the electric fireplace insert into the designated opening from the front.





Image: A rear view of the fireplace mantel structure, showing the electric fireplace insert positioned within its housing. This illustrates the internal setup before the back panel is secured.

4. **Secure Fireplace Unit:** Use the provided screws or brackets to secure the fireplace insert to the mantel frame, ensuring it is stable and flush.
5. **Final Checks:** Verify all connections are tight and the unit is stable. Place the assembled mantel on a level surface.

OPERATING INSTRUCTIONS

The Ameriwood Home Fillmore Fireplace Mantel features an electric fireplace insert with adjustable flame effects and heating capabilities.



Image: A detailed view of the electric fireplace insert, highlighting the control panel located above the flame display. This panel typically includes buttons for power, flame intensity, and heat settings.

1. **Power On/Off:** Locate the main power switch on the fireplace insert, usually on the front panel. Press to turn the unit on or off.
2. **Flame Effect:** The flame effect can be operated independently of the heater. Use the dedicated flame button (if available) to cycle through different flame brightness settings or to turn the flame effect on/off.
3. **Heat Function:** To activate the heater, press the heat button. The unit will begin to emit warm air. Some models may have multiple heat settings (e.g., low/high) or a thermostat control.
4. **Adjusting Heat:** If your model has adjustable heat, use the corresponding buttons to increase or decrease the heat output.
5. **Safety Cut-Off:** The heater is equipped with a safety cut-off feature to prevent overheating. If the heater overheats, it will automatically shut off. Unplug the unit, wait 10-15 minutes for it to cool, then plug it back in.

MAINTENANCE


Regular maintenance ensures the longevity and optimal performance of your fireplace mantel.

- **Cleaning:**
 - Always unplug the unit before cleaning.
 - Wipe the exterior surfaces of the mantel with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - For the glass panel of the fireplace insert, use a soft cloth and a non-abrasive glass cleaner.
 - Dust the air intake and exhaust vents regularly with a vacuum cleaner or soft brush to prevent dust buildup.
- **Storage:** If storing the unit for an extended period, unplug it and cover it to protect it from dust and moisture.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. Do not use the unit if the cord is frayed or damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in. Power switch off. Circuit breaker tripped.	Ensure power cord is securely plugged into a 120V outlet. Turn the main power switch to the "ON" position. Check your home's circuit breaker and reset if necessary.
No heat, but flame effect works.	Heater function not activated. Overheat safety cut-off engaged.	Press the heat button to activate the heater. Unplug the unit, wait 10-15 minutes, then plug back in. Ensure vents are not blocked.
Flame effect is not visible or dim.	Flame brightness setting is low. LED bulbs may need replacement (rare).	Adjust the flame brightness using the control panel. Contact customer support if issue persists after checking brightness.

SPECIFICATIONS

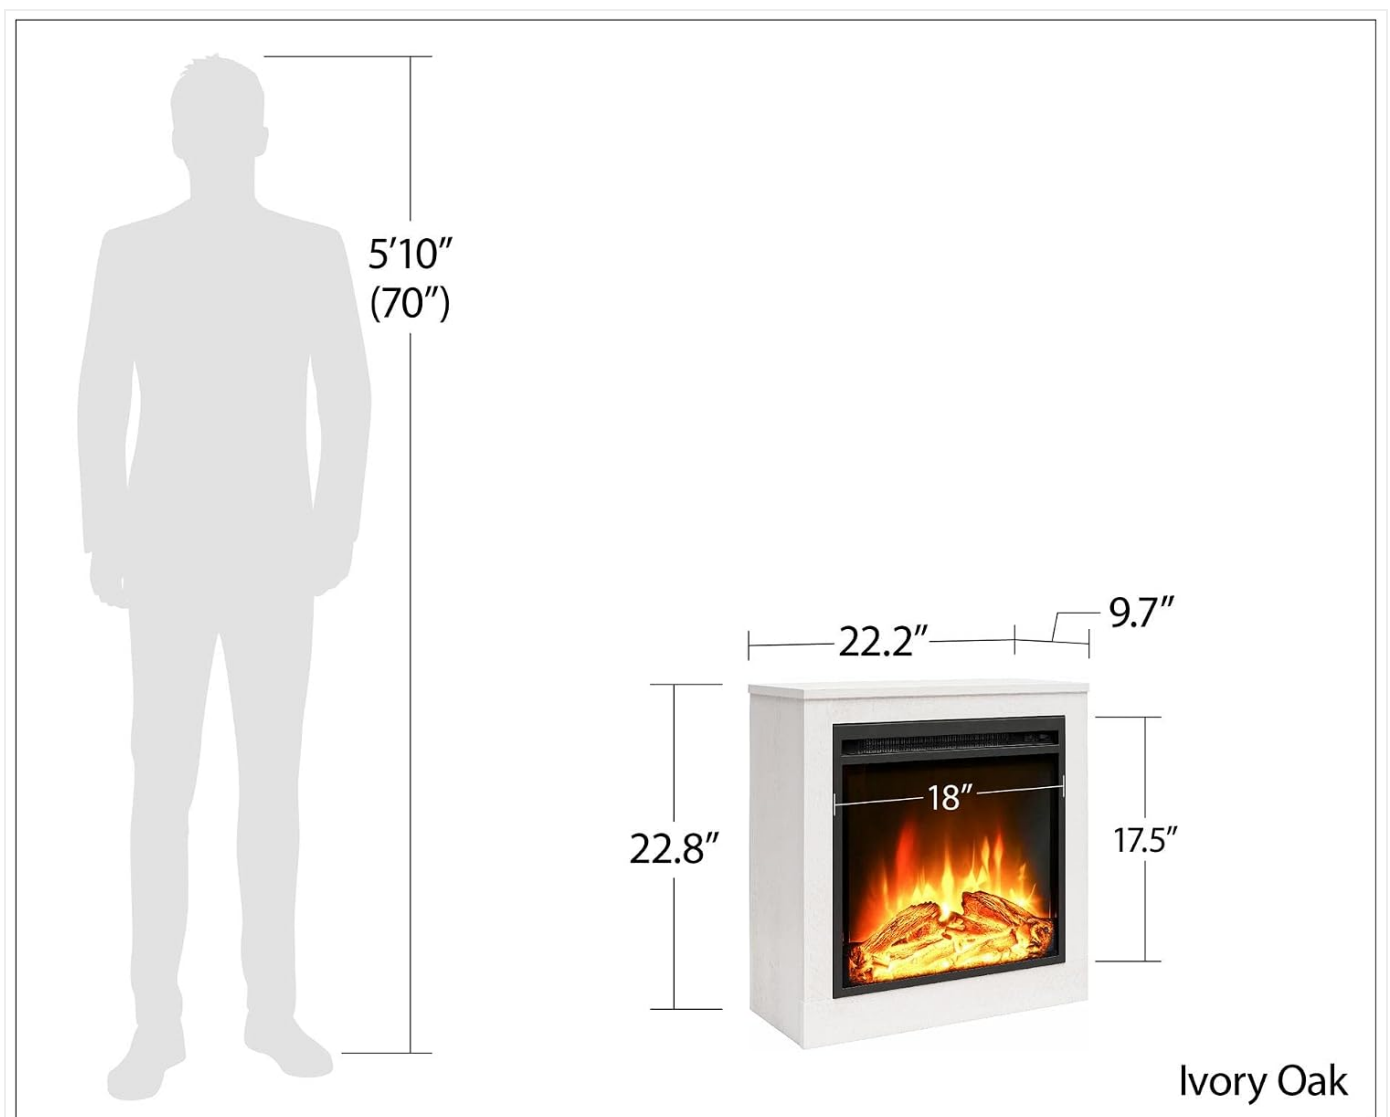

Product Dimensions

22.2 in. W x 9.7 in. D x 22.8 in. H

Weight Limit: Top - 10 lbs.



Espresso

Image: A diagram illustrating the dimensions of the Ameriwood Home Fillmore Fireplace Mantel, including width, depth, and height, alongside a human figure for scale. The dimensions are 22.2 inches W x 9.7 inches D x 22.8 inches H.

Feature	Detail
Model Name	Fillmore
Model Number	3696341COM
Brand	Ameriwood Home
Product Dimensions	22.2" W x 9.72" D x 22.75" H
Material	Engineered Wood
Finish Type	Ivory Oak
Power Source	Corded Electric

Feature	Detail
Heat Output	4600 British Thermal Units (Heats up to 400 sq. ft.)
Special Features	Flame Effect, LED Flame, Energy-efficient heat
Installation Type	Freestanding
Item Weight	30 Pounds

WARRANTY AND SUPPORT

The Ameriwood Home Fillmore Fireplace Mantel comes with a **1-Year Limited Warranty**. This warranty covers manufacturing defects and workmanship under normal use.

For warranty claims, missing parts, or technical assistance, please contact Ameriwood Home customer support.

- Customer Service:** Refer to the contact information provided in your product packaging or visit the official Ameriwood Home website.
- Online Resources:** Additional support and FAQs may be available on the Ameriwood Home website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BWPBNC9X>

More documents and user manuals: <https://manuals.plus/>