

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [XOPPOX](#) /

› [XOPPOX Mini Projector X106 User Manual](#)

## XOPPOX X106

# XOPPOX Mini Projector X106 User Manual

Model: X106

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your XOPPOX Mini Projector X106. Please read this manual thoroughly before using the product and retain it for future reference.

## WHAT'S IN THE BOX

---

Verify that all items listed below are included in your package:

- 1 x XOPPOX Mini Projector X106
- 1 x Remote Control
- 1 x Power Cable
- 1 x HDMI Cable
- 1 x AV Cable
- 1 x User Manual

# What's in the Box?

- 1 × Movie Projector
- 1 × Remote control
- 1 × Power Cable
- 1 × HDMI cable
- 1 × AV cable
- 1 × User Manual



Image: Contents of the XOPPOX Mini Projector X106 package.

## PRODUCT OVERVIEW

The XOPPOX Mini Projector X106 is a compact and portable projector designed for home entertainment. It features multiple input interfaces for versatile connectivity.

## Dimensions and Weight

- **Dimensions:** 5.7 x 2.3 x 3.8 inches
- **Weight:** 1.65 pounds

# Cut Size Kids Gifts



Image: The compact size of the XOPPOX Mini Projector X106 compared to a smartphone.

## Interfaces

The projector is equipped with various ports for connecting external devices:

- **DC IN:** Power input.
- **Headphone Jack:** For external audio output.
- **AV:** Audio/Video input for older devices.
- **HDMI:** High-Definition Multimedia Interface for digital audio/video.
- **USB:** For connecting USB storage devices.

# Mini But Powerful

## Product Name

Ours

Others

Product Name



Size

5.7"\*2.3"\*3.8"

5.6"\*3.7"\*2.1"

Native Resolution



800\*480 👍

360\*240

Brightness

60 ANSI 👍

40 ANSI

Contrast

2000:1 👍

1200:1

Projection Size

230" 👍

150"

For Gift

✓ 👍

×

Image: Rear panel of the projector displaying all available input/output ports.

## SETUP

### 1. Power Connection

1. Connect the power cable to the "DC IN" port on the projector.
2. Plug the other end of the power cable into a power outlet.

### 2. Connecting Devices

The projector supports various devices via HDMI, USB, and AV interfaces. For phone connections, an adapter (not included) may be required.

# Phone Connection

Note: Adaptor not included



Image: Connectivity options for the projector, illustrating how different devices can be connected.



Image: Example of a phone connection to the projector, projecting content onto a wall.

### 3. Focus Adjustment

To achieve a clear image, adjust the focus ring on the projector lens until the picture is sharp.

### 4. Placement and Projection Size

Place the projector on a stable surface. The optimal projection size is between 27 and 120 inches, with a maximum of 230 inches. Adjust the distance from the projection surface to change the image size.

## OPERATING INSTRUCTIONS

## 1. Power On/Off

- Press the power button on the projector or the remote control to turn the unit on or off.

## 2. Input Source Selection

After connecting your device, select the appropriate input source using the projector's control panel or the remote control. Options include AV, HDMI, and Media Player (for USB).



Image: Steps for selecting input source and playing media.

## 3. Media Playback

Navigate through the projector's menu using the remote control to select Photo, Music, or Movie modes for playback from a USB device.

Your browser does not support the video tag.

Video: An overview of the XOPPOX Mini Projector's features and user interface, demonstrating media playback.

## 4. Audio Settings

The projector does not support Dolby sound. If you experience no sound when playing videos from platforms like Netflix, ensure that Dolby audio is turned off on your connected device or application.

## MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth to gently wipe the projector lens. Avoid abrasive materials or harsh chemicals.
- **Dust Removal:** Regularly clean the ventilation grilles to prevent dust buildup, which can affect performance and lifespan.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No image or blurry image	Incorrect focus, wrong input source, or device not connected properly.	Adjust the focus ring. Ensure the correct input source is selected. Check all cable connections.

Problem	Possible Cause	Solution
No sound	Volume too low, Dolby audio enabled on source device, or external speaker issue.	Increase volume. Turn off Dolby audio on the connected device/app. Check external speaker connection if used.
Projector not turning on	Power cable not connected, power outlet issue.	Ensure power cable is securely connected. Try a different power outlet.

## SPECIFICATIONS

Feature	Detail
Brand	XOPPOX
Model Number	X106
Item Weight	1.65 pounds
Product Dimensions	5.7 x 2.3 x 3.8 inches
Display Resolution	800x480 (supports 1080p Full HD)
Special Feature	Portable
Connectivity Technology	HDMI, USB, AV

## WARRANTY AND SUPPORT

XOPPOX provides a 30-day product warranty. For any issues or inquiries regarding your projector, please contact our professional support team. We are committed to providing the best solution promptly. Contact information can typically be found on the product packaging or the official XOPPOX website.