

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sanus](#) /

› [Sanus Fixed Height Speaker Stands for Sonos Era 100 \(WSSE12-W2\) User Manual](#)

Sanus WSSE12-W2

Sanus Fixed Height Speaker Stands for Sonos Era 100

Model: WSSE12-W2

INTRODUCTION

This manual provides comprehensive instructions for the assembly, installation, and maintenance of your Sanus Fixed Height Speaker Stands, specifically designed for the Sonos Era 100 wireless speaker. Please read all instructions carefully before beginning installation to ensure proper setup and safe operation.

SAFETY INFORMATION

Always follow basic safety precautions when installing and using this product. Keep small parts away from children. Ensure all connections are secure before placing the speaker on the stand. Do not exceed the recommended weight capacity for the speaker stand.

PACKAGE CONTENTS

Verify that all components are present before assembly. If any parts are missing or damaged, contact Sanus customer support.

- Speaker Stand Post (2)
- Base Plate (2)
- Speaker Platform (2)
- Mounting Hardware for Sonos Era 100
- Rubber Feet (8)
- Height-Adjustable Carpet Spikes (8)
- Assembly Tool (e.g., Phillips screwdriver)


SETUP AND INSTALLATION

Follow these steps to assemble and install your speaker stands.

1. **Attach Base Plate to Stand Post:** Securely fasten the base plate to the bottom of the stand post

using the provided screws and assembly tool. Ensure the connection is tight and stable.

2. **Install Floor Protection:** Depending on your flooring, attach either the rubber feet for hard surfaces or the height-adjustable carpet spikes for carpeted areas to the underside of the base plate. Adjust spikes as needed for leveling.
3. **Route Speaker Cable:** Before attaching the speaker platform, carefully route the Sonos Era 100 power cable and any other necessary cables through the oversized post of the speaker stand. This integrated cable management system helps maintain a clean and organized appearance.
4. **Attach Speaker Platform:** Secure the speaker platform to the top of the stand post using the designated screws.
5. **Mount Sonos Era 100 Speaker:** Place your Sonos Era 100 speaker onto the speaker platform. Use the included hardware to securely attach the speaker to the stand, ensuring it is stable and centered.

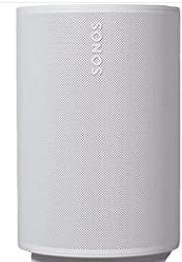

34.4"
(87.4 cm)

10"
(25.4 cm)

12.7"
(32.2 cm)

Image: Sanus Fixed Height Speaker Stand with Sonos Era 100 speaker, illustrating overall dimensions and a 5-year limited warranty badge.

FOR ALL FLOORS

RUBBER FEET & HEIGHT-ADJUSTABLE
CARPET SPIKES FOR
PLACEMENT FLEXIBILITY

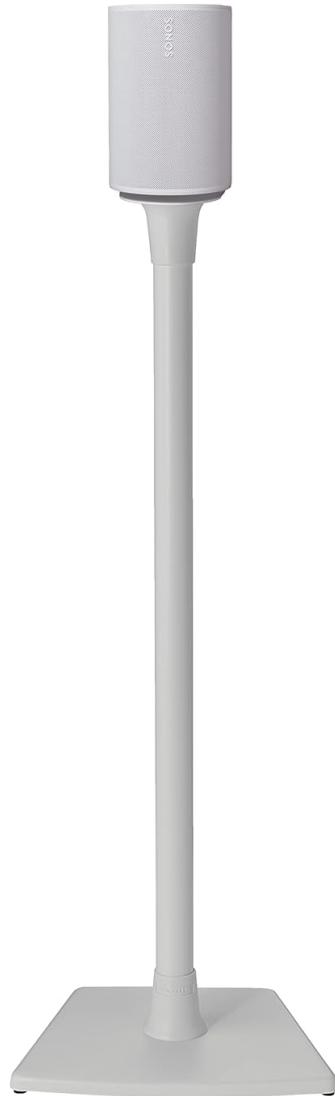


Image: Detail of the stand bases, highlighting the inclusion of both rubber feet and height-adjustable carpet spikes for various floor types.

OPERATING INSTRUCTIONS

These speaker stands are designed to position your Sonos Era 100 speakers at an optimal listening height for an enhanced audio experience.

- **Placement:** Position the speaker stands in your desired listening area, ensuring they are on a stable, level surface.
- **Optimal Listening:** The fixed height of 34.4 inches (87.4 cm) is engineered to provide an ideal acoustic experience for most seating arrangements.



OPTIMAL LISTENING HEIGHT

Image: The speaker stand with a Sonos Era 100 speaker, illustrating its optimal listening height.



SEAMLESSLY BLENDS WITH SONOS ERA 100™

Image: A close-up view demonstrating the seamless integration of the speaker stand with the Sonos Era 100 speaker.

MAINTENANCE

To ensure the longevity and appearance of your speaker stands, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the stands with a soft, dry cloth to remove dust. For stubborn marks, use a slightly damp cloth with mild soap, then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose connections; uneven floor.	Tighten all screws. If on carpet, adjust height-adjustable spikes until stable. If on hard floor, ensure rubber feet are properly installed and the surface is level.
Speaker does not fit securely.	Incorrect speaker model; improper mounting.	Ensure you are using a Sonos Era 100 speaker. Re-check mounting hardware and instructions to ensure correct attachment.
Cables are visible or messy.	Cables not routed through the post.	Disassemble the top portion of the stand and re-route cables through the integrated cable management channel in the stand post.

SPECIFICATIONS

- **Model Number:** WSSE12-W2
- **Compatibility:** Sonos Era 100 Wireless Speaker
- **Material:** Alloy Steel
- **Color:** White
- **Product Dimensions (L x W x H):** 12.7" x 10" x 34.4" (32.2 cm x 25.4 cm x 87.4 cm)
- **Item Weight:** 17.11 pounds (7.78 kg)
- **Optimal Listening Height:** 34.4 inches (87.4 cm)
- **Cable Management:** Integrated through-post design
- **Floor Compatibility:** Includes rubber feet for hard floors and height-adjustable carpet spikes for carpeted surfaces.

WARRANTY INFORMATION

Sanus provides a **5-Year Limited Warranty** for these speaker stands. This warranty covers defects in materials and workmanship under normal use. For full warranty terms and conditions, please refer to the official Sanus website or contact customer support.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official Sanus website or contact their customer service department. You can find contact information on the Sanus website: www.sanus.com