

[Manuals.plus](#) /

› [Primy](#) /

› Primy PR777-Z Office Drafting Chair Instruction Manual

Primy PR777-Z

Primy PR777-Z Office Drafting Chair Instruction Manual

Model: PR777-Z

INTRODUCTION

Thank you for choosing the Primy PR777-Z Office Drafting Chair. This manual provides detailed instructions for the assembly, operation, and maintenance of your new chair. Please read this guide thoroughly before assembly and use to ensure proper function and longevity of the product.

The Primy PR777-Z is an armless, mid-back ergonomic chair designed for various settings including art rooms, offices, and homes. It features adjustable height, a footring, breathable mesh, and smooth-rolling casters for enhanced comfort and mobility.

SAFETY INFORMATION

Please observe the following safety guidelines:

- The chair's maximum weight capacity is **113.4 kg (250 lbs)**. Do not exceed this limit to prevent damage or injury.
- Ensure all components are securely fastened before use. Regularly check screws and connections for tightness.
- Avoid standing on the chair or using it as a step stool.
- Keep hands and fingers clear of moving parts during adjustment.
- Do not use the chair on uneven surfaces.
- For any issues or concerns, contact Primy's customer service.

ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 15-20 minutes. Please ensure all parts are present before beginning.

Assembly Video Guide

Your browser does not support the video tag. Please refer

to the written instructions.

This video demonstrates the step-by-step assembly process for the Primy PR777-Z chair, including attaching the base, casters, air rod, footring, and seat components.

Step-by-Step Assembly

1. Assemble the Chair Base:

Take out the Split Base Tubes (3) and Central Base Tube (4). Insert the Split Base Tubes (3) into the Central Base Tube (4) as shown. Align with the screw holes and tighten the 5 M6x20mm screws (8) using the Hexagon Wrench (12). Repeat for all five tubes.



Smooth Casters

Casters for protecting the floor are made of soft PU, which has a mute effect, does not damage the floor, and provides protection. It can move quietly and smoothly, so don't worry about disturbing your mood.

Three-Stage Air Rod

Because it is used every day, it pays more attention to safety. Alloy structure, with strong bearing capacity and slow lifting function. Sturdy and durable.



Durable Base

Our strong iron base is made of strong material, this chair could support a maximum weight of 250 lbs.

Image: Illustration showing the attachment of the five chair legs to the central base component using screws and a wrench.

2. Attach the Casters:

Insert the 5 Casters (5) into the ends of the assembled base tubes. Push them in deeply until they are securely seated. Then, insert the Air Rod (6) into the hole of the Central Base Tube (4).



Image: Diagram showing the smooth casters, three-stage air rod, and durable base components. Casters are shown being inserted into the base.

3. **Install the Foot Ring:**

Insert the Foot Ring (13) onto the assembled Air Rod (6) at your desired height. Ensure there is at least one inch from the top of the outer circle of the Air Rod (6). Tighten the knob by hand until the Foot Ring (13) is fixed.



Image: Diagram illustrating the adjustable footrest ring, showing how to position and secure it on the chair's central column.

4. Attach the Base Plate to the Seat Cushion:

Fix the Base Plate (7) to the bottom of the Seat Cushion (2). Tighten the 4 M6x18mm screws (9) with the Hexagon Wrench (12) firmly. Ensure the 'FRONT' sticker on the seat cushion aligns with the front of the base plate.

5. Attach the Backrest to the Seat Cushion:

Fix the Backrest (1) to the back of the Seat Cushion (2). Tighten the 3 M6x25mm screws (10) with 3 Gaskets (11) using the Hexagon Wrench (12) firmly. Ensure the 'FRONT' sticker on the seat cushion is facing forward.

6. Connect the Seat Assembly to the Base:

Insert the Air Rod (6) into the hole in the middle of the Base Plate (7). Press the Seat Cushion (2) from top to bottom, using your whole body's weight to insert it firmly. The assembly is now complete.

Caution: If the Air Rod (6) doesn't insert firmly into the Base Plate (7), the chair is likely to fall off when it rises up.

OPERATING INSTRUCTIONS

Height Adjustment

To adjust the chair's height, locate the pneumatic adjustment lever beneath the seat. Lift the lever up to raise the chair. To lower the chair, lift the lever while seated. The chair's height can be adjusted from approximately 22 inches to 30 inches, suitable for various desk heights, including standing desks.



THREE-STAGE AIR ROD

Strong bearing capacity &
Slow lifting function



STURDY FOOT RING

Adjustment height
range 9.5 In



DURABLE BASE

Support a maximum
weight of 250 lbs



SMOOTH CASTERS

360-Degree Swivel,
Move quietly and smoothly



Image: A visual guide demonstrating the lever mechanism for adjusting the chair's height, showing an 8-inch adjustment range.

Foot Ring Adjustment

The footring can be adjusted to provide optimal leg support. Loosen the knob on the footring, slide it to your desired height, and then tighten the knob firmly to secure it in place. This allows for a balanced angle between your thighs and the seat, relieving discomfort during prolonged sitting.

360-Degree Swivel

The chair is designed with a 360-degree swivel function, allowing for easy movement and access to your workspace without strain.

Ergonomic Backrest

The C-shaped mesh backrest is designed to fit the curve of your lower back, promoting better posture and reducing stress and muscle fatigue.

PRODUCT SIZE



Image: Close-up view of the chair's breathable mesh backrest and high-density cushion, highlighting its comfortable and breathable design.

MAINTENANCE

To maintain your Primy PR777-Z chair, follow these guidelines:

- **Cleaning:** Spot clean the fabric and mesh components as needed. Use a mild detergent and a damp cloth. Avoid harsh chemicals that may damage the material.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Casters:** Keep the casters free of debris (hair, dust) to ensure smooth rolling.

TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common solutions:

- **Chair does not adjust height:** Ensure the pneumatic lever is fully engaged. If the chair still does not adjust, check if

the air rod is properly seated in the base plate (refer to assembly step 6).

- **Chair wobbles:** Verify that all screws connecting the base tubes and the seat components are securely tightened. Ensure the casters are fully inserted.
- **Casters not rolling smoothly:** Check for any debris (hair, lint) caught in the caster wheels and remove them.

For persistent issues not covered here, please contact Primy customer service.

SPECIFICATIONS

Feature	Detail
Brand	Primy
Model Number	PR777-Z-black-PE
Colour	Black
Product Dimensions	46 x 28 x 48 cm; 10.62 kg (18.1D x 11W x 18.9H inches; 23.4 lbs)
Material	Felt (seat cushion), Mesh (backrest), Metal (frame)
Special Features	Adjustable Height, Rolling, Adjustable Footring
Item Weight	10.6 kg (23.4 lbs)
Back Style	Mesh Back
Product Care Instructions	Spot Clean

HEIGHT-ADJUSTABLE DRAFTING CHAIR



Adjustable Height for
Different Desk Tops



Height Adjustable Footrest
Stays Where You Put It

Image: Detailed product size diagram showing various measurements of the Primy PR777-Z chair, including seat width, backrest height, and adjustable height range.

WARRANTY AND SUPPORT

The Primy PR777-Z Office Drafting Chair comes with a **1-year after-sales warranty**. If you encounter any problems or require assistance, please contact Primy customer service. Our team is dedicated to providing support and resolving any issues you may have.

For further assistance, please visit the [Primy Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question