

## Pipishell B0BWQDXTPK

# Pipishell Electric Fireplace TV Stand User Manual

Model: B0BWQDXTPK

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling or operating this product. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always disconnect the fireplace from the power supply before cleaning or performing any maintenance.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This TV stand is designed to support TVs up to 70 inches and a maximum weight of 200 lbs on the console top. Ensure your TV's weight and size are within these limits.
- An anti-tip kit is included for maximum stability. Install it as instructed to prevent accidental tipping.

## 2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- TV Stand Components (various engineered wood panels, hardware)
- 18-inch Electric Fireplace Insert
- Remote Control for Fireplace
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Anti-Tip Kit
- Instruction Manual

## 3. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Lay out all parts on a soft, clean surface to prevent scratches. Follow the numbered steps provided in the separate assembly guide (if applicable) or the included diagrams.

### 3.1. General Assembly Tips

- Identify all parts and hardware before starting.
- Use a screwdriver (not included) for most fasteners. Do not overtighten screws.
- Ensure all connections are secure before moving the unit.

### 3.2. Installing Adjustable Shelves

The side cabinets feature adjustable shelves to accommodate items of various sizes. Insert the shelf pins into the desired holes, then place the shelf on top of the pins.



**Figure 3.2.1:** Adjustable shelves and cable management cutouts. The image displays the interior of a cabinet section of the TV stand, highlighting three possible height options for the adjustable shelf. Below the shelf, a cable cutout is visible, designed for organizing wires from electronic devices like game controllers.

### 3.3. Cable Management

Cable management holes are located in the back panel of the TV stand to help keep wires neat and organized. Route all power and signal cables through these openings.

### 3.4. Anti-Tip Kit Installation

For safety, especially in households with children or pets, it is highly recommended to install the included anti-tip kit. Secure the strap to the back of the TV stand and to a wall stud according to the kit's instructions.

## 4. OPERATING INSTRUCTIONS FOR ELECTRIC FIREPLACE

---

The electric fireplace can be operated using either the control panel on the unit or the included remote control.



**Figure 4.1.1:** Easy Control Panel. This image shows a close-up of the electric fireplace insert's control panel, indicating two switches: one for Power ON/OFF and another for Heater ON/OFF. The fireplace displays realistic flame effects.

### 4.1. Control Panel Operation

1. **Power ON/OFF:** Locate the main power switch on the fireplace unit. Flip it to the "ON" position to activate the fireplace.
2. **Heater ON/OFF:** Use the separate heater switch to turn the heating function on or off. The flame effect can operate independently of the heater.

### 4.2. Remote Control Operation

The remote control allows for convenient adjustment of the fireplace settings from a distance. Ensure batteries are correctly installed.

- **Power Button:** Turns the fireplace unit on or off.
- **Heat Button:** Activates or deactivates the heating element.
- *Additional functions (if available on your remote):* Adjust flame brightness, set timer, etc. Refer to the remote's specific instructions.

### 4.3. Heating Function

The 1500W rapid heating system is designed to effectively heat areas up to 400 square feet. An automatic safety shutoff feature prevents overheating.



# Warm Air in 5 Seconds



**Figure 4.3.1: Warm Air Distribution.** This image illustrates warm air emanating from the electric fireplace, indicating its heating capability. The text overlay states "Warm Air in 5 Seconds," suggesting quick heating.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior. Do not spray water directly onto the unit.
- **Ventilation:** Keep the air intake and exhaust vents of the fireplace clear of dust and debris to ensure proper airflow and prevent overheating.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Pipishell Electric Fireplace TV Stand, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, main switch off, remote batteries dead.	Check power outlet, ensure main power switch is ON, replace remote batteries.
Heater not producing heat.	Heater switch off, thermostat setting too low, safety shutoff activated.	Ensure heater switch is ON, check thermostat, unplug unit for 5 minutes to reset safety shutoff.
Flame effect not working.	Flame motor issue, LED bulb failure.	Contact customer support for assistance.
Unit is unstable.	Leg levelers not adjusted, anti-tip kit not installed.	Adjust leg levelers, install anti-tip kit as per instructions.

## 7. PRODUCT SPECIFICATIONS

Detailed specifications for the Pipishell Electric Fireplace TV Stand.

- **Brand:** Pipishell
- **Model:** B0BWQDXTPK
- **Material:** Engineered Wood
- **Color:** Gray
- **Product Dimensions:** 15.7"D x 57.8"W x 24.2"H
- **Item Weight:** 103.8 pounds
- **TV Size Compatibility:** Up to 70 inches
- **Console Top Weight Capacity:** Up to 200 lbs
- **Bottom Shelf Weight Capacity:** 50 lbs
- **Adjustable Shelf Weight Capacity:** 20 lbs
- **Fireplace Type:** 18-inch Electric Fireplace Insert
- **Heating Power:** 1500W
- **Heating Area:** Up to 400 square feet
- **Power Source:** Corded Electric (120V/60Hz)
- **Special Features:** Remote Control, Adjustable Shelves, Cable Management, Anti-Tip Kit, Leg Levelers



**Figure 7.1.1:** Product Dimensions and Capacity. This image provides a visual representation of the TV stand's dimensions (57.8" width, 15.7" depth, 24.2" height) and highlights its 200 lbs weight capacity, suitable for TVs up to 70 inches.

## 8. WARRANTY AND CUSTOMER SUPPORT

---

Pipishell products are designed for quality and reliability. For warranty information or technical assistance, please contact Pipishell customer support.

- **Customer Support:** Refer to the contact information provided with your purchase or visit the official Pipishell website.
- **Proof of Purchase:** Keep your purchase receipt for warranty claims.



**Related Documents - B0BWQDXTPK**



