

[Manuals.plus](#) /

> [COSTWAY](#) /

> COSTWAY Wooden Corner Cabinet Instruction Manual

COSTWAY 66192-CYWH

COSTWAY Wooden Corner Cabinet Instruction Manual

1. INTRODUCTION

Thank you for choosing the COSTWAY Wooden Corner Cabinet. This freestanding storage organizer is designed to maximize space in various rooms such as bathrooms, living rooms, bedrooms, kitchens, and entryways. It features two doors and an adjustable interior shelf, providing versatile storage solutions. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.



Image 1.1: The COSTWAY Wooden Corner Cabinet, fully assembled and placed in a room corner.

2. SAFETY INFORMATION

- Always assemble the cabinet on a clean, flat, and soft surface to prevent scratches.
- Ensure all parts are securely fastened before use. Periodically check and tighten all connections.
- Do not overload the cabinet. The weight limit for the top surface is 66 lbs, and for the adjustable shelf is 11 lbs.
- Keep small parts and packaging materials away from children during assembly.
- For stability, consider anchoring the cabinet to the wall, especially if children are present. Anchoring hardware may not be included.
- **Caution:** When assembling, avoid using an electric screwdriver on delicate parts, particularly part B, as this may cause damage. Hand-tighten screws where indicated or if resistance is felt.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Cabinet Panels (Top, Bottom, Side, Back)
- Adjustable Shelf
- Cabinet Doors (2)
- Door Hinges and Hardware
- Door Knobs (2)
- Magnetic Door Catches
- Assembly Screws and Dowels
- Instruction Manual



Image 3.1: Icons highlighting key features: Easy Cleaning, Quick Assembly, Premium Material, and Sturdy Construction.

4. ASSEMBLY INSTRUCTIONS

The assembly process is designed to be straightforward. Follow the step-by-step diagrams provided in the included instruction leaflet. It is recommended to have a Phillips head screwdriver and a hammer (for dowels) on hand. Do not use power tools unless explicitly stated, and exercise caution to avoid overtightening screws.

1. Identify all parts and hardware by comparing them with the parts list in the instruction leaflet.

2. Attach the side panels to the bottom panel using the provided screws and dowels.
3. Insert the back panels into the grooves of the side and bottom panels.
4. Secure the top panel to the assembled structure.
5. Install the door hinges onto the cabinet frame and the doors.
6. Attach the doors to the cabinet, ensuring they open and close smoothly.
7. Install the door knobs and magnetic door catches.
8. Place the adjustable shelf at your desired height.



Image 4.1: Product dimensions diagram, useful for understanding component placement during assembly.

5. OPERATING INSTRUCTIONS

The COSTWAY Wooden Corner Cabinet is designed for simple operation and versatile storage.

5.1 Opening and Closing Doors

Gently pull the round knobs to open the two shutter doors. The magnetic catches will hold the doors securely closed when not in use. The shutter design facilitates ventilation, which is beneficial for storing items in environments like bathrooms.

Product Dimensions

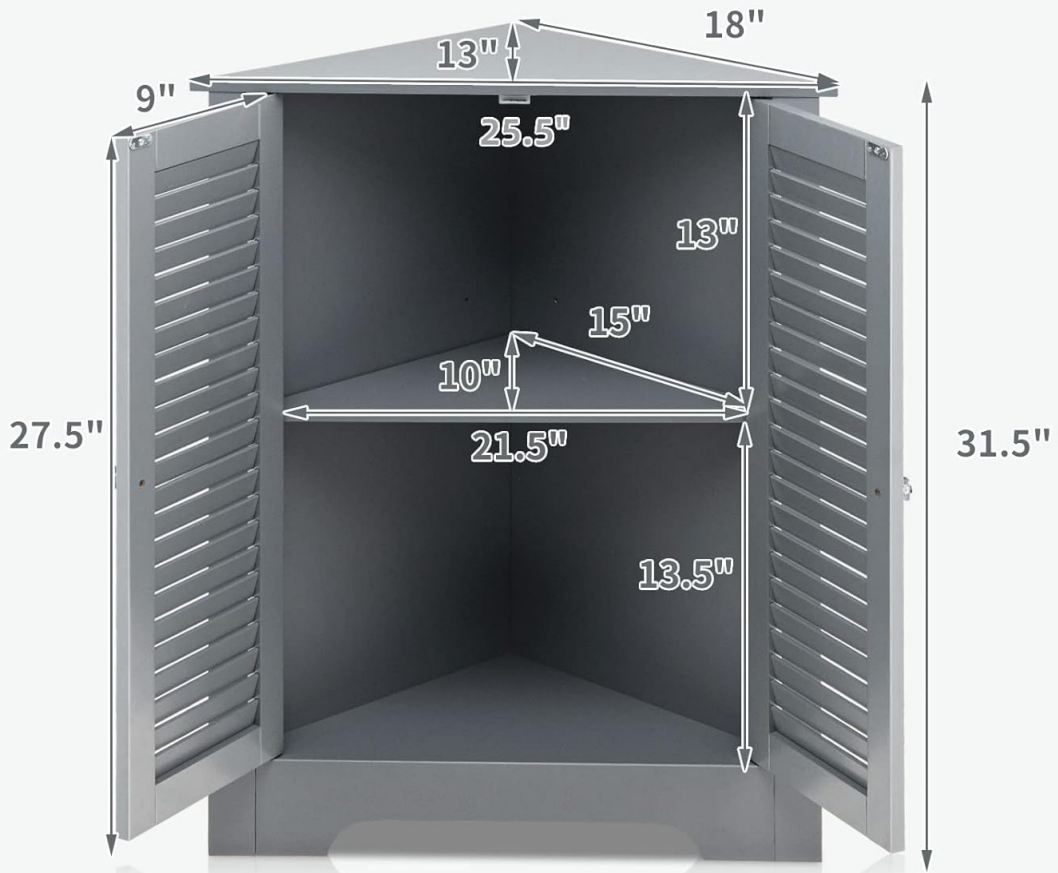


Image 5.1: Detailed view of the cabinet's round knobs, shutter doors, magnetic catches, and waterproof surface.

5.2 Adjusting the Shelf

The interior shelf is adjustable to three different heights, allowing you to customize the storage space according to your needs. To adjust, carefully remove the shelf, reposition the shelf pins to the desired height, and then place the shelf back onto the pins. The shelf can also be removed entirely for larger items.



Image 5.2: Illustration of the adjustable shelf mechanism, showing three possible height settings.

Space-saving Corner Cabinet



Image 5.3: The cabinet open in a bathroom, demonstrating its storage capacity with the adjustable shelf.

6. MAINTENANCE

To ensure the longevity and appearance of your COSTWAY Wooden Corner Cabinet, follow these simple maintenance guidelines:

- **Cleaning:** The cabinet features a smooth, waterproof painted surface. Wipe clean with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Promptly wipe up any spills to prevent moisture damage, especially on the top surface and shelves.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten as necessary.
- **Environment:** Avoid placing the cabinet in direct sunlight or near heat sources, as this can cause fading or warping over time.

7. TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common problems and solutions:

- Problem:** Doors do not align or close properly.
Solution: Check the hinge alignment. Loosen hinge screws slightly, adjust the door position, and then retighten. Ensure the magnetic catches are properly installed and aligned with the door plates.
- Problem:** Cabinet feels wobbly or unstable.
Solution: Verify that all assembly screws are fully tightened. Ensure the cabinet is placed on a level surface. If necessary, use shims under the legs to stabilize.
- Problem:** Difficulty inserting screws or parts not lining up.
Solution: Double-check the instruction diagrams to ensure you are using the correct parts and orientation. Do not force parts together. If holes do not align, gently adjust the position of the panels. Avoid using power tools that can strip screws or damage pre-drilled holes.
- Problem:** Scratches or minor damage to the finish.
Solution: For minor scratches, a furniture repair marker or touch-up paint in a matching color may be used.

8. SPECIFICATIONS

Feature	Detail
Brand	COSTWAY
Model Name	Corner Cabinet
Model Number	66192-CYWH
Color	Grey
Product Dimensions (L x W x H)	25.5" x 13" x 31.5"
Item Weight	23 Pounds
Material	Engineered Wood (MDF)
Finish Type	Painted
Number of Shelves	3 (1 adjustable)
Weight Capacity (Top)	66 lbs
Weight Capacity (Adjustable Shelf)	11 lbs
Mounting Type	Floor Mount (Freestanding)
Door Style	Shutter
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, missing parts, or any questions regarding the assembly or operation of your COSTWAY Wooden Corner Cabinet, please contact COSTWAY customer service. Refer to the contact information provided on the product packaging or the official COSTWAY website.

