

ZACHVO A015A-DS-DE

ZACHVO A015A-DS-DE 15L Air Fryer Instruction Manual

Model: A015A-DS-DE | Brand: ZACHVO

1. INTRODUCTION

Thank you for purchasing the ZACHVO A015A-DS-DE 15L Air Fryer. This appliance utilizes advanced 360° hot air technology to cook a variety of foods with significantly less oil, promoting healthier cooking. This manual provides essential information for safe operation, maintenance, and optimal use of your new air fryer. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- The appliance features an automatic alarm function and auto-shutdown when the door is opened. This allows for safe checking of cooking status.

3. PRODUCT OVERVIEW AND COMPONENTS

The ZACHVO A015A-DS-DE Air Fryer is a versatile kitchen appliance designed for various cooking methods including roasting, grilling, baking, and dehydrating. It features a 15-liter capacity and a user-friendly LCD touchscreen.



Figure 3.1: ZACHVO A015A-DS-DE Air Fryer with a roasted chicken inside and various accessories displayed on the right, including a rotisserie spit, rolling cage, mesh baskets, and a drip tray.

3.1 Main Unit Features:

- **Control Panel:** LCD touchscreen with intuitive icons for power, menu selection, temperature/time adjustment, rotation mode, light, and lock.
- **Transparent Window:** Allows real-time monitoring of the cooking process without opening the door.
- **Interior Light:** Illuminates the cooking chamber for better visibility.
- **Air Vents:** Located at the back and sides for proper air circulation.

3.2 Included Accessories:

The air fryer comes with 7 accessories to enhance your cooking experience:

ZUBEHÖR & NUTZUNGEN


1. Hühnergabel

Zum braten eines 1,5 kg schweren hähnchens.



2. Rollclip

Zum herausnehmen der heißen hühnergabel, des rollkäfigs und des drehspießes, die mit gegartem essen gefüllt sind.

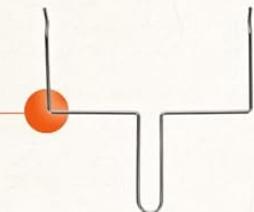

3. Rotisserie

Zum grillen.




4. Überrollkäfig

Zum frittieren von pommes frites, oder, zur herstellung von popcorn.



5. Netzkorb

Zum grillen von steak/meeresfrüchten, oder, zum toasten von brot.

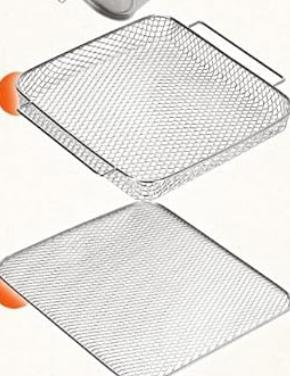

6. Mesh-Tablett

Zur herstellung einer 8"-9" pizza, oder, zum trocknen von gemüse/obst/fleisch.



7. Ölwanne

Ölauffangwanne



Figure 3.2: Detailed view of the ZACHVO Air Fryer accessories including chicken fork, rollclip, rotisserie, rolling cage, mesh basket, mesh tray, and oil drip tray, with illustrations of their primary uses.

1. **Chicken Fork (Rotisserie Spit):** Used for roasting whole chickens up to 1.5 kg.
2. **Rollclip:** For safely removing hot accessories like the chicken fork or rolling cage.
3. **Rotisserie:** Ideal for grilling various foods, providing a barbecue experience.
4. **Rolling Cage:** Perfect for frying snacks like chips or making popcorn, ensuring even cooking.
5. **Mesh Basket:** Suitable for barbecuing, roasting, or toasting foods such as steak and bread.

6. **Mesh Tray:** Can be used for drying fruits or preparing 9-inch pizzas.
7. **Oil Drip Tray:** Placed at the bottom to collect excess oil and food debris, making cleaning easier.

4. SETUP AND FIRST USE

4.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all listed accessories are present and in good condition.

4.2 Cleaning Before First Use

- Wipe the exterior of the air fryer with a damp cloth.
- Clean all accessories (chicken fork, rolling cage, mesh baskets, drip tray) with warm soapy water. Rinse thoroughly and dry completely.
- Do not immerse the main unit in water or any other liquid.

4.3 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for adequate ventilation.
- Do not place the appliance directly under wall cabinets or near flammable materials.

4.4 Initial Burn-Off (Optional but Recommended)

- Plug the air fryer into a grounded wall outlet.
- Run the appliance empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.
- Allow the appliance to cool down completely before proceeding.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

ZACHVO MULTIFUNKTIONALE LUFTFRITEUSE MIT LCD-BERÜHRUNGSBILDSCHIRM



Figure 5.1: Close-up of the ZACHVO Air Fryer's LCD touchscreen control panel, showing various cooking programs and control buttons.

The air fryer features an intuitive LCD touchscreen. The main controls include:

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Menu Button:** Cycles through the preset cooking programs.
- **Temperature/Time Adjustment Buttons (+/-):** Used to increase or decrease cooking temperature and time.
- **Rotation Mode Button (Roll):** Activates/deactivates the 360° rotation for accessories like the rolling cage or rotisserie.

- **Light Button:** Turns the interior light on/off.
- **Lock Button:** Locks the control panel to prevent accidental changes during operation.

5.2 Basic Operation Steps

1. **Prepare Food:** Place your food inside the appropriate accessory (e.g., mesh basket, rolling cage, rotisserie spit).
2. **Insert Accessory:** Carefully slide the accessory into the air fryer's cooking chamber. Ensure the drip tray is at the bottom.
3. **Close Door:** Close the air fryer door securely.
4. **Power On:** Press the Power button to turn on the appliance.
5. **Select Program:** Press the Menu button to cycle through the 10 preset programs.
6. **Adjust Settings:** If needed, use the Temperature/Time adjustment buttons to modify the default temperature and cooking time for the selected program.
7. **Activate Rotation (if applicable):** For rotisserie or rolling cage cooking, press the Rotation Mode button.
8. **Start Cooking:** Press the Power button again to start the cooking process. The display will show the remaining cooking time.
9. **Monitor Cooking:** Use the transparent window and interior light to monitor food. The appliance will automatically pause if the door is opened.
10. **Finish Cooking:** The air fryer will beep when cooking is complete. Carefully remove the cooked food using the Rollclip and heat-resistant gloves.

5.3 Using the Rotisserie Function



Figure 5.2: Illustration of the 360° hot air circulation feature, highlighting the rotisserie function for a whole chicken and the rolling cage for smaller items like fries.

To use the rotisserie for a whole chicken or other large items:

- Secure the food onto the chicken fork/rotisserie spit.
- Insert the rotisserie spit into the designated slots inside the air fryer.
- Select a suitable program or set temperature/time manually.
- Press the Rotation Mode button to activate the 360° rotation for even cooking.

ZACHVO ALLES IN EINEM LUFTFRITEUSE™

BARBECUE

8"-9"-PIZZA BACKEN

ENTHYDRATEN

BRATEN

GRILLEN

1,5 KG HÄHNCHEN BRATEN

ALLES IN EINEM

=

Elektrische Grillplatte + Backofen + Rotisserie + Grill + Dörrautomat

Figure 5.3: Visual representation of the ZACHVO Air Fryer's multi-functional capabilities, including BBQ, dehydrating, roasting, grilling, and baking pizzas and whole chickens.

The ZACHVO Air Fryer offers 10 carefully developed preset programs for various cooking preferences. Refer to the appliance's display for specific program icons and default settings. Common programs include:

- Fries
- Chicken (whole or pieces)
- Steak/Meat
- Fish
- Shrimp
- Pizza (up to 9 inches)
- Bake
- Dehydrate (for fruits, vegetables)
- Roast
- Reheat

You can adjust the temperature and time for any preset program to suit your specific recipe and desired doneness.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

6.1 Before Cleaning

- Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.

6.2 Cleaning the Main Unit

- Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- Clean the interior chamber with a damp cloth and mild soap. For stubborn food residue, a non-abrasive sponge can be used.
- Never immerse the main unit in water or any other liquid.

6.3 Cleaning Accessories

- All removable accessories (chicken fork, rollclip, rotisserie, rolling cage, mesh basket, mesh tray, oil drip tray) are dishwasher safe.
- Alternatively, wash them in warm soapy water, rinse thoroughly, and dry completely before storage.
- For baked-on food, soak accessories in warm soapy water for 15-20 minutes before cleaning.

6.4 Storage

- Ensure the air fryer and all accessories are clean and dry before storing.
- Store the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your ZACHVO Air Fryer, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If the issue persists, contact customer support.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; rotation not activated.	Do not overcrowd the cooking chamber. Cook in smaller batches if necessary. Adjust temperature and time. Ensure rotation mode is active for rotisserie/rolling cage. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Fat/oil residue from previous use; fatty food being cooked.	Clean the drip tray and interior thoroughly after each use. For fatty foods, ensure the drip tray is in place and consider reducing the amount of oil used.
Appliance stops during operation.	Door opened; overheating protection activated.	The appliance automatically pauses when the door is opened. Close the door to resume. If it stops unexpectedly, unplug it, let it cool for 30 minutes, then plug it back in.
Touchscreen unresponsive or changes programs randomly.	Temporary software glitch; moisture on screen; hardware issue.	Unplug the unit for a few minutes, then plug it back in. Ensure the screen is clean and dry. If the problem persists, contact customer support.

8. SPECIFICATIONS



Figure 8.1: Image illustrating the dimensions of the ZACHVO Air Fryer: 38 cm height, 33 cm width, and 33 cm depth.

Feature	Detail
Brand	ZACHVO
Model Number	A015A-DS-DE
Capacity	15 Litres
Power / Wattage	1700 Watts
Voltage	220 Volts
Product Dimensions (L x W x H)	38 x 33 x 33 cm
Item Weight	7.2 kg
Material	304 Stainless Steel Camber & Accessories

Feature	Detail
Auto Shutoff	Yes
Special Features	Touch screen, spinning function, dishwasher safe accessories
Color	Silver, Black

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. ZACHVO is committed to providing quality products and customer satisfaction.

If you require further assistance, have questions about your product, or need to report a defect, please contact ZACHVO customer support through their official website or the contact information provided by your retailer.

© 2023 ZACHVO. All rights reserved. Information in this manual is subject to change without notice.