

[Manuals.plus](#) /

› [Cuisinart](#) /

› Cuisinart Coffee Center Barista Bar 4-In-1 Coffee Machine User Manual

Cuisinart SS-4N1NAS

Cuisinart Coffee Center Barista Bar 4-In-1 Coffee Machine User Manual

Model: SS-4N1NAS | Brand: Cuisinart

INTRODUCTION

Bring the café home with the Cuisinart® Coffee Center® Barista Bar, and experience four brew options with compact convenience. This versatile machine allows you to serve friends and family with 12 cups of fresh coffee brewed to perfection with programmable time, temperature, and strength settings. For individual servings, go solo with single-serve cups in 6-, 8-, and 10-ounce sizes, compatible with most single-serve pods. For extra-bold flavor, you can use Nespresso® OriginalLine-style capsules to enjoy a single or double shot of espresso. The integrated steam wand provides versatility for frothed and steamed milk, perfect for cappuccinos, lattes, or other specialty drinks, and can also dispense hot water for tea, matcha, hot cereals, and soups. With its sleek modern styling and total versatility, this space-saving all-in-one unit is designed to be a central part of any kitchen.

KEY FEATURES

- **Drip Coffee:** Fully automatic brewing with 24-hour programmability and a 12-cup glass carafe.
- **Convenient Features:** Adjustable Keep Warm and Auto Shutoff, plus Brew Pause for pouring a cup mid-brew.
- **Brew Control:** Customizable brew strength with included gold tone permanent filter and charcoal water filter.
- **Single Serve Brewer:** Three brewing sizes (6oz, 8oz, or 10oz) compatible with Keurig K-Cup* or other pods, and single/double espresso sizes.
- **Nespresso Compatible Capsule Brewer:** Designed for Nespresso Original Line-style capsules.
- **Steam Wand:** For frothed/steamed milk and hot water dispensing.

PRODUCT OVERVIEW



The Cuisinart Coffee Center Barista Bar is a versatile 4-in-1 coffee machine designed for various brewing methods. This image shows the complete unit, highlighting its sleek black and stainless steel design, the 12-cup glass carafe on the left, and the single-serve and espresso brewing area on the right, complete with a steam wand.

Coffee Center[®] Barista Bar 4-in-1 Coffeemaker



This image illustrates the key dimensions of the Cuisinart Coffee Center Barista Bar, which are approximately 16.8 inches in height, 13 inches in width, and 12 inches in depth. These measurements are important for ensuring the unit fits in your desired kitchen space.

SETUP

Initial Setup

1. Unpack all components and remove any packaging materials.
2. Place the unit on a clean, flat, and stable surface.
3. Clean all removable parts (carafe, filter basket, water reservoir, etc.) with warm, soapy water before first use. Rinse thoroughly.
4. Fill the water reservoir with fresh, cold water up to the MAX fill line.
5. Perform an initial cleaning cycle by running a full brew cycle with only water (no coffee or pods) through both the drip coffee side and the single-serve side.

Components for 12-Cup Brewing



This image displays the components specifically used for the 12-cup drip coffee brewing function: the filter basket, the charcoal water filter, the charcoal water filter holder, and the glass carafe. Ensure these are correctly assembled before brewing drip coffee.

Components for Single Serve Brewing



This image shows the components for single-serve brewing: the 72-oz removable water reservoir, the removable espresso capsule holder, the HomeBarista reusable filter cup, and the removable capsule holder. These parts are essential for preparing single-serve coffee or espresso.

OPERATING INSTRUCTIONS

Drip Coffee Brewing (12-Cup Carafe)

1. Ensure the water reservoir is filled with fresh, cold water.
2. Insert the charcoal water filter into its holder and place it in the reservoir.
3. Place a paper filter or the reusable gold-tone filter into the filter basket.
4. Add desired amount of ground coffee to the filter basket (max 15 scoops).
5. Place the glass carafe on the warming plate.
6. Select the "Brew" function using the control knob.

7. Press the START/STOP button to begin brewing.
8. The "Brew Pause" feature allows you to temporarily remove the carafe during brewing to pour a cup. Return the carafe within 20 seconds to prevent overflow.

Single-Serve Pod Brewing (K-Cup Compatible)

1. Ensure the water reservoir is filled with fresh, cold water.
2. Lift the single-serve handle to open the brew head.
3. Insert a K-Cup compatible pod or the HomeBarista reusable filter cup filled with ground coffee into the holder.
4. Close the handle firmly until it clicks.
5. Place your mug on the drip tray.
6. Select your desired brew size (6oz, 8oz, or 10oz) using the control knob.
7. Press the START/STOP button to begin brewing.

Espresso Brewing (Nespresso OriginalLine Compatible)

1. Ensure the water reservoir is filled with fresh, cold water.
2. Lift the single-serve handle to open the brew head.
3. Insert a Nespresso OriginalLine-style capsule into the espresso capsule holder.
4. Close the handle firmly until it clicks.
5. Place your espresso cup on the drip tray.
6. Select your desired espresso size (single or double) using the control knob.
7. Press the START/STOP button to begin brewing.

Steam Wand / Milk Frothing

1. Fill a frothing pitcher with cold milk (dairy or non-dairy).
2. Position the steam wand just below the surface of the milk.
3. Select the "Steam" function using the control knob.
4. Press the START/STOP button to activate the steam.
5. Move the pitcher up and down to create foam. Once desired froth is achieved, submerge the wand deeper to heat the milk.
6. Press the START/STOP button to stop steaming.
7. Wipe the steam wand immediately after use with a damp cloth to prevent milk residue from drying.

Hot Water Dispensing

1. Ensure the water reservoir is filled with fresh, cold water.
2. Place a cup under the steam wand.
3. Select the "Hot Water" function using the control knob.
4. Press the START/STOP button to dispense hot water.
5. Press the START/STOP button again to stop dispensing.

Product Overview Video

Your browser does not support the video tag.

This video provides a comprehensive overview of the Cuisinart Coffee Center Barista Bar, demonstrating its various functions and features, including the drip coffee, single-serve, espresso, and steam wand capabilities. It offers a visual

guide to operating the machine.

MAINTENANCE

Cleaning

- Always unplug the coffeemaker before cleaning.
- Wash the carafe, filter basket, single-serve parts, and drip tray in warm, soapy water after each use. These parts are top-rack dishwasher safe.
- Wipe the exterior of the unit with a damp cloth. Do not immerse the unit in water.
- **Descaling:** Regular descaling is necessary to remove mineral deposits. The unit has a "Clean" indicator. To descale the single-serve side, rotate the START/STOP knob to the "Clean" setting (where both Espresso and POD are highlighted but no sizes are selected). Press START/STOP to begin. For the drip coffee side, use the dedicated "Clean" button. Follow the manual's instructions for vinegar-water solution ratios.
- Clean the steam wand immediately after each use by wiping it with a damp cloth to prevent milk residue buildup. Run a short burst of steam through it to clear any internal blockages.

Filter Replacement

- The charcoal water filter should be replaced approximately every 60 days or after 60 uses, or more often if you have hard water.
- Refer to the full instruction manual for detailed filter replacement procedures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee not brewing / Unit not turning on.	Unit not plugged in; power outage; water reservoir empty.	Ensure unit is securely plugged in. Check power supply. Fill water reservoir.
K-Cup/Nespresso pod overflow or leakage.	Pod not seated correctly; too much water for pod size; unit needs descaling.	Ensure pod is firmly seated. Select appropriate brew size. Perform descaling cycle.
Drip coffee overflow.	Too much coffee grounds; filter basket clogged; carafe not properly placed.	Do not exceed max coffee grounds (15 scoops). Clean filter basket. Ensure carafe is fully seated.
Steam wand not frothing milk effectively.	Wand clogged; insufficient steam pressure.	Clean steam wand thoroughly. Ensure unit is heated to proper temperature for steaming.
Lid for single-serve area difficult to open.	Pressure buildup; mechanism sticky.	Allow unit to cool slightly. Gently try to open. If persistent, contact customer support.

For more detailed troubleshooting, please refer to the complete product manual or contact Cuisinart customer support.

SPECIFICATIONS

Brand: Cuisinart

Model Name: Coffee Center™ Barista Bar 4-in-1 Coffeemaker

Model Number: SS-4N1NAS

Color: Black

Product Dimensions: 11.88"D x 12.88"W x 16.75"H

Item Weight: 14 pounds

Voltage: 110 Volts

Coffee Maker Type: Drip Coffee Machine

Filter Type: Reusable

Operation Mode: Fully Automatic

Special Features: Auto Shut-Off, Milk Frother

Included Components: Filter, Carafe

WARRANTY AND SUPPORT

The Cuisinart Coffee Center Barista Bar SS-4N1NAS comes with a**3-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal home use from the date of original purchase.

For warranty claims, technical support, or service inquiries, please contact Cuisinart customer service. You may be required to provide proof of purchase and the product's model number. In some cases, for warranty replacements, you might be asked to cut the power cord and provide a picture to the manufacturer.

For the most up-to-date contact information and detailed warranty terms, please visit the official Cuisinart website or refer to the warranty card included with your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why are the Nestle's capsules not being punctured in my Cuisinart Coffee Center Barista Bar SS-4N1NAS?

If your Cuisinart Coffee Center Barista Bar (SS-4N1NAS) is failing to puncture the top of your capsules (such as Nespresso OriginalLine-style or K-Cup pods), please check the following: Check the Capsule Seating: Ensure the capsule...

[Read full answer](#)