

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-999 Professional Rechargeable Cordless Beard Hair Trimmer Kit Instruction Manual](#)

VGR V-999

VGR V-999 Professional Rechargeable Cordless Beard Hair Trimmer Kit Instruction Manual

Model: V-999

1. PRODUCT OVERVIEW

The VGR V-999 is a professional rechargeable cordless beard and hair trimmer kit designed for precise grooming. It features self-sharpening stainless-steel blades, a dual power motor with a turbo function, and a long-lasting rechargeable Li-ion battery.



Image 1: VGR V-999 Trimmer with key features highlighted (ON/OFF button, Precision T-Blade, USB charging, indicator light).

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from children.
- Ensure the charging voltage matches the specifications of your power adapter.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Unplug the appliance before cleaning.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VGR V-999 Trimmer
- USB Charging Cable

- 4 Guide Combs (1.5mm, 3mm, 4.5mm, 6mm)
- Blade Oil
- Cleaning Brush
- Instructions Manual



Image 2: The VGR V-999 Trimmer and its complete kit, including guide combs, charging cable, oil, and brush.

4. CHARGING THE TRIMMER

The VGR V-999 trimmer is equipped with a rechargeable 600 mAh Li-ion battery.

1. Connect the USB charging cable to the trimmer's USB port.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
3. The indicator light on the trimmer will illuminate to show that it is charging.
4. A full charge takes approximately 1.5 hours and provides up to 120 minutes of cordless operation.
5. The trimmer can also be used while corded if the battery is low.

5. ATTACHING AND DETACHING GUIDE COMBS

The trimmer comes with 4 attachment combs to achieve various cutting lengths.



Image 3: The VGR V-999 Trimmer shown with its four guide combs (1.5mm, 3mm, 4.5mm, 6mm).

To Attach a Guide Comb:

1. Select the desired guide comb (1.5mm, 3mm, 4.5mm, or 6mm).
2. Align the comb with the trimmer blade and slide it on until it clicks into place.

To Detach a Guide Comb:

1. Gently push the comb upwards from the back of the blade until it detaches.
2. You can also use the trimmer without a comb for a close trim (0mm).

6. OPERATING INSTRUCTIONS

The VGR V-999 trimmer is suitable for both dry and wet use. Its self-sharpening stainless-steel blades are designed with an R-shape for skin protection.



Image 4: A man demonstrating the use of the VGR V-999 Trimmer for hair trimming.

Basic Trimming Steps:

1. Ensure the trimmer is charged or connected to power.
2. Attach the desired guide comb for your preferred trimming length.
3. Press the ON/OFF button to start the trimmer.
4. Move the trimmer against the direction of hair growth for an even cut.
5. For a closer trim, remove the guide comb and carefully trim.
6. The turbo function provides extra power when needed for thicker hair.
7. After use, press the ON/OFF button to turn off the trimmer.

Caution:

- While the blades are R-shaped for skin protection, exercise caution when trimming around sensitive areas or if you have skin conditions like pimples.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your trimmer.

Cleaning the Blades:

1. Turn off the trimmer and disconnect it from power.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades.
4. For a more thorough clean, the blades can be rinsed under running water. Ensure the trimmer body does not get wet if it is not waterproof.
5. Allow the blades to air dry completely before reattaching or storing.

Oiling the Blades:

1. After cleaning and drying, apply a small drop of the included blade oil to the teeth of the blades.
2. Turn on the trimmer for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.
4. Oiling helps maintain blade sharpness and reduces friction.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer for 1.5 hours.
Trimmer runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean and oil the blades as per maintenance instructions.
Trimmer does not charge.	Charging cable or adapter is faulty.	Check connections, try a different USB cable or adapter.

9. SPECIFICATIONS

Feature	Detail
Model Number	V-999
Power Source	Battery Powered (Rechargeable Li-ion)
Battery Capacity	600 mAh
Charging Time	Approx. 1.5 hours
Runtime	Up to 120 minutes
Blade Material	Stainless Steel
Trimming Range	0mm to 6mm (with guide combs)
Dimensions (L x W x H)	18 x 8 x 5 cm
Item Weight	310 g
Special Feature	Rechargeable, Dual Motor, Turbo Function

10. WARRANTY AND SUPPORT

The VGR V-999 Trimmer comes with a 12-month quality warranty from the date of purchase. For any product-related inquiries, issues, or warranty claims, please contact VGR customer service. Refer to the product packaging or the official VGR website for the most current contact information. Please retain your purchase receipt as proof of purchase for warranty purposes.

© 2023 VGR. All rights reserved.