

REBUNE RE-2-089

REBUNE RE-2-089 Coffee Grinder

INSTRUCTION MANUAL

Introduction

Thank you for choosing the REBUNE RE-2-089 Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Ensure the lid is securely locked in place before operating the appliance.

Product Overview

The REBUNE RE-2-089 is an electric coffee grinder designed for home use, offering 35 adjustable grind levels to suit various brewing methods. It features a durable plastic body and a detachable top part for easy cleaning.



Image: The REBUNE RE-2-089 Coffee Grinder, showcasing its design and key features like 200W power, 210g capacity, and 2-year warranty.

Components:

- **Bean Hopper:** Holds whole coffee beans (capacity: 210g).
- **Grind Size Selector:** Dial to adjust between 35 grind levels.
- **Grinding Chamber:** Where beans are ground.
- **Ground Coffee Container:** Collects the ground coffee.
- **Power Button/Timer:** One-touch operation with adjustable grinding time (0-30 seconds).
- **Detachable Top Part:** For easy access and cleaning.

Setup

Follow these steps to set up your coffee grinder for the first time:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the bean hopper, grinding chamber, and ground coffee container. Refer to the 'Cleaning and Maintenance' section for detailed instructions. Ensure all parts are completely dry before assembly.
3. **Assemble:** Place the ground coffee container into its designated slot. Ensure the bean hopper is securely attached to the main unit.
4. **Placement:** Place the grinder on a stable, flat, and dry surface.
5. **Power Connection:** Plug the power cord into a standard 220-240V, 50/60Hz electrical outlet.

Operating Instructions

Operating your REBUNE coffee grinder is straightforward:

1. **Add Beans:** Open the lid of the bean hopper and pour in the desired amount of whole coffee beans. Do not exceed the maximum capacity of 210 grams. Close the lid securely.
2. **Select Grind Size:** Rotate the grind size selector dial to your desired setting. Refer to the 'Grind Settings' section for recommendations based on your brewing method.
3. **Set Grinding Time:** Use the timer function to select the desired grinding duration, typically between 0 and 30 seconds, depending on the amount of coffee and desired fineness.
4. **Start Grinding:** Press the one-touch power button to start the grinding process. The grinder will operate for the set duration.
5. **Collect Ground Coffee:** Once grinding is complete, carefully remove the ground coffee container and use the freshly ground coffee immediately for optimal flavor.
6. **Unplug:** Always unplug the appliance after use.

Grind Settings

The REBUNE RE-2-089 offers 35 grind levels, allowing you to customize your coffee for various brewing methods. Generally, a finer grind is suitable for espresso, while a coarser grind is ideal for French press.

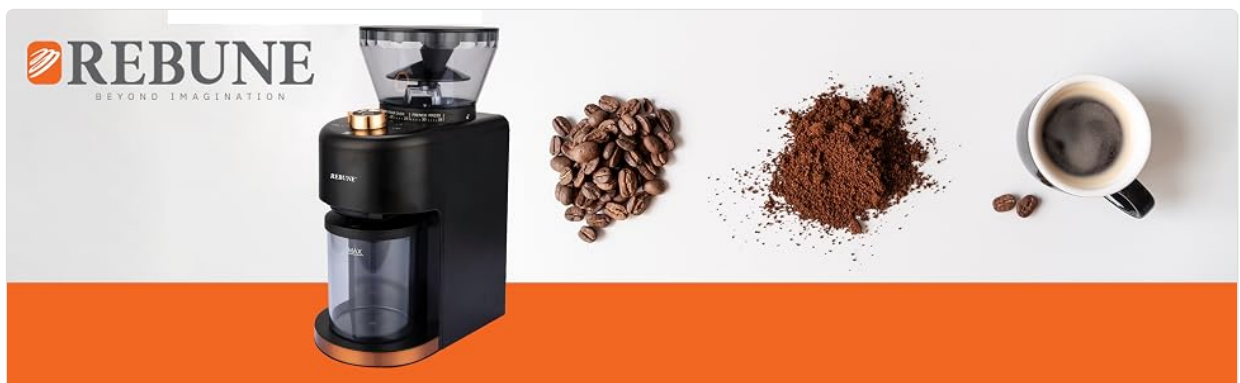


Image: Illustration of coffee beans, medium ground coffee, and fine ground coffee, demonstrating the versatility of grind settings.

Grind Level	Description	Recommended Brewing Method
1-5	Extra Fine	Turkish Coffee
6-10	Fine	Espresso, Moka Pot

Grind Level	Description	Recommended Brewing Method
11-20	Medium	Drip Coffee, Pour Over
21-30	Coarse	French Press, Percolator
31-35	Extra Coarse	Cold Brew

Experiment with different settings to find your preferred grind for optimal flavor extraction.

Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your grinder.

- **Always Unplug:** Before cleaning, ensure the grinder is unplugged from the power outlet.
- **Disassemble:** Remove the bean hopper lid, bean hopper, and ground coffee container. The top part of the grinder is detachable for easier access to the grinding burrs.
- **Clean Removable Parts:** Wash the bean hopper, its lid, and the ground coffee container with warm, soapy water. Rinse thoroughly and dry completely before reassembling. These parts are generally not dishwasher safe.
- **Clean Grinding Chamber and Burrs:** Use a small brush (often included with grinders) or a dry cloth to remove any residual coffee grounds from the grinding burrs and chamber. Do not use water or wet cloths on the burrs or inside the motor housing.
- **Wipe Exterior:** Wipe the exterior of the motor base with a damp cloth. Do not use abrasive cleaners or immerse the motor base in water.
- **Reassemble:** Once all parts are clean and dry, reassemble the grinder. Ensure all parts are correctly in place before plugging it back in.

Troubleshooting

If you encounter any issues with your REBUNE RE-2-089 coffee grinder, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; power outage; lid not properly closed; timer not set.	Ensure plug is firmly in outlet; check power supply; ensure bean hopper lid is securely closed; set grinding time.
Inconsistent grind.	Burrs are dirty or clogged; incorrect grind setting for bean type.	Clean the grinding burrs and chamber thoroughly; adjust grind setting.
Grinder stops during operation.	Overheating; bean hopper empty; timer expired.	Allow unit to cool down; refill bean hopper; reset timer.
Ground coffee not dispensing.	Output chute clogged with fine grounds.	Unplug unit and carefully clear the chute with a small brush.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Feature	Detail
Model Number	RE-2-089
Brand	REBUNE
Power	200 Watts
Capacity	210 Grams
Voltage	220-240 Volts
Frequency	50/60 Hz
Material	Plastic
Grind Levels	35 adjustable levels
Included Components	Device, User Manual, Warranty Card

Warranty and Support

Your REBUNE RE-2-089 Coffee Grinder comes with a **24-month manufacturer's warranty** against manufacturing defects. Please retain your proof of purchase and the warranty card included in the package. For warranty claims, technical support, or any inquiries, please refer to the contact information provided on your warranty card or visit the official REBUNE website. Ensure you have your model number (RE-2-089) and purchase details ready when contacting support.