

[Manuals.plus](#) /

› [Arrow Dancer](#) /

› Arrow Dancer P91 Pro Wireless Earbuds Instruction Manual

## Arrow Dancer AD-P91-Pro-Black

# Arrow Dancer P91 Pro Wireless Earbuds

Model: AD-P91-Pro-Black

Instruction Manual

## INTRODUCTION

Welcome to the world of immersive audio with your new Arrow Dancer P91 Pro Wireless Earbuds. These earbuds are designed to provide a superior listening experience with advanced features such as Active Noise Canceling (ANC), Environmental Noise Canceling (ENC), HiFi sound, and intuitive touch controls. With Bluetooth 5.3 connectivity and a long-lasting battery, you can enjoy seamless audio freedom throughout your day. This manual will guide you through the setup, operation, and maintenance of your earbuds to ensure optimal performance.

## WHAT'S IN THE BOX

- Arrow Dancer P91 Pro Earbuds
- Wireless Charging Case
- Type-C Charging Cable
- Ear Cushions (various sizes)
- User Manual (this document)
- Gift Box


## PRODUCT OVERVIEW



The P91 Pro Earbuds neatly stored within their charging case, showcasing the digital LED display on the front.




An angled perspective of the earbuds and their charging case, highlighting their sleek design.

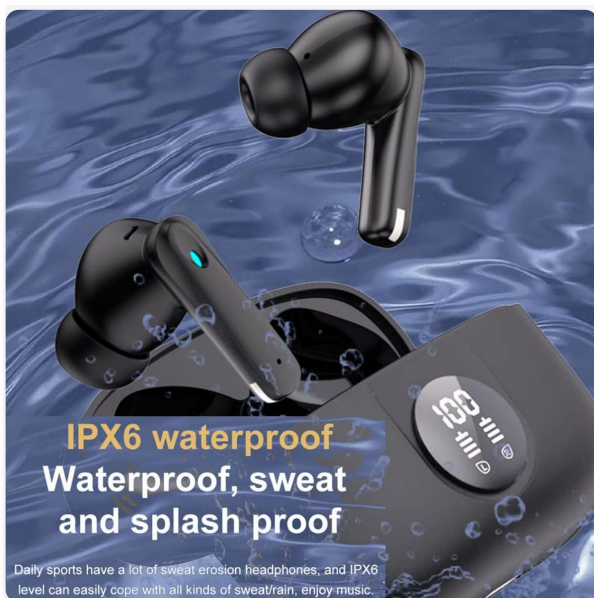

The earbuds are shown in a water-resistant environment, illustrating their IPX7 waterproof capability, making them suitable for sports and outdoor activities.

Whale stereo sound, sound beautiful !

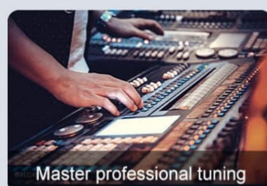

In addition to listening to music  
but also a lot of talent

An X-ray view of the earbud reveals its internal structure, including the ANC chip, composite moving coil horn, and master professional tuning for superior sound.

## Headphones can be used alone

New dual-core Bluetooth chip, left and right ear separation design,  
two headphones can be used alone, easy and convenient.



Demonstration of a single earbud being used independently, connected to a smartphone, highlighting the dual-core Bluetooth chip and left/right ear separation design.



Detailed dimensions of the earbuds and charging case, providing precise measurements for portability and fit.

### Official Product Video

Watch the official product video for the Arrow Dancer P91 Pro Wireless Earbuds, showcasing key features, design, and functionality.

### SPECIFICATIONS

| Feature                             | Description                                                           |
|-------------------------------------|-----------------------------------------------------------------------|
| Model Name                          | AD-P91PRO-Style-TWS-Earbuds                                           |
| Connectivity Technology             | Wireless (Bluetooth 5.3)                                              |
| Wireless Range                      | Up to 15 meters                                                       |
| Noise Control                       | Active Noise Cancellation (ANC) & Environmental Noise Canceling (ENC) |
| Audio Driver Type                   | Dynamic Driver (13mm)                                                 |
| Control Type                        | Touch Control                                                         |
| Battery Life (Earbuds)              | Up to 24 hours (single charge)                                        |
| Total Playtime (with Charging Case) | Up to 36 hours                                                        |
| Charging Time (Earbuds)             | Approx. 1.5 hours                                                     |
| Charging Time (Case)                | Approx. 60 minutes                                                    |
| Water Resistance Level              | IPX7 (Water Resistant)                                                |

| Feature              | Description                       |
|----------------------|-----------------------------------|
| Dimensions (Product) | 3.9 x 3.9 x 1.34 inches           |
| Item Weight          | 3.2 ounces                        |
| Material             | Plastic, Metal, Rubber, ABS       |
| Compatible Devices   | Android and iOS devices, Desktops |

## SETUP GUIDE

### 1. Initial Charging

Before first use, fully charge your Arrow Dancer P91 Pro Earbuds and their charging case.

1. Place both earbuds into the charging case.
2. Connect the provided Type-C charging cable to the charging port on the case and a USB power source (e.g., wall adapter, computer USB port).
3. The digital LED display on the charging case will show the battery percentage, indicating charging status. Allow approximately 60 minutes for the case to fully charge, and 1.5 hours for the earbuds.

### 2. Pairing with Your Device

The P91 Pro Earbuds feature one-step pairing and auto-connect capability for convenience.

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode, and their indicator lights will flash.
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
4. Search for available devices and select "P91 Pro" from the list.
5. Once connected, the earbud indicator lights will turn off, and your device will confirm the connection.
6. For subsequent uses, simply open the charging case lid, and the earbuds will automatically connect to the last paired device.

## OPERATING INSTRUCTIONS

### Touch Controls

The P91 Pro Earbuds feature intuitive touch controls on each earbud. The specific functions may vary slightly based on your device and application.

| Gesture                        | Function                                                                           |
|--------------------------------|------------------------------------------------------------------------------------|
| Single Tap (Left/Right Earbud) | Play/Pause Music, Answer/End Call                                                  |
| Double Tap (Left Earbud)       | Activate Active Noise Canceling (ANC) / Transparency Mode (intended functionality) |
| Double Tap (Right Earbud)      | Next Track                                                                         |

| Gesture                        | Function                              |
|--------------------------------|---------------------------------------|
| Triple Tap (Left Earbud)       | Volume Down                           |
| Triple Tap (Right Earbud)      | Volume Up                             |
| Long Press (Left/Right Earbud) | Reject Call, Activate Voice Assistant |

## ANC and ENC Modes

The P91 Pro Earbuds are equipped with Active Noise Canceling (ANC) and Environmental Noise Canceling (ENC) technologies to enhance your audio experience and call clarity.

- **Active Noise Canceling (ANC):** Reduces ambient noise, allowing you to focus on your music or calls without distractions. Ideal for noisy environments like public transport or offices.
- **Environmental Noise Canceling (ENC):** Utilizes dual microphones to filter out background noise during calls, ensuring your voice is crystal clear to the person on the other end.
- **Transparency Mode:** Allows you to hear your surroundings while still enjoying your audio, useful for awareness in urban environments or when interacting with others.

Switch between ANC, Transparency, and Normal modes using the designated touch control gesture (typically a double tap on the left earbud, as per intended functionality).

## MAINTENANCE

Proper care will extend the lifespan and performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. For ear tips, remove them and clean with mild soap and water, then dry thoroughly before reattaching. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them from dust, dirt, and physical damage. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the earbuds or case frequently. Charge them regularly, even if not in constant use.
- **Water Resistance:** While IPX7 rated, avoid prolonged submersion in water and do not expose to saltwater or other corrosive liquids. Ensure earbuds are dry before placing them back in the charging case.

## TROUBLESHOOTING

If you encounter issues with your Arrow Dancer P91 Pro Earbuds, try the following solutions:

- **Earbuds Not Pairing:**
  - Ensure both earbuds are charged and placed correctly in the charging case.
  - Turn off Bluetooth on your device, then turn it back on.
  - Forget/delete "P91 Pro" from your device's Bluetooth list and attempt to re-pair.
  - Try pairing with a different device to rule out device-specific issues.
- **No Sound or Low Volume:**
  - Check the volume levels on both your earbuds (via touch control) and your connected device.

- Ensure the earbuds are properly seated in your ears.
- Clean any debris from the earbud speaker mesh.
- Reconnect the earbuds to your device.

- **Charging Issues:**

- Ensure the charging cable is securely connected to both the case and the power source.
- Try a different charging cable or power adapter.
- Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.

- **ANC Not Activating/Incorrect Touch Control Response:**

- Ensure you are using the correct touch gesture (e.g., double tap on the left earbud) as per the operating instructions.
- Some users have reported variations in touch control response for ANC activation; ensure your finger covers the touch sensor area completely and firmly.
- Restart the earbuds by placing them in the case, closing the lid for a few seconds, and then reopening.

- **Intermittent Connection/Audio Dropouts:**

- Ensure you are within the 15-meter wireless range of your device.
- Minimize obstacles between the earbuds and your device (e.g., walls, large electronic devices).
- Avoid strong electromagnetic interference.

## WARRANTY AND SUPPORT

Your Arrow Dancer P91 Pro Wireless Earbuds come with a standard manufacturer's warranty. Please refer to the product packaging or the original purchase platform for specific warranty terms and conditions.

For further assistance, technical support, or warranty claims, please contact the Arrow Dancer customer service team through the retailer where you purchased the product or visit the official Arrow Dancer brand store on Amazon.

**Amazon Brand Store:** [Visit the Arrow Dancer Store](#)