

ECONTROLLY RC02

ECONTROLLY RC02 Replacement Remote Control User Manual

For BenQ DLP Projector Models: MX720, MW519, MS517F, MS517

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RC02 Replacement Remote Control. This remote is designed to be compatible with various BenQ DLP Projector models, including MX720, MW519, MS517F, and MS517. It functions as a direct replacement and requires no programming for operation.

2. SETUP: BATTERY INSTALLATION

The ECONTROLLY RC02 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



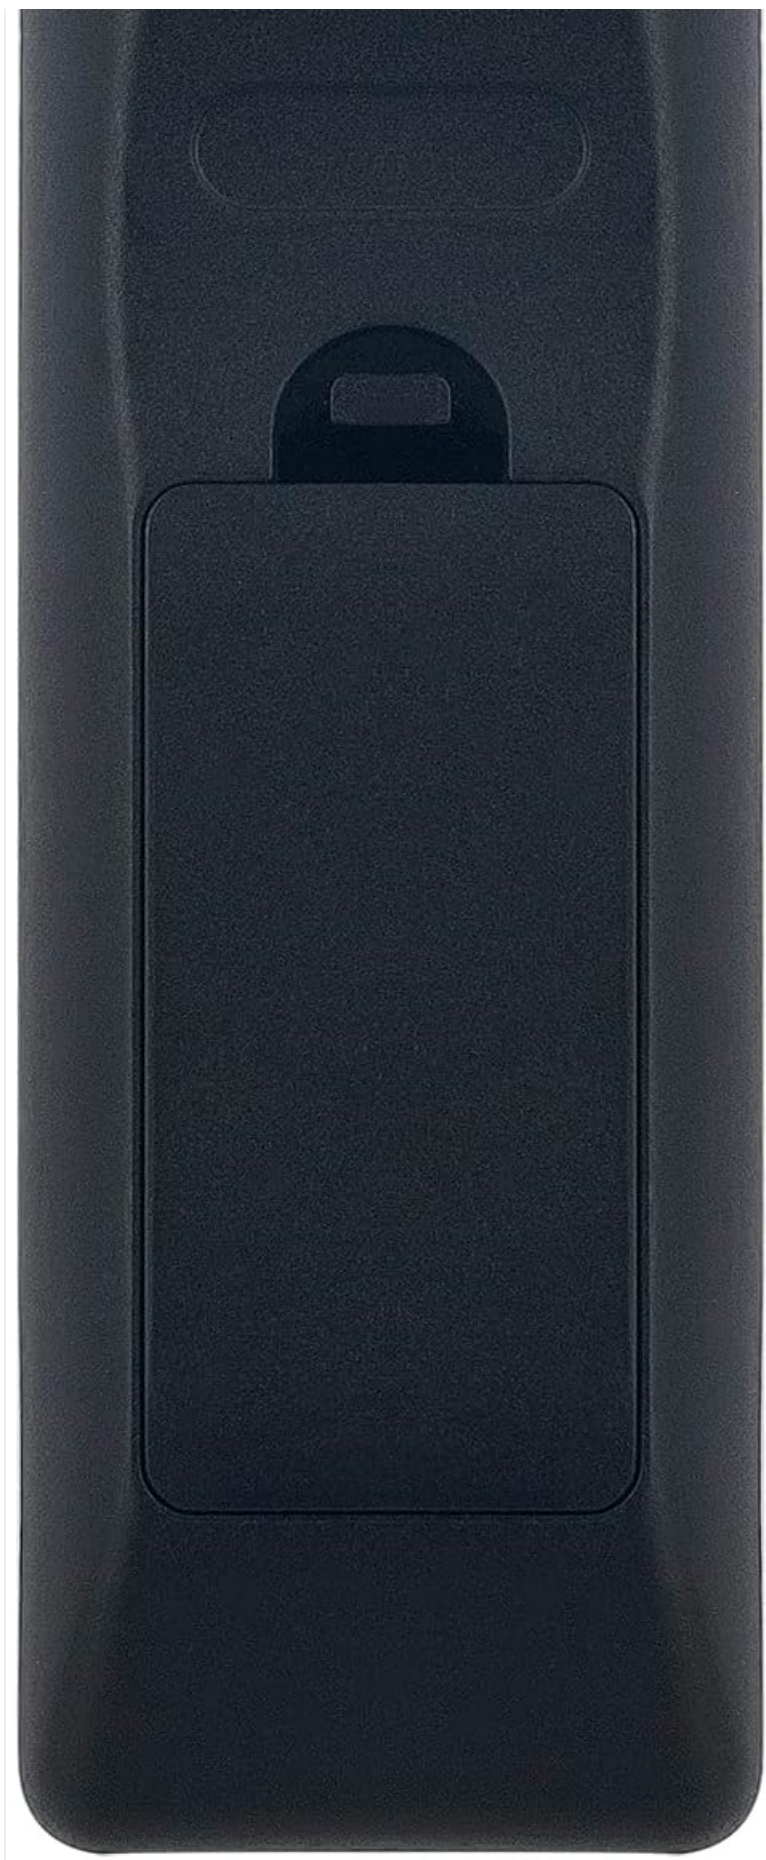


Figure 1: Rear view of the remote control with the battery compartment. The compartment cover is located at the bottom rear, designed to slide open for battery insertion.

3. OPERATING INSTRUCTIONS

The ECONTROLLY RC02 remote control is designed for immediate use with compatible BenQ DLP Projectors once batteries are installed. No additional programming or setup is required.





Figure 2: Front view of the ECONTROLLY RC02 remote control. This image displays the layout of all buttons, including power, navigation, volume, and function keys.

Basic Functions:

- **Power Button ():** Located at the top right, press to turn the projector on or off.
- **Navigation Pad:** Central circular pad with Up, Down, Left, Right arrows and a central "Mode/Enter" button for menu navigation and selection.
- **Volume Buttons (+ / -):** Adjust the audio output level of the projector.
- **Source Button:** Cycles through available input sources (e.g., HDMI, VGA).
- **Menu/Exit Button:** Accesses the projector's main menu and exits current menus.
- **Info Button:** Displays information about the current input or projector status.
- **Eco Blank / Smart Eco:** Activates power-saving modes.
- **Aspect Button:** Changes the aspect ratio of the projected image.
- **Mute Button:** Toggles audio mute on/off.
- **Digital Zoom (+ / -):** Adjusts the digital zoom level of the image.
- **Page Up / Down:** Used for navigating presentations or documents.
- **Freeze Button:** Pauses the current image on the screen.
- **CC (Closed Caption):** Toggles closed captions on/off.
- **Timer:** Accesses timer functions.
- **Setup:** Direct access to setup menus.
- **3D Settings:** Accesses settings related to 3D projection (if supported by projector).
- **Quick Install:** Initiates quick installation/setup wizard.
- **Teaching Template:** Accesses teaching templates (if supported by projector).



Figure 3: Angled view of the ECONTROLLY RC02 remote control. This perspective shows the side profile and button depth, illustrating its ergonomic shape.

4. SPECIFICATIONS

Feature	Detail
Model Number	RC02
Brand	ECONTROLLY
Compatible Projectors	BenQ DLP Projector MX720, MW519, MS517F, MS517
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	3 ounces

Feature	Detail
Special Feature	Ergonomic Design

5. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the projector's IR receiver.
 - Ensure you are within the effective range and line of sight of the projector.
- **Specific Button Not Working:**
 - Verify that the button's function is supported by your specific BenQ projector model.
 - Clean the remote control surface, especially around the button, to ensure no debris is interfering.

6. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

7. WARRANTY AND SUPPORT

Specific warranty details for the ECONTROLLY RC02 Replacement Remote Control are not provided in this manual. For warranty information, technical support, or assistance with product issues, please contact the seller or the manufacturer, ECONTROLLY, directly through their official support channels or the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question