

- [Manuals.plus](#) /
- › [ECONTROLLY](#) /
  - › DG11J1-16 Replace Remote Control fit for Hisense AC Air Conditioner DG11J1-01

ECONTROLLY DG11J1-16

# User Manual: ECONTROLLY DG11J1-16 Replacement Remote Control

For Hisense AC Air Conditioner DG11J1-01

## INTRODUCTION

This manual provides instructions for the ECONTROLLY DG11J1-16 Replacement Remote Control, designed to be compatible with Hisense AC Air Conditioner model DG11J1-01. This remote control offers a direct replacement solution, requiring no complex programming or setup beyond battery installation.

## PRODUCT OVERVIEW





**Figure 1:** Front view of the ECONTROLLY DG11J1-16 remote control. This image displays the full layout of the remote, including the LCD screen at the top and various function buttons such as ON/OFF, MODE, FAN, SWING, SLEEP, SUPER, SENSOR, DIMMER, IDM, TEMP DISP, TIMER, SILENT, HEATER, and SOFT.



**Figure 2:** Angled view of the ECONTROLLY DG11J1-16 remote control. This perspective highlights the ergonomic shape and the comfortable ABS environmental protection material of the remote, providing a better sense of its physical dimensions and button placement from a side angle.





**Figure 3:** Rear view of the ECONTROLLY DG11J1-16 remote control. This image shows the back of the remote, including the battery compartment cover and the infrared (IR) emitter at the top, which is used to send signals to the air conditioner.

## SETUP

---

### Battery Installation

The ECONTROLLY DG11J1-16 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control (refer to Figure 3).
2. Slide the cover downwards or press the latch to open the compartment.

3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.

## OPERATING INSTRUCTIONS

This remote control functions identically to the original Hisense AC Air Conditioner DG11J1-01 remote. Point the remote directly at the air conditioner's receiver when operating.

### Key Functions

| Button    | Function                                                                                             |
|-----------|------------------------------------------------------------------------------------------------------|
| ON/OFF    | Powers the air conditioner on or off.                                                                |
| MODE      | Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).                                   |
| FAN       | Adjusts fan speed (e.g., Low, Medium, High, Auto).                                                   |
| TEMP ▲/▼  | Increases or decreases the set temperature.                                                          |
| SWING ◀▶  | Controls horizontal louver swing.                                                                    |
| SWING ▲ ▼ | Controls vertical louver swing.                                                                      |
| SLEEP     | Activates or deactivates sleep mode for quiet operation and energy saving.                           |
| SUPER     | Activates rapid cooling or heating function.                                                         |
| SENSOR    | Activates or deactivates the 'I Feel' or room temperature sensor function.                           |
| DIMMER    | Adjusts the brightness of the air conditioner's display panel.                                       |
| IDM       | Intelligent Defrosting Mode (specific to some Hisense models).                                       |
| TEMP DISP | Changes the temperature display unit (e.g., Celsius/Fahrenheit) or shows indoor/outdoor temperature. |
| TIMER     | Sets the timer for automatic on/off operations.                                                      |
| SILENT    | Activates ultra-quiet operation mode.                                                                |
| HEATER    | Activates the heating function directly (if applicable to the AC unit).                              |
| SOFT      | Activates a gentle airflow mode.                                                                     |

*Note: Not all functions may be available on every Hisense AC model. Refer to your air conditioner's original manual for specific feature compatibility.*

## MAINTENANCE

### Battery Replacement

Replace batteries when the remote control's range decreases or the display becomes dim. Always replace both batteries simultaneously with new AAA alkaline batteries.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

## Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are installed correctly with correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Confirm you are within the effective operating range (typically up to 8 meters).
- **Display is dim or blank:**
  - Batteries are low; replace them.
- **Certain functions do not work:**
  - Verify that your specific Hisense AC model supports the function you are trying to use. Some buttons on universal or replacement remotes may correspond to features not present on all AC units.
  - Refer to your air conditioner's original manual for its specific features.

## SPECIFICATIONS

---

- **Model:** DG11J1-16
- **Compatibility:** Hisense AC Air Conditioner DG11J1-01 (and other compatible Hisense models)
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Material:** ABS Environmental Protection Material
- **Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 3 ounces (approximately, without batteries)

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or technical support for your ECONTROLLY DG11J1-16 Replacement Remote Control, please contact the seller or manufacturer directly. Details are typically provided with your purchase documentation or on the product packaging.

As this is a replacement remote, specific support for the air conditioner itself should be directed to Hisense customer service.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0BWYFQDWK>

More documents and user manuals: <https://manuals.plus/>