



Manuals.plus /

- › Airefina /
- › Airefina Queen Air Mattress Instruction Manual

Airefina AF-A08-GY

Airefina Queen Air Mattress with Built-in Pump - Instruction Manual

Model: AF-A08-GY

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Airefina Queen Air Mattress. Designed for comfort and convenience, this inflatable mattress features a built-in pump for quick inflation and deflation, a flocked surface for comfort, and an anti-slip bottom for stability.



Image: Airefina Queen Air Mattress with Built-in Pump, showcasing its design and size.

SAFETY INFORMATION

Important Safety Guidelines

- Read all instructions before using the air mattress.
- This product is not intended to be a toy or life-saving apparatus.
- Do not allow young children to sleep on this airbed unless they are mature enough to sleep in an adult bed. Young children can become trapped and suffocate in the gap between the airbed and an adjacent furniture or wall.
- Do not stand, walk, or jump on the air mattress.
- Always keep the air mattress away from heat sources and open flames.
- Ensure the area around the air mattress is clear of sharp objects.
- Do not use in or near water.
- Adult supervision is required for inflation and deflation.

SETUP GUIDE

Unpacking and Initial Setup

Carefully remove the air mattress from its packaging. Unroll the mattress on a clean, flat surface, free from any sharp objects.

Inflation

Your Airefina air mattress features a convenient built-in electric pump for quick inflation.

1. Locate the built-in pump on the side of the mattress.
2. Open the latch covering the power cord compartment.
3. Plug the power cord into a standard electrical outlet.
4. Turn the pump dial to the "Inflate" position. The mattress will begin to inflate automatically.
5. Allow the mattress to inflate to your desired firmness. This typically takes a few minutes.
6. Once inflated, turn the pump dial to the "Off" position.
7. Securely close the power cord compartment.

Excellent quality and safety
surface ensure a restful sleep



Image: Close-up of the built-in pump with "Inflate" and "Deflate" settings clearly visible.

OPERATING INSTRUCTIONS

Using Your Air Mattress

The Airefina air mattress is designed for comfort and stability. Its flocked top layer provides a soft sleeping surface, while the high-strength composite mesh structure offers extra support. The anti-slip bottom ensures the mattress stays in place on various floor types.

Top flocado de confort incomparable



**Sin sustancias nocivas,
hecho de materiales suaves para ti**

Image: Detail of the comfortable waterproof flocked top layer.

Portability & Easy storage



Image: Diagram illustrating the high-strength composite mesh structure for enhanced durability and support.

Deflation

To deflate the air mattress, simply turn the pump dial to the "Deflate" position. The pump will automatically extract air from the mattress.

Once fully deflated, you can fold or roll the mattress for storage.

CARE AND MAINTENANCE

- **Spot Clean:** For minor spills or dirt, spot clean the flocced surface with a mild soap and damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Ensure the mattress is completely dry before folding and storing. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Regular Air Check:** Air mattresses may naturally lose some air over time due to stretching of the PVC material. It is recommended to add a little more air regularly to maintain desired firmness.
- **Avoid Over-inflation:** Do not over-inflate the mattress, as this can damage the seams and internal structure.



Image: The air mattress compactly folded and stored in its carrying bag.

TROUBLESHOOTING COMMON ISSUES

Air Loss

If the mattress appears to be losing air, first check that the inflation/deflation dial is securely in the "Off" position.

Inspect the mattress surface for any punctures or leaks. Use the provided repair patches for small holes.

Remember that PVC material can stretch, causing a slight decrease in firmness over initial uses. This is normal and not a defect.

Pump Noise

The built-in pump may produce some noise during operation. This is normal and indicates the pump is working.

Mattress Movement

The anti-slip bottom is designed to keep the mattress stable. Ensure the mattress is placed on a clean, dry surface for optimal grip.

PRODUCT SPECIFICATIONS

Feature	Detail
Size	18inch Queen
Special Feature	Built-In Pump
Brand	Airefina
Color	Grey
Product Dimensions	80"L x 60"W x 18"Th
Specific Uses For Product	Guest Room
Included Components	Air Mattress
Target Audience	Adult
Model Name	AF-A0000-GY
Capacity	750 Pounds
Product Care Instructions	Spot Clean
Number of Items	1
Item Firmness Description	Extra Firm
Item Thickness	18 Inches
Manufacturer	Airefina
Top Material Type	Flocked
Item Weight	17.16 pounds
Country of Origin	China
Item model number	AF-A08-GY
Fabric Type	Flocked
Maximum recommended load	700 Pounds
Assembly required	No
Number of pieces	1
Warranty Description	1 year.
Batteries required	No

Solución perfecta para llevar

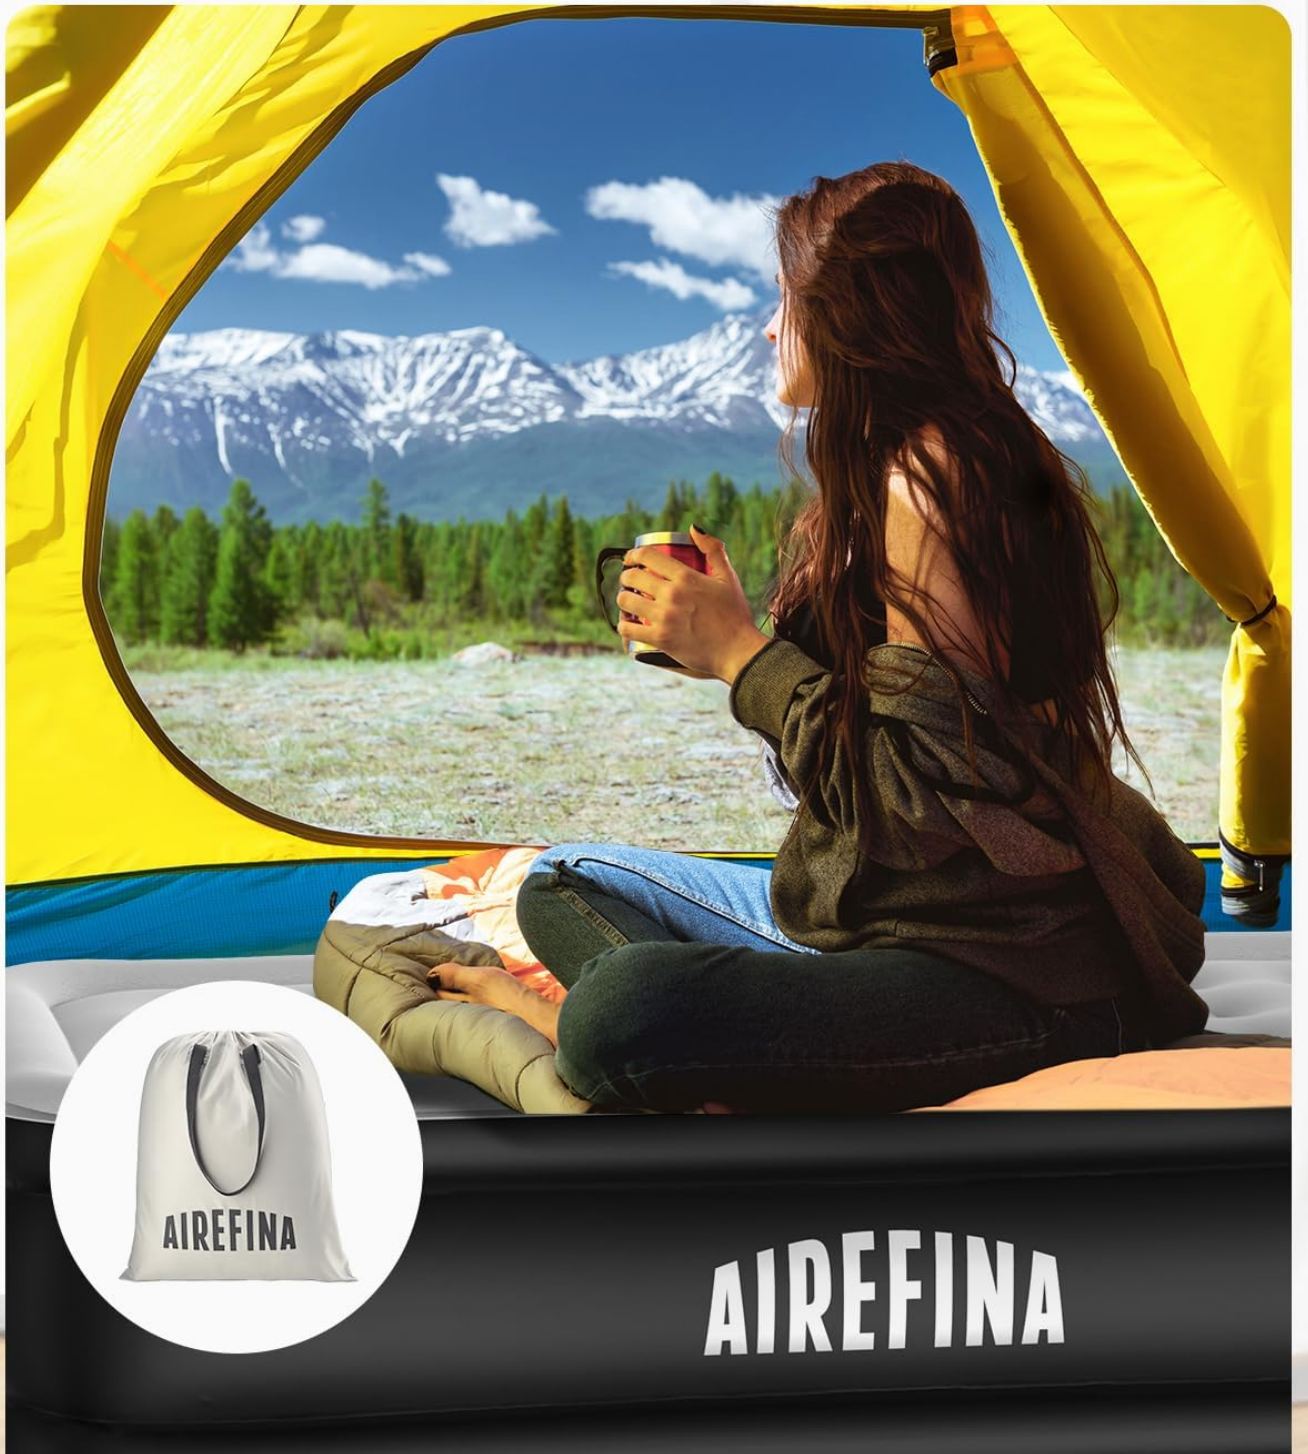


Image: Diagram showing the dimensions of the Airefina Queen Air Mattress.

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This Airefina air mattress comes with a 1-year warranty from the date of purchase. Please retain your proof of

purchase for warranty claims.

Customer Support

For any questions, concerns, or technical assistance, please contact Airefina customer support through their official website or the contact information provided in your product packaging.

Visit the official Airefina Store: [Airefina Store](#)