

[Manuals.plus](#) /

› [Berkel](#) /

› Berkel Restoring Kit for Food Slicer User Manual

Berkel BKACCBRKDPP0100000

Berkel Restoring Kit User Manual

For Volano and Electric Food Slicers

INTRODUCTION

The Berkel Restoring Kit is designed to help maintain the aesthetic and functional integrity of your Berkel food slicer by addressing minor wear and tear, such as small chips that may occur over years of use. This kit provides essential tools for cleaning, lubrication, and paint retouching, ensuring your slicer remains in optimal condition.

KIT CONTENTS

Your Berkel Restoring Kit includes the following items:

- **Medium Cloth Ultra Microfibre:** For gentle cleaning and polishing of surfaces.
- **Lubricant Oil Spray 200 ml:** Essential for maintaining smooth operation of moving parts.
- **Blade Maintenance Brush:** Designed for safely cleaning the slicer blade and surrounding areas.
- **Paint Retouch Marker (Red):** For touching up small paint chips and maintaining the original aesthetic.



Image: The complete Berkel Restoring Kit, showing all included items.

SETUP AND INITIAL INSPECTION

Before using the restoring kit, ensure your Berkel slicer is clean, powered off, and unplugged for safety. Familiarize yourself with the components of the kit and their intended uses.

Your browser does not support the video tag.

Video: An overview of the Berkel Restoring Kit for Volano Slicers, demonstrating the unboxing and initial setup of the kit components.

OPERATING INSTRUCTIONS

1. Cleaning with the Blade Maintenance Brush

The blade maintenance brush is specifically designed to safely remove food debris and residue from the slicer's blade and hard-to-reach areas. Always ensure the slicer is turned off and unplugged before cleaning.

1. Carefully brush away any food particles from the blade and the slicer's carriage.
2. Use the brush to clean around the blade guard and other intricate parts.
3. After brushing, wipe down the surfaces with the microfibre cloth.

Your browser does not support the video tag.

2. Lubrication with Oil Spray

Regular lubrication ensures the smooth and efficient operation of your slicer's moving parts, reducing friction and wear. Apply lubricant only to designated moving components.

1. Shake the lubricant oil spray can well before use.
2. Using the fine nozzle, apply a small amount of lubricant to the sliding rods and other moving mechanisms of the slicer.
3. Operate the slicer manually a few times to distribute the lubricant evenly.
4. Wipe off any excess lubricant with the microfibre cloth.

3. Retouching Paint Chips with Marker

The red retouching marker is designed to cover small paint chips, restoring the aesthetic appearance of your slicer. Ensure the surface is clean and dry before application.

1. Clean the area around the paint chip thoroughly with the microfibre cloth.
2. Shake the retouching marker vigorously with the cap on.
3. Press the nib of the marker gently onto a scrap piece of paper until the paint flows.
4. Carefully apply the paint to the chipped area, using light, even strokes.
5. Allow the paint to dry completely before handling the slicer. Multiple thin coats may be applied if necessary, allowing drying time between coats.

MAINTENANCE SCHEDULE

Adhering to a regular maintenance schedule will prolong the life and performance of your Berkel slicer.

Maintenance Task	Frequency
Blade and Carriage Cleaning (using brush)	After each use
Lubrication of Moving Parts	Monthly, or as needed based on usage
Paint Retouching	As needed for chips or scratches
General Wipe Down (using microfibre cloth)	After each use

TROUBLESHOOTING

If you encounter issues while using the restoring kit, consider the following common scenarios:

- **Issue:** Lubricant spray not dispensing properly.
Solution: Ensure the nozzle is clear and not clogged. Shake the can thoroughly before use. If the issue persists, the can may be empty or defective.
- **Issue:** Paint marker not dispensing or uneven application.
Solution: Shake the marker well. Press the nib firmly on a test surface until paint flows. Ensure the surface being retouched is clean and dry. Apply multiple thin coats rather than one thick coat.
- **Issue:** Brush bristles are matted or ineffective.
Solution: Clean the brush regularly with warm, soapy water and allow it to air dry. Replace the brush if bristles are permanently damaged or worn.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Berkel
Model Number	BKACCBRKDPP0100000
Product Dimensions	8.26"L x 9.05"W x 3.66"H
Material (Box)	Eco sustainable paper box
Color (Kit)	Black (referring to the kit's packaging and marker color)
Item Weight	2.2 Pounds
Country of Origin	Italy

WARRANTY AND SUPPORT

For detailed warranty information regarding your Berkel Restoring Kit, please refer to the documentation included with your original product purchase or visit the official Berkel website. This kit is designed to support the longevity of your Berkel slicer.

For further assistance or technical support, please contact VAN BERKEL INTERNATIONAL directly through their official channels or visit their [Amazon Brand Store](#).