

QWORK WD9573

QWORK Acrylic Display Stand with 5 Levels Instruction Manual

Model: WD9573

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup &
Assembly](#) [Usage](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your QWORK Acrylic Display Stand with 5 Levels. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of the product. This display stand is designed for showcasing various items such as collectibles, perfumes, jewelry, and desserts.



Figure 1: Assembled QWORK 5-Level Acrylic Display Stand, showcasing its clear, multi-tiered design.

2. SAFETY INFORMATION

No specific safety warnings are applicable for this product. However, please observe the following general precautions:

- Keep small parts away from children during assembly to prevent choking hazards.
- Ensure the stand is placed on a stable, flat surface to prevent tipping.

- Do not overload the shelves beyond their intended capacity.
- Avoid using abrasive cleaners or materials that could scratch the acrylic surface.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

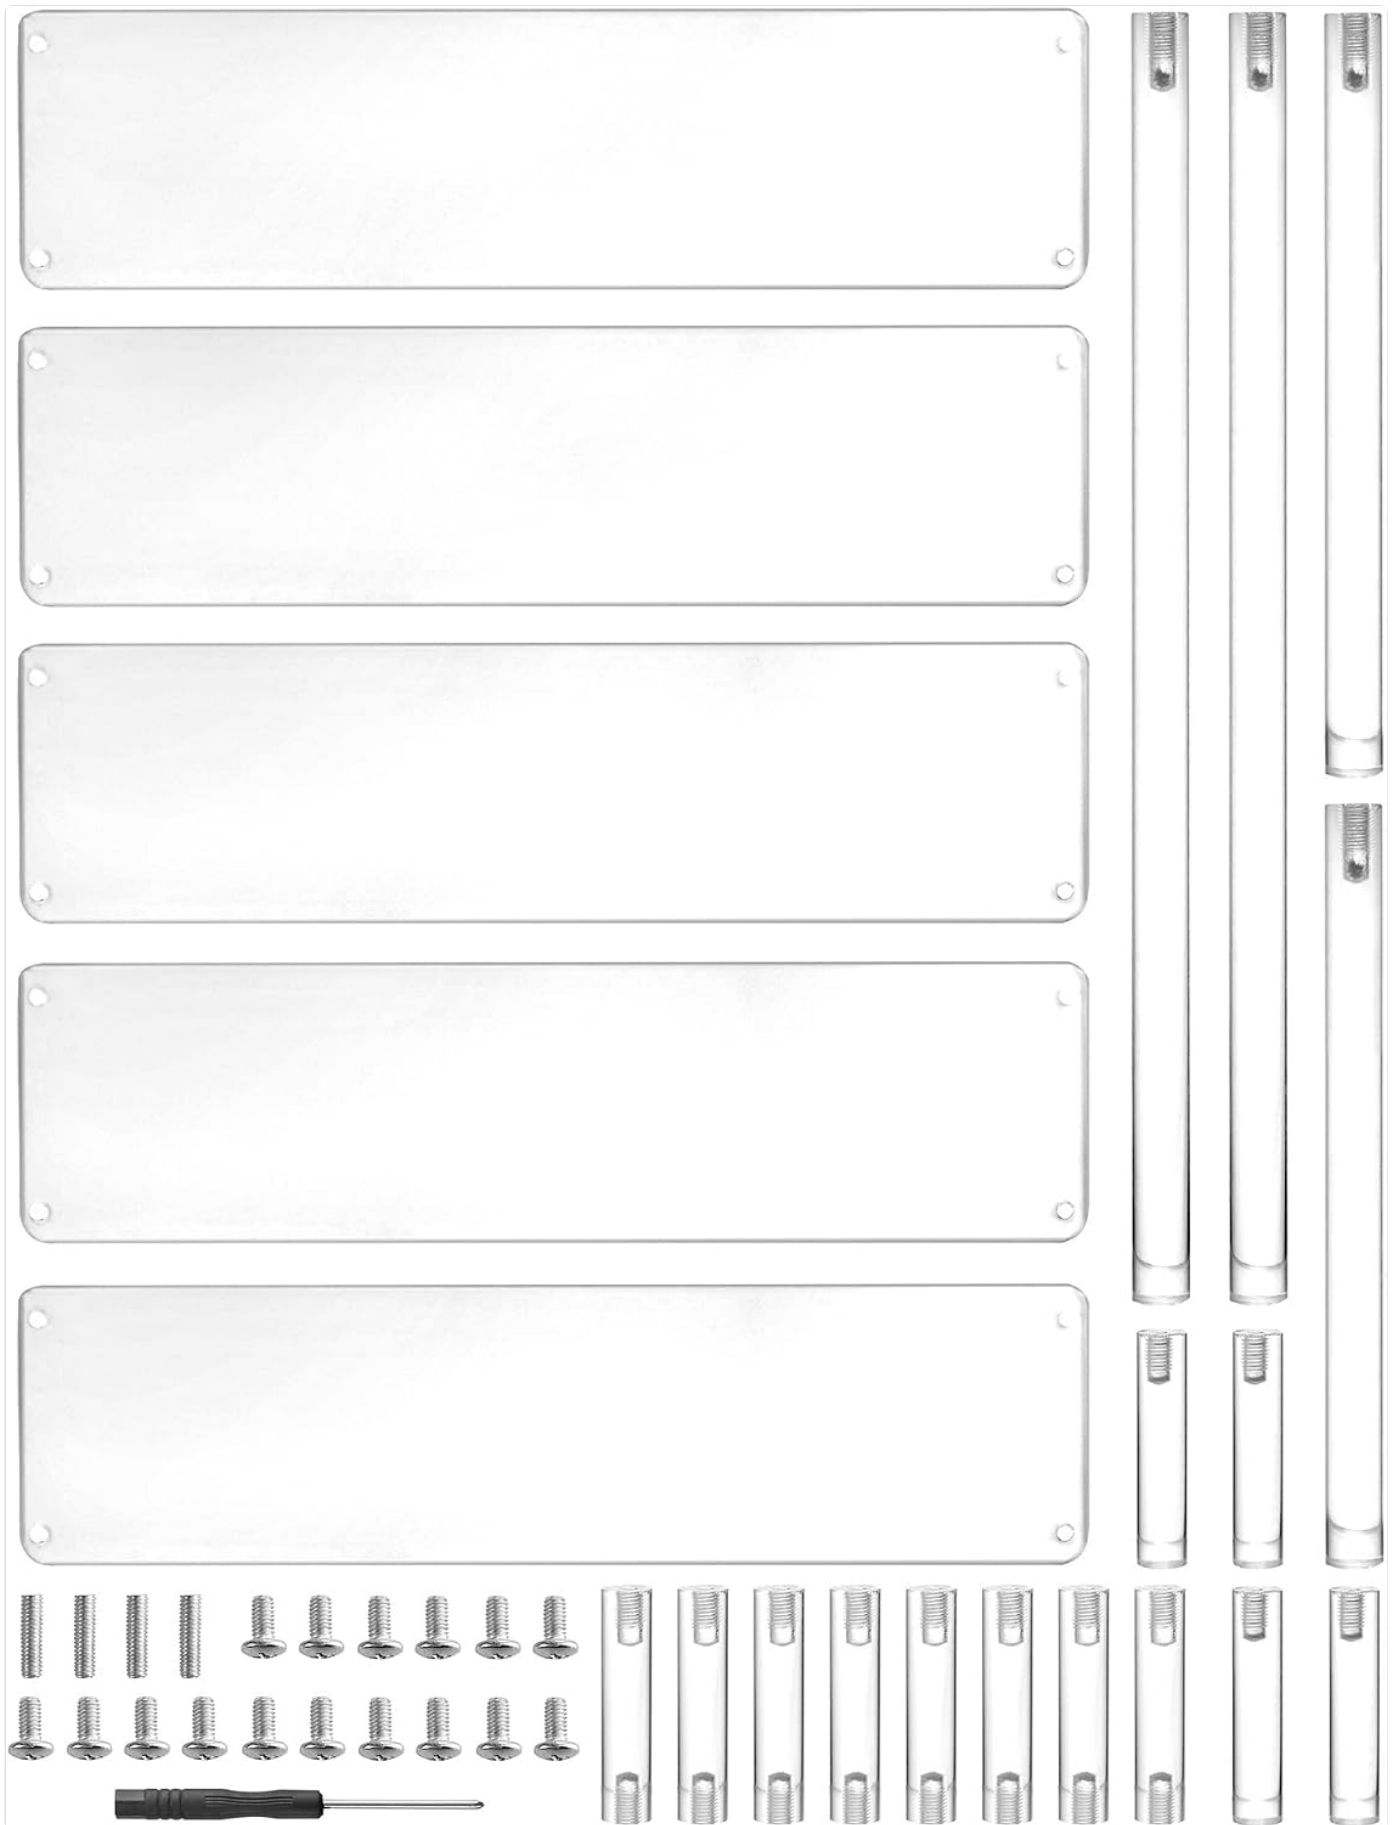


Figure 2: All components included in the package, consisting of acrylic shelves, support posts, screws, and a screwdriver.

- Acrylic Shelf Panels (5 pieces)
- Long Acrylic Support Posts (4 pieces)
- Short Acrylic Support Posts (16 pieces)
- Screws (20 pieces + spares)

- Screwdriver (1 piece)

Tip: Tear off the protective film on both sides of all acrylic panels before assembly.

4. SETUP & ASSEMBLY

Follow these steps to assemble your QWORK Acrylic Display Stand:

1. **Prepare Components:** Carefully remove all acrylic panels and support posts from the packaging. Peel off the protective film from both sides of each acrylic panel.
2. **Attach First Level:** Take one acrylic shelf panel (this will be the bottom shelf). Attach four short acrylic support posts to the underside of the panel using the provided screws and screwdriver. Ensure they are securely fastened but do not overtighten.
3. **Build Subsequent Levels:** Place the next acrylic shelf panel on top of the four short posts you just attached. Secure it by screwing into the top of the posts. Repeat this process, adding four short posts and then an acrylic shelf panel, for the next three levels.
4. **Attach Top Level:** For the fifth and final level, attach four short acrylic support posts to the underside of the top shelf panel.
5. **Install Long Support Posts:** Identify the side of the stand where the long support posts will be placed (typically the tallest side for a tiered arrangement). Attach the four long acrylic support posts to the designated holes on the side of the assembled structure, securing them with screws. These posts provide additional stability and height for the back of the display.
6. **Final Check:** Once all components are assembled, gently shake the stand to ensure all connections are secure and the stand is stable.

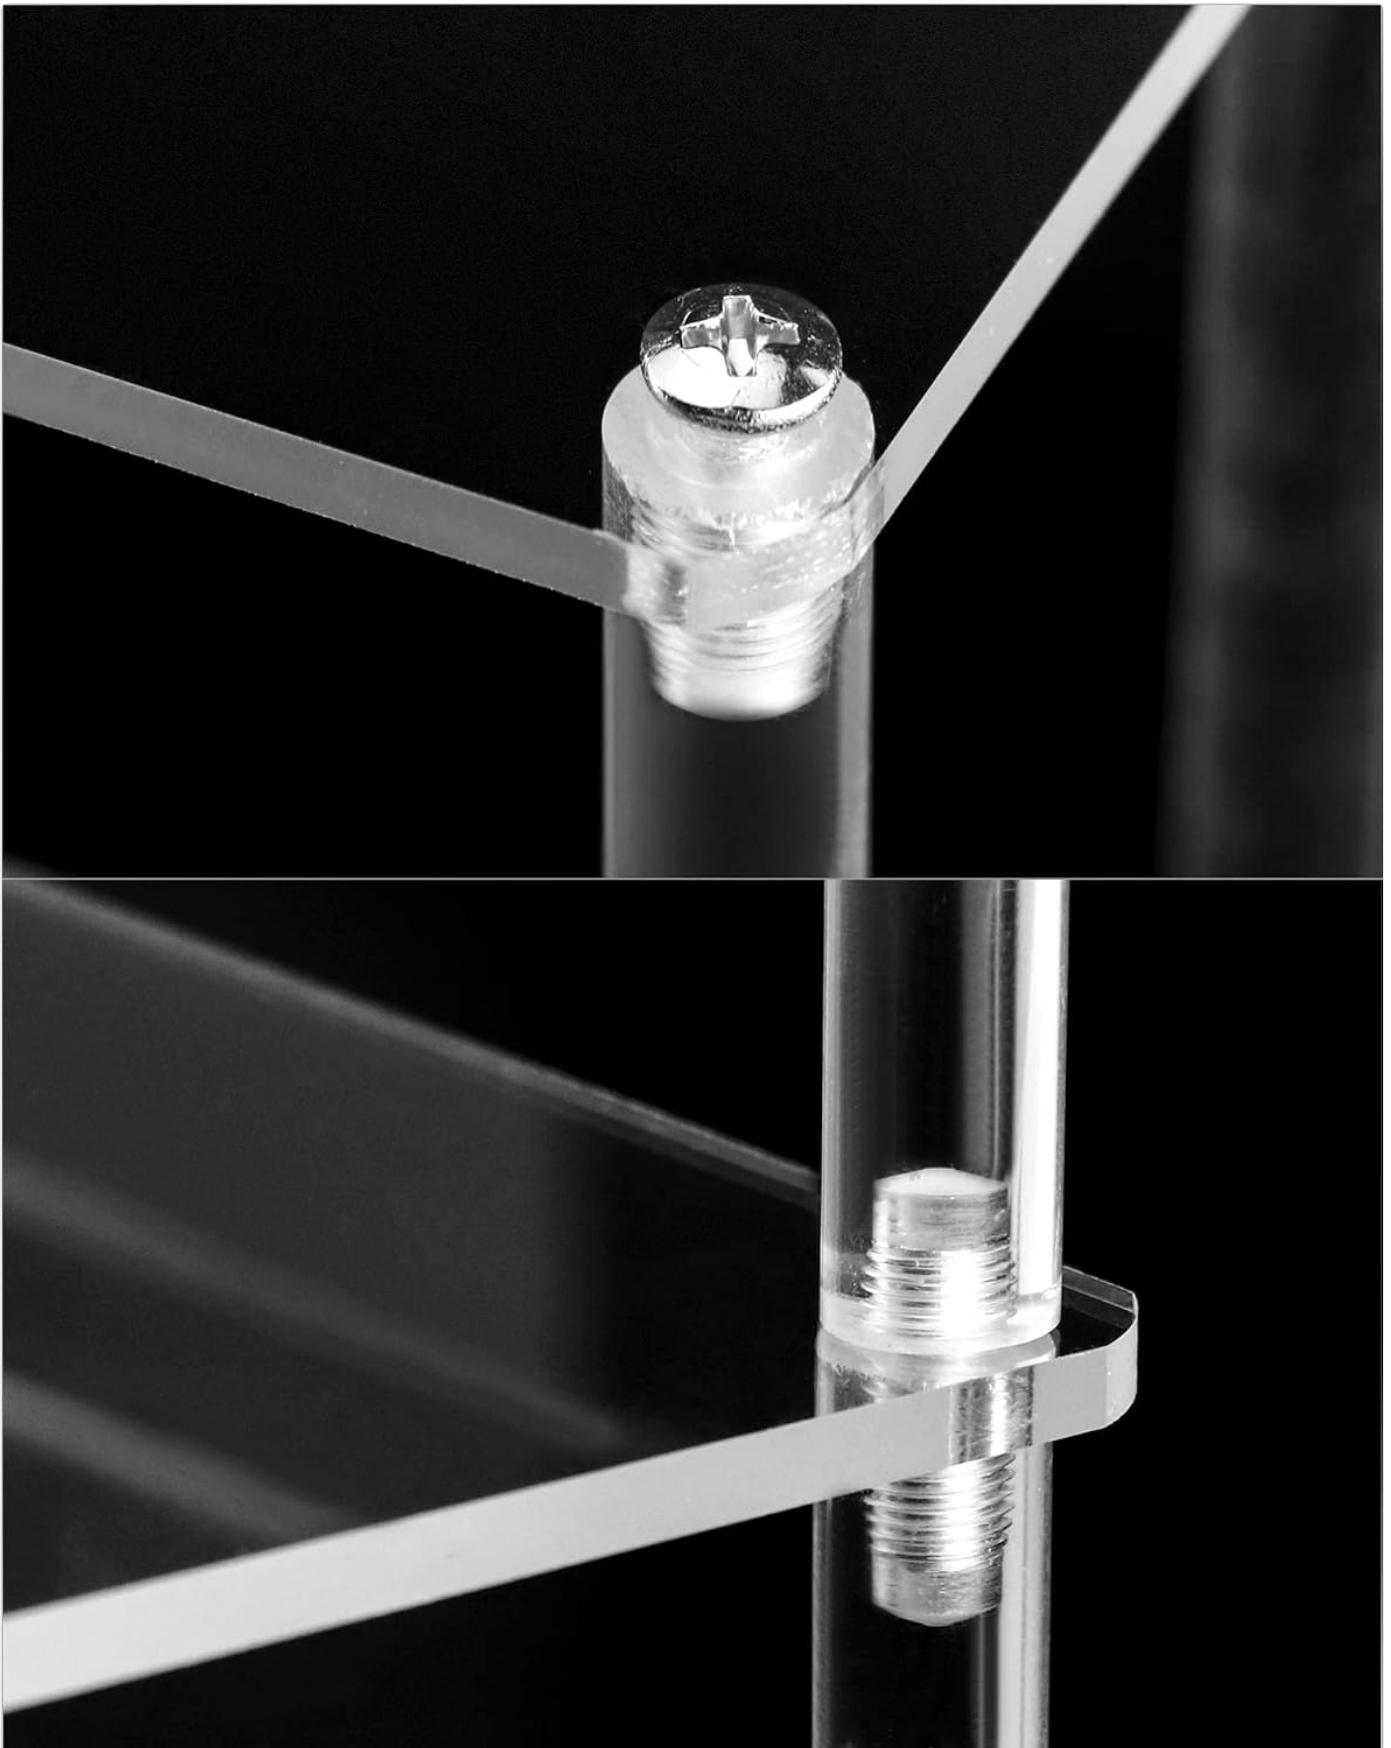


Figure 3: Detailed view of how the screws connect the acrylic panels and support posts during assembly.

5. USAGE

The QWORK Acrylic Display Stand is versatile and can be used in various settings:

- **Home:** Organize and display collectibles, action figures, small plants, or decorative items.
- **Retail:** Showcase jewelry, cosmetics, perfumes, or small merchandise in boutiques or stores.

- **Events:** Present cupcakes, desserts, or appetizers at parties, weddings, or coffee shops.
- **Office:** Keep small office supplies tidy or display awards and recognition items.



Figure 4: The display stand effectively organizes and presents perfume bottles and a reed diffuser.



Figure 5: The tiered design is ideal for presenting multiple cupcakes or other small desserts.

6. MAINTENANCE

To keep your acrylic display stand in optimal condition:

- **Cleaning:** Wipe the acrylic surfaces with a soft, damp cloth. For stubborn marks, use a mild soap solution and then wipe dry with a clean, soft cloth.
- **Avoid Abrasives:** Do not use abrasive cleaners, ammonia-based products (like window cleaner), or rough sponges, as these can scratch or damage the acrylic.
- **Storage:** If disassembling for storage, keep all components together in a safe place to prevent loss or damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Screws are not fully tightened; stand is on an uneven surface.	Ensure all screws are tightened. Move the stand to a flat, stable surface.
Acrylic panels appear cloudy or scratched.	Protective film not removed; improper cleaning methods.	Ensure all protective film has been peeled off. Clean with a soft cloth and mild soap, avoiding abrasive materials.
Missing components upon arrival.	Packaging error or transit damage.	Contact QWORK customer support immediately with your purchase details.

8. SPECIFICATIONS

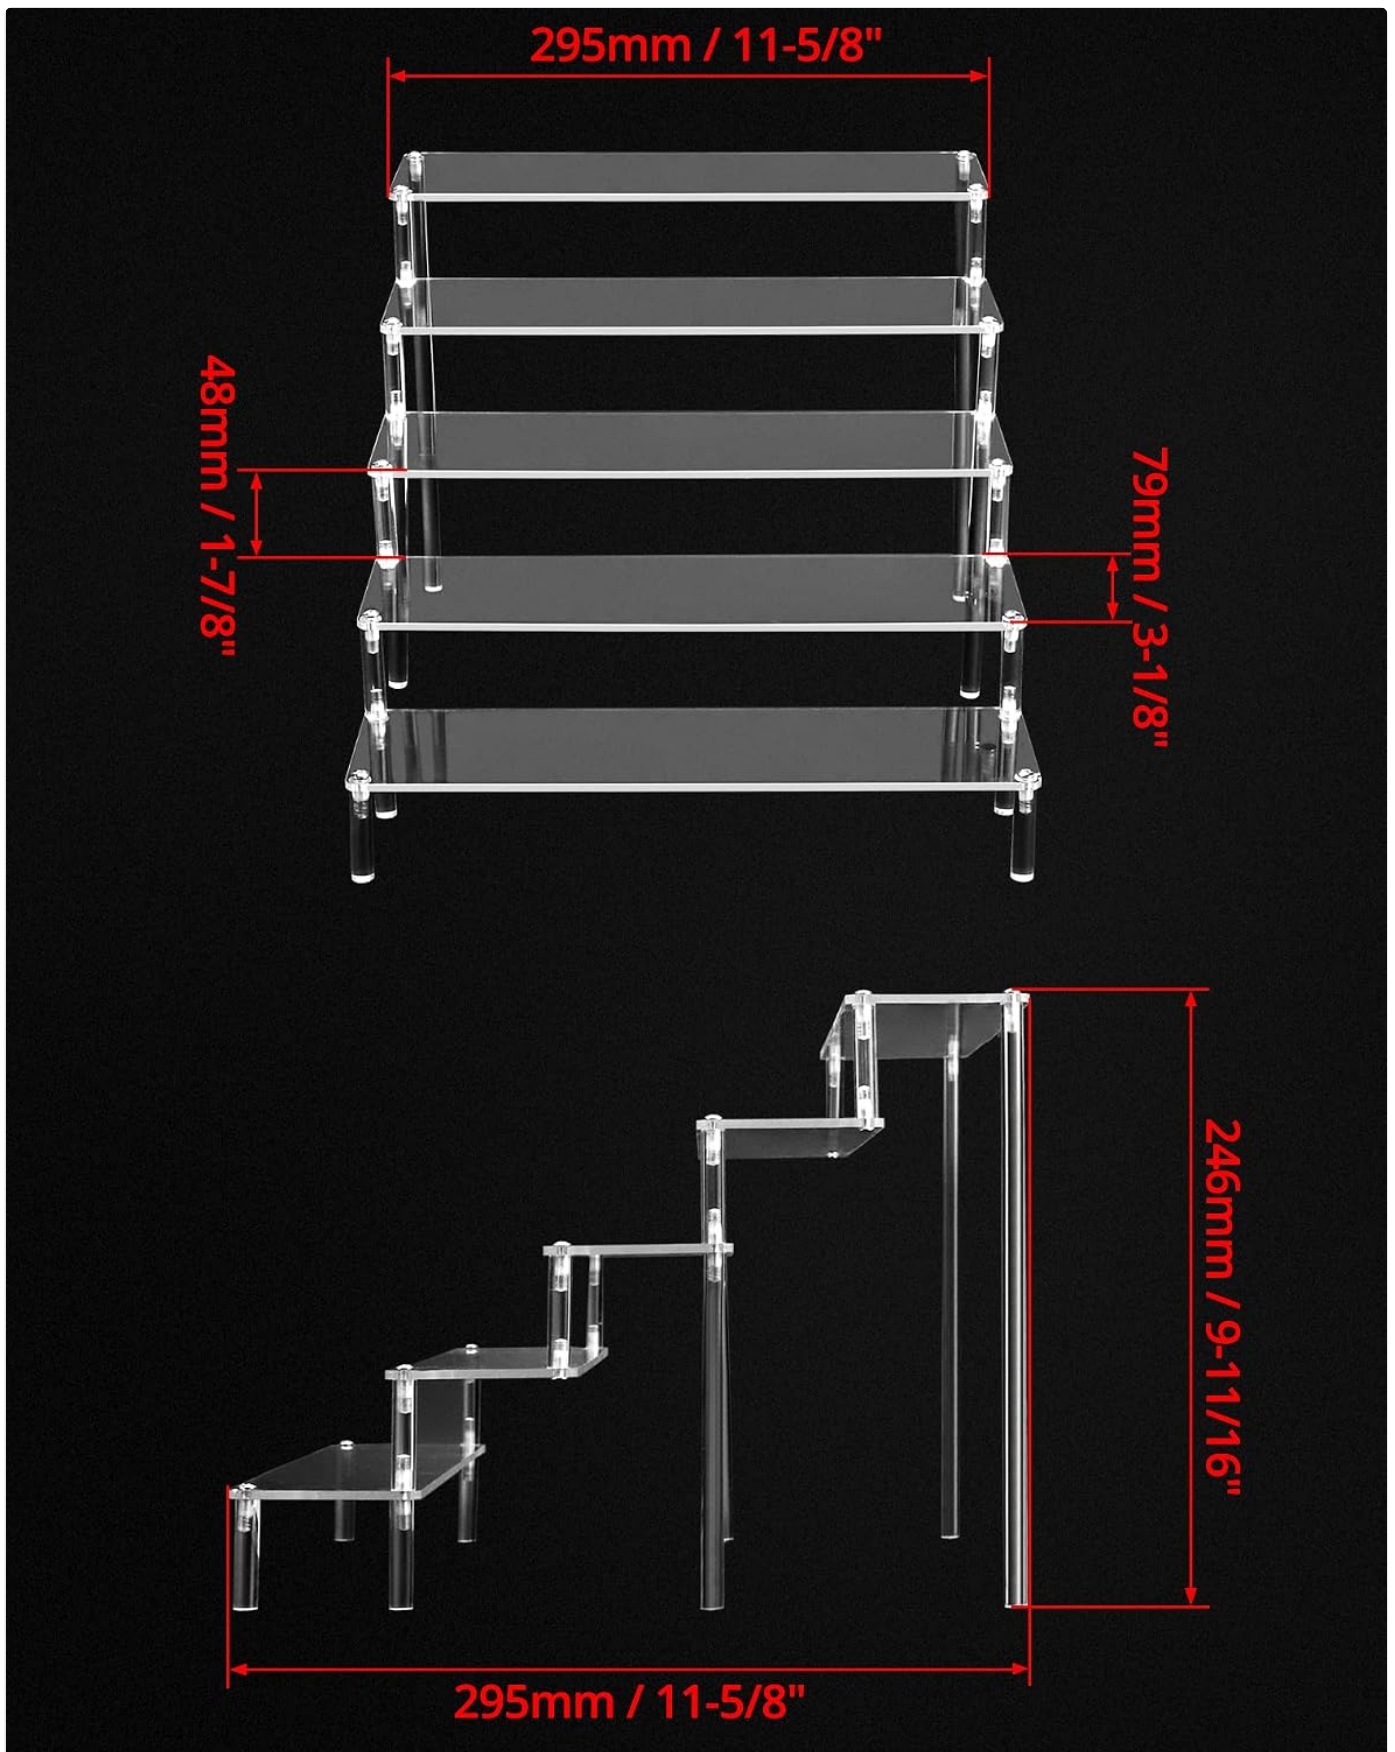


Figure 6: Detailed dimensions of the QWORK Acrylic Display Stand, showing width, depth, and height measurements for each tier.

Feature	Detail
Model Number	WD9573
Material	Acrylic (4mm thick)
Number of Levels	5

Feature	Detail
Overall Dimensions (L x W x H)	12.6 x 11.81 x 9.84 inches (32 x 30 x 25 cm)
Item Weight	555 Grams
Assembly Required	Yes
Finish Type	Polished

9. WARRANTY & SUPPORT

QWORK products are manufactured to high-quality standards. For warranty information or technical support, please refer to the retailer's return policy or contact QWORK customer service directly through their official website or the platform where the product was purchased. Please have your model number (WD9573) and purchase date available when contacting support.

For further assistance, visit the [QWORK Store on Amazon](#).

