

[Manuals.plus](#) /

› [SKMEI](#) /

› SKMEI Model 1894 Digital Watch User Manual

SKMEI 1894

SKMEI Model 1894 Digital Watch User Manual

1. INTRODUCTION

Thank you for choosing the SKMEI Model 1894 Digital Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch. The Model 1894 is a versatile digital watch featuring dual time, a chronograph, alarm, date and week display, EL backlight, 12/24 hour format, and a countdown timer, all within a 50-meter water-resistant design.



Figure 1: SKMEI Model 1894 Digital Watch

2. SETUP AND BUTTON FUNCTIONS

Your SKMEI 1894 watch features four primary buttons for navigation and function control:

- **LIGHT Button:** Activates the EL backlight for visibility in low-light conditions.
- **MODE Button:** Cycles through different operational modes (Time, Chronograph, Alarm, Dual Time, Countdown).
- **START/STOP Button:** Used to start/stop functions like the chronograph or adjust settings.
- **RESET Button:** Used to reset functions or confirm settings.

FEATURE SET



Figure 2: Watch Button Layout and Functions

2.1. Initial Time and Date Setting

To set the time and date:

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., seconds, hour, minute, year, month, day).
3. Use the **START/STOP** button to increase the selected value. Hold it down for faster adjustment.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

For a visual guide on setting the time and date, please refer to the video below:

Your browser does not support the video tag.

Video 1: Demonstrating Time and Date Setting on SKMEI 1894 Digital Watch

3. OPERATING INSTRUCTIONS

3.1. Mode Switching

Press the **MODE** button to cycle through the following functions:

- Normal Time Display (Hour, Minute, Second, Day, Date, Week)
- Chronograph (Stopwatch)
- Alarm Setting
- Dual Time Display
- Countdown Timer

3.2. Chronograph (Stopwatch)

1. Press **MODE** until the chronograph display appears (usually '00:00:00').
2. Press **START/STOP** to begin timing.
3. Press **START/STOP** again to pause timing.
4. Press **RESET** to clear the chronograph to zero.

3.3. Alarm Function

1. Press **MODE** until the alarm setting display appears.
2. Use **RESET** to select the hour or minute digits.
3. Use **START/STOP** to adjust the selected value.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press **START/STOP** while in the alarm display mode. An alarm icon will appear/disappear.

3.4. Dual Time

1. Press **MODE** until the dual time display appears.
2. To set the dual time, follow similar steps as setting the main time, using **RESET** and **START/STOP** buttons.

3.5. Countdown Timer

1. Press **MODE** until the countdown timer display appears.
2. Use **RESET** to select the hour, minute, or second digits.
3. Use **START/STOP** to adjust the selected value.
4. Press **START/STOP** to begin the countdown.
5. Press **START/STOP** again to pause/resume.
6. Press **RESET** to stop and reset the countdown.

3.6. EL Backlight

Press the **LIGHT** button to illuminate the display for a few seconds. This feature is useful in dark environments.

LUMINOUS DISPLAY

Visible in the dark.



Figure 3: EL Luminous Display in Normal and Light Mode

4. MAINTENANCE

4.1. Water Resistance (50M)

The SKMEI 1894 watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for:

- Daily use, such as hand washing and rain.
- Showering with cold water.
- Shallow swimming.

Important:

- Do NOT press any buttons while the watch is submerged in water.
- Avoid exposure to hot water, steam, or saunas, as this can compromise the watch's water seals.
- Not suitable for diving or snorkeling.



50M WATERPROOF WATCH



Washing



Swimming



Sweating



Figure 4: 50M Water Resistance Capabilities

4.2. Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

4.3. Battery Replacement

The watch is powered by one unknown battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to Section 2.1 to reset the time.
Buttons are unresponsive.	Temporary software glitch or water ingress.	Try a soft reset (if applicable, by holding all buttons for a few seconds) or allow the watch to dry if exposed to water. If issues persist, seek professional service.
Alarm does not sound.	Alarm not activated or set incorrectly.	Refer to Section 3.3 to ensure the alarm is set and activated.

6. SPECIFICATIONS

PRODUCT PARAMETER



BRAND: SKMEI

MODEL: 1894

WEIGHT: 39g

MOV' T: DIGITAL

CRYSTAL: RESIN

CASE: ABS

BAND: PU

BUCKLE: STAINLESS STEEL

W / P : 50M

FUNCTION: 2Time, Chrono, Alarm, Date, Week, EL Light, 12/24 hour clock, Countdown.



Case width: 40mm



Case thickness: 11mm



Band Width: 22mm



Watch length: 250mm

Figure 5: Product Parameters

Feature	Detail
Brand	SKMEI
Model	1894
Weight	39g (0.11 kg)
Movement Type	Digital
Crystal Material	Resin
Case Material	ABS (Acrylonitrile Butadiene Styrene)
Band Material	PU (Polyurethane)
Buckle Material	Stainless Steel

Feature	Detail
Water Resistance	50M (5ATM)
Functions	Dual Time, Chronograph, Alarm, Date, Week, EL Light, 12/24 hour clock, Countdown
Case Width	40mm
Case Thickness	11mm
Band Width	22mm
Band Length	25cm
Battery	1 Unknown battery (included)

7. WARRANTY AND SUPPORT

7.1. Warranty Information

This product comes with a manufacturer-and-seller-combination warranty. Please retain your proof of purchase for any warranty claims. For specific details regarding the warranty period and coverage, refer to the documentation provided at the time of purchase or contact your retailer.

7.2. Customer Support

For further assistance, technical support, or inquiries regarding your SKMEI 1894 Digital Watch, please contact the retailer where the product was purchased. You may also visit the official SKMEI website for general product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question