

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UYIKOO](#) /

› [UYIKOO MS27 Camera Glasses Instruction Manual](#)

UYIKOO MS27

UYIKOO MS27 Camera Glasses Instruction Manual

Model: MS27

1. INTRODUCTION

Thank you for purchasing the UYIKOO MS27 Camera Glasses. This manual provides detailed instructions for the proper use, setup, operation, and maintenance of your device. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

The UYIKOO MS27 Camera Glasses are designed for discreet recording, offering 1080P HD video quality and supporting up to 128GB Micro SD cards. Its lightweight and unobtrusive design makes it suitable for various applications, from personal recording to evidence collection.

2. PRODUCT OVERVIEW

2.1. Components

- UYIKOO MS27 Camera Glasses
- USB Charging Cable
- Card Reader
- Tweezers (for SD card handling)
- Cleaning Cloth
- Carrying Case
- Instruction Manual



Image: The UYIKOO MS27 Camera Glasses along with its accessories, including a USB cable, card reader, tweezers, cleaning cloth, and carrying case.

2.2. Device Layout

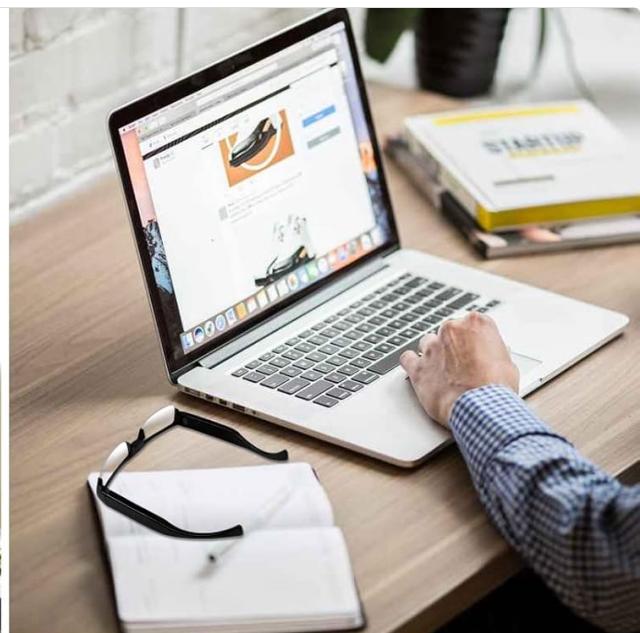
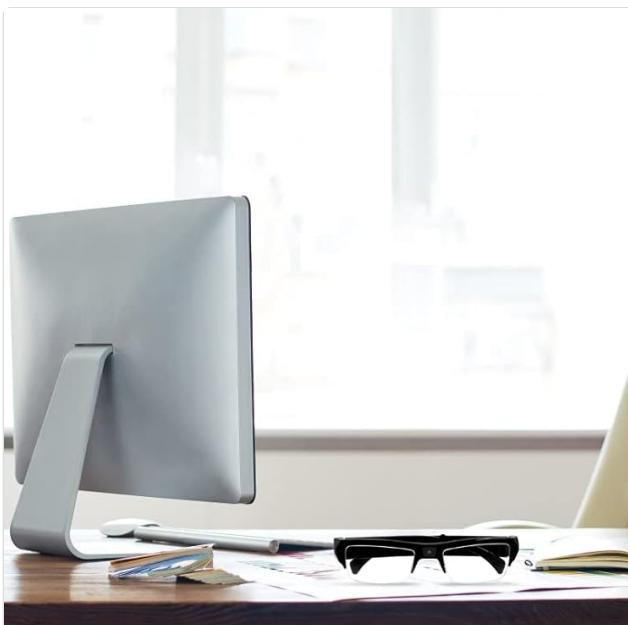


Image: A diagram illustrating the key components of the camera glasses: the power button on the arm, the central lens, the USB charging port, the reset hole, and the indicator light.

- **Power Button:** Located on the left arm, used for power on/off, taking photos, and starting/stopping video recording.
- **Camera Lens:** Discreetly located in the center of the frame for a natural field of view.
- **USB Charging Port:** For charging the device and connecting to a computer.
- **Reset Hole:** Used to reset the device if it becomes unresponsive.
- **Indicator Light:** Provides status feedback (e.g., charging, recording, standby).
- **Micro SD Card Slot:** Supports 8-128GB Micro SD cards (Class 10 or higher recommended, not included).

3. SETUP

3.1. Charging the Device

Before first use, fully charge the camera glasses. Connect the USB charging cable to the glasses and a 5V-2A AC adapter or a computer USB port. The indicator light will show charging status (e.g., red for charging, off when fully charged). A full charge takes approximately 2 hours.



Image: The camera glasses connected to a laptop via USB cable, illustrating the charging and data transfer process.

3.2. Inserting the Micro SD Card

1. Ensure the device is powered off.
2. Locate the Micro SD card slot.
3. Gently insert a Class 10 or higher Micro SD card (8GB to 128GB, not included) into the slot until it clicks into place.
4. **Important:** Format the Micro SD card on a computer before its first use with the device.
5. To remove the card, gently push it in until it clicks, then release, and it will eject. Use the provided tweezers if necessary.

大容量128GBカード対応（別売り）、

自動的上書き録画機能、容量切れの心配もありません。



Image: The camera glasses shown with a 128GB Micro SD card, highlighting its large storage capacity for recordings.

3.3. Setting the Timestamp

The device supports a timestamp function for recorded photos and videos, enhancing the precision of evidence. To set the date and time:

1. Connect the camera glasses to your computer via USB.
2. Access the device's storage.
3. Create a text file (e.g., time.txt) in the root directory of the Micro SD card.
4. Edit the file to reflect the current date and time in the format YYYY-MM-DD HH:MM:SS (e.g., 2025-10-20 10:30:00).
5. Save the file and safely eject the device from your computer.
6. The timestamp will now be applied to all subsequent recordings.

1つボタンで使い方がとても簡単

商談、防犯、そして捜査・立証など、
様々なシーンで利用



Image: A visual representation of the timestamp feature, showing the date and time overlaid on a recorded video from the camera glasses.

4. OPERATING INSTRUCTIONS

The UYIKOO MS27 Camera Glasses feature a simple one-button operation for ease of use.



2023/03/16 12:30:56



【タイムスタンプ機能】

証拠の精密さを上げる



Image: A close-up of the camera glasses highlighting the single operational button on the left arm, indicating its user-friendly design.

4.1. Power On/Off

- Power On:** Press and hold the power button for approximately 2-3 seconds until the indicator light turns on.
- Power Off:** Press and hold the power button again for approximately 2-3 seconds until the indicator light turns off.

4.2. Taking Photos

- Ensure the device is powered on and in standby mode.
- Press the power button once briefly. The indicator light will flash to confirm a photo has been taken.
- Photos are saved in JPG format with a resolution of 4960 x 2790.

4.3. Video Recording

- Ensure the device is powered on and in standby mode.
- Press and hold the power button for approximately 2-3 seconds. The indicator light will change to indicate recording has started.

- To stop recording, press the power button once briefly. The indicator light will return to standby mode.
- Videos are recorded in AVI format with 1920x1080 resolution at 30fps.



画質1920×1080p

録画とけば証拠も残り、防犯としていい

Image: The camera glasses capturing a clear 1080P HD video of a family enjoying time together, demonstrating its recording capability.

5. DATA MANAGEMENT

5.1. Transferring Files to a Computer

1. Connect the camera glasses to your computer using the provided USB cable.
2. The device will appear as a removable disk.
3. Open the disk to access your recorded photos and videos.

4. Copy the files to your computer.
5. Safely eject the device before disconnecting.

Note: If your computer does not recognize the device directly, use the included card reader to access the Micro SD card.

5.2. Loop Recording (Overwrite Function)

The UYIKOO MS27 Camera Glasses support loop recording. When the Micro SD card is full, the device will automatically overwrite the oldest files to make space for new recordings. This ensures continuous recording without manual intervention.

6. MAINTENANCE

- Clean the lenses and frame regularly with the provided cleaning cloth to ensure clear recordings.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.
- Store the device in its carrying case when not in use to protect it from dust and scratches.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery or device frozen.	Charge the device. If still unresponsive, use a pin to press the reset button.
Cannot record video/take photos.	No Micro SD card, card full, or card error.	Insert a Micro SD card. Transfer files to free up space. Format the card on a computer.
Computer does not recognize the device.	Driver issue or compatibility problem.	Try a different USB port or cable. Use the provided card reader to access the Micro SD card directly.
Poor video/photo quality.	Dirty lens or insufficient lighting.	Clean the lens with the cleaning cloth. Ensure adequate lighting during recording.

8. SPECIFICATIONS

Feature	Detail
Video Format	AVI

Feature	Detail
Video Resolution	1920 x 1080P
Video Frame Rate	30fps
Image Format	JPG
Still Image Resolution	4960 x 2790
Charging Voltage	DC 5V-2A
Weight	35g
Dimensions	13.5cm x 14cm x 3.2cm (approx.)
Charging Time	Approx. 2 hours
SD Card Support	8-128GB Micro SD (Class 10 or higher recommended)
Battery Type	Lithium-ion
Power Source	Battery powered
Connectivity	No Wi-Fi/Bluetooth
Material	Plastic (ABS)

9. WARRANTY AND SUPPORT

UYIKOO products undergo strict quality inspection. If you encounter any issues during use, please do not hesitate to contact us. For initial defects or other problems, we will respond sincerely.

How to Contact Support:

Go to your Amazon account service → Order history → Purchased product → Seller → Ask a question.

Important Note:

- This product is intended for legitimate use only. Do not use it for any illegal activities or actions that infringe on privacy or cause nuisance.
- Imported products may have minor scratches or dirt on the product box.

10. USAGE SCENARIOS

The UYIKOO MS27 Camera Glasses are versatile and can be used in various situations where hands-free recording is beneficial. Its discreet design allows for natural capture of events.

一つボタンはすべての操作を実行できます



★写真撮る：

ボタンを一回短押すと、写真を撮る。

★録画操作：

ボタンを3秒長押すと、録画開始。

Image: A collage demonstrating diverse applications for the camera glasses, such as monitoring pets, documenting meetings, recording during walks, and gathering evidence for crime prevention, bullying, or harassment.

Examples include:

- **Pet Monitoring:** Keep an eye on your pets' activities.
- **Meeting Records:** Document discussions and negotiations.
- **Outdoor Activities:** Capture hands-free footage during walks or cycling.
- **Evidence Collection:** Useful for documenting incidents of bullying, harassment, or other problematic situations.
- **DIY/Crafts:** Record your hands-on work for tutorials or review.

11. OFFICIAL PRODUCT VIDEOS

Watch these official videos for a visual guide on using your UYIKOO MS27 Camera Glasses.

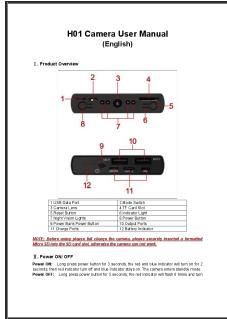
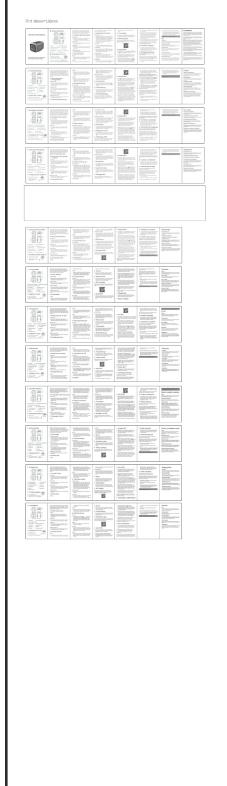
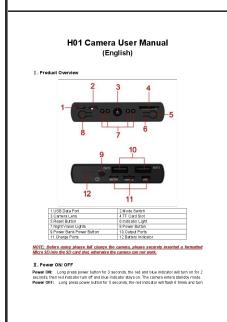
Your browser does not support the video tag.

Video: A demonstration of the UYIKOO MS27 Camera Glasses in use, showcasing its recording capabilities and discreet design.

Your browser does not support the video tag.

Video: A quick preview of the UYIKOO MS27 Camera Glasses, highlighting its key features and ease of operation.

Related Documents - MS27

 The thumbnail shows the front cover of the H01 Camera User Manual in English. It features a diagram of the camera with numbered callouts 1 through 12, a table of contents, and a small image of the camera.	<p>H01 Camera User Manual and Power Bank Guide</p> <p>This manual provides instructions for the H01 Camera, covering its features, operation, charging, and reset procedures. It also details its functionality as a power bank.</p>
 The thumbnail shows the front cover of the UYIKOO Mini Action Cam User Manual and Operating Instructions. It features a diagram of the camera and a table of contents.	<p>UYIKOO Mini Action Cam: User Manual and Operating Instructions</p> <p>Comprehensive guide to operating the UYIKOO Mini Action Cam, covering power, recording, photography, file viewing, charging, and safety precautions for this 1080P HD sports camera.</p>
 The thumbnail shows the front cover of the UYIKOO 4K Mini Action Camera User Manual. It features a large grid of small screenshots showing various camera settings and modes.	<p>UYIKOO 4K Mini Action Camera: WiFi, 120° Sports Camera for Motorcycles & Bikes</p> <p>Explore the UYIKOO 4K Mini Action Camera, a versatile WiFi-enabled sports camera with a 120° wide-angle lens, perfect for motorcycle, bike, and helmet recording. Features include 4K video and robust connectivity.</p>
 The thumbnail shows the front cover of the H01 Camera User Manual in English. It features a diagram of the camera with numbered callouts 1 through 12, a table of contents, and a small image of the camera.	<p>H01 Camera User Manual and Power Bank Guide</p> <p>This manual provides instructions for the H01 Camera, covering its features, operation, charging, and reset procedures. It also details its functionality as a power bank.</p>

 <p>UYIKOO Mini Action Cam: User Manual and Operating Instructions</p> <p>Comprehensive guide to operating the UYIKOO Mini Action Cam, covering power, recording, photography, file viewing, charging, and safety precautions for this 1080P HD sports camera.</p>	
 <p>UYIKOO 4K Mini Action Camera: WiFi, 120° Sports Camera for Motorcycles & Bikes</p> <p>Explore the UYIKOO 4K Mini Action Camera, a versatile WiFi-enabled sports camera with a 120° wide-angle lens, perfect for motorcycle, bike, and helmet recording. Features include 4K video and robust connectivity.</p>	