

[Manuals.plus](#) /

› [Svan](#) /

› Svan Hibachi Grill Wooden Kids Playset Instruction Manual SVA-HIB

Svan SVA-HIB

Svan Hibachi Grill Wooden Kids Playset Instruction Manual

Model: SVA-HIB

1. INTRODUCTION

Welcome to the Svan Hibachi Grill Wooden Kids Playset. This manual provides essential information for the safe assembly, operation, and maintenance of your new playset. Designed for children aged 36 months to 7 years, this playset encourages imaginative play and social interaction, fostering creativity and fine motor skills.



Image 1.1: The Svan Hibachi Grill Wooden Kids Playset, showcasing the main grill unit, side tables, and three accompanying stools, along with a variety of toy food items.

2. SAFETY INFORMATION

Please read and understand all safety warnings before allowing children to use this product. Adult supervision is recommended during play.

- This playset is intended for children aged 36 months to 7 years.
- The stools included are part of the toy set and are not designed as standard furniture. They are not suitable for climbing, shaking, or standing on.
- The maximum weight capacity for each stool is 110 pounds (approximately 50 kg).
- The playset is constructed from natural wood and finished with non-toxic paint, ensuring safety for children.
- Periodically inspect all components for wear or damage. Discontinue use if any part is broken or compromised.
- Keep small parts away from children under 3 years of age to prevent choking hazards.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package before assembly.

- 1 x Hibachi Grill Playset Unit
- 3 x Stools
- 1 x Chef's Hat
- 1 x Spatula
- 1 x Tongs
- 3 x Place Settings (including forks, knives, placemats, and plates)
- 1 x Oil Bottle (toy)
- Assorted Toy Food Pieces (Steak, Fish, Fried Egg, 2 Break-apart Eggs, Onion Tower, 3 Shrimp, 3 Broccoli, 3 Mushrooms, Noodles)

placements & plates

chef's hat



Image 3.1: Detailed view of the various toy food items and accessories provided with the playset.

4. ASSEMBLY INSTRUCTIONS

Assembly of the Svan Hibachi Grill Playset is required. Please follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all screws are securely fastened, but do not overtighten. Adult assembly is necessary.

- Unpack all components and verify against the package contents list.
- Follow the step-by-step diagrams and instructions in the dedicated assembly manual.
- Ensure all connections are stable and secure before allowing children to play.
- The assembled size of the playset is approximately 38 x 19 x 22 inches.

Durable Wood Construction



Image 4.1: Rear view of the playset, highlighting the storage compartments and pretend control dials.

5. OPERATING INSTRUCTIONS (HOW TO PLAY)

The Svan Hibachi Grill Playset is designed for imaginative role-playing. Here are some suggestions for engaging play:

- **Chef Role-Play:** Children can wear the included chef's hat and use the spatula and tongs to prepare the toy food items on the grill surface.
- **Interactive Dining:** The three stools and place settings allow multiple children to play together, simulating a restaurant experience.

- **Food Preparation:** Utilize the various toy food pieces, such as the break-apart eggs and onion tower, to mimic cooking actions.
- **Storage:** The four storage compartments on the backside of the playset can be used to keep all the toy food and utensils organized when not in use.
- **Creative Scenarios:** Encourage children to invent their own hibachi cooking shows, restaurant scenes, or culinary adventures.



Image 5.1: A child demonstrating interactive play with the hibachi grill and toy food.

6. MAINTENANCE AND CARE

Proper care will ensure the longevity of your Svan Hibachi Grill Playset.

- **Cleaning:** Wipe down all wooden surfaces with a soft, damp cloth. Avoid using harsh chemical cleaners or abrasive materials, as these can damage the finish.
- **Storage:** Store the playset in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or fading of the wood. Utilize the built-in storage compartments for accessories.
- **Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten as necessary.

- **Damage:** If any part of the playset becomes damaged, discontinue use immediately to prevent injury.

7. TROUBLESHOOTING

If you encounter any issues with your playset, please refer to the following common solutions:

- **Loose Parts:** If any wooden components feel loose, check the corresponding screws and tighten them with a screwdriver.
- **Missing Pieces:** If you find any pieces missing from the package, refer to the 'Package Contents' section and contact Svan customer support for assistance.
- **Stability Issues:** Ensure the playset is placed on a flat, level surface. Re-check all assembly connections if stability is a concern.

8. SPECIFICATIONS

Model Number	SVA-HIB
Product Dimensions (Assembled)	19 x 38 x 22 inches (48.26 x 96.52 x 55.88 cm)
Item Weight	35.4 pounds (16.06 kg)
Recommended Age	36 months - 7 years
Material	Natural Wood, Non-toxic Paint
Stool Max Weight Capacity	110 pounds (50 kg)
Manufacturer	Svan

9. WARRANTY AND SUPPORT

Svan is committed to providing high-quality products. For any questions regarding your Hibachi Grill Wooden Kids Playset, including warranty information, missing parts, or operational assistance, please contact Svan customer service through their official website or the retailer where the product was purchased. Please have your model number (SVA-HIB) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BX4FMDJ1>

More documents and user manuals: <https://manuals.plus/>