



Manuals.plus /

› Westinghouse /

› Westinghouse PWTN Pressure Washer Turbo Nozzle Attachment User Manual

Westinghouse PWTN

Westinghouse PWTN Pressure Washer Turbo Nozzle Attachment User Manual

Model: PWTN

Safety Information	Product Overview	Setup	Operating Instructions	Maintenance
	Troubleshooting	Specifications	Warranty & Support	

SAFETY INFORMATION

Always follow general pressure washer safety guidelines when using this attachment. Failure to do so may result in injury or damage to property.

- Always wear appropriate eye protection (safety glasses or goggles) when operating a pressure washer and its accessories.
- Never point the turbo nozzle at people, pets, or fragile objects. The high-pressure stream can cause serious injury.
- Ensure all connections, including the nozzle to the wand and the wand to the pressure washer, are secure and leak-free before starting operation.
- Keep children and pets away from the work area during operation.
- Do not operate the turbo nozzle if it appears damaged or is not functioning correctly.
- Use caution on delicate surfaces. Test the nozzle on an inconspicuous area first to prevent damage.

PRODUCT OVERVIEW

The Westinghouse PWTN Pressure Washer Turbo Nozzle Attachment is designed to enhance your pressure washing capabilities. It utilizes a concentrated oscillating jet to effectively remove stubborn dirt, grime, and stains from various surfaces. This attachment is compatible with most pressure washers featuring a 1/4-inch quick connection, offering a simple plug-and-go design without the need for additional adapters.



Image: Westinghouse Pressure Washer Turbo Nozzle Attachment

Key Features

- **Penetrates Tough Messes:** Uses a concentrated oscillating jet to cut through hard stains and caked-on dirt.
- **Efficient Cleaning:** Innovative spray pattern allows for faster coverage, potentially reducing cleaning time and water usage compared to standard nozzles.
- **High-Pressure Durability:** Rated for a maximum of 3600 PSI, designed to withstand demanding high-pressure use.
- **Universal Compatibility:** Features a 1/4-inch universal quick connection for easy attachment to most pressure washers.

What's in the Box

- 1 x Turbo Nozzle

SETUP

Before attaching the turbo nozzle, ensure your pressure washer is turned off and disconnected from its power

source and water supply.

1. Locate the 1/4-inch quick connect fitting on your pressure washer wand.
2. Pull back the collar on the quick connect fitting.
3. Insert the male end of the turbo nozzle into the quick connect fitting.
4. Release the collar to lock the nozzle in place. Tug gently on the nozzle to ensure it is securely attached.



Compatible with 1/4 Inch Fittings

Image: Connecting the turbo nozzle to a pressure washer wand

OPERATING INSTRUCTIONS

The turbo nozzle provides a powerful, rotating stream for aggressive cleaning. It is ideal for hard, durable surfaces like concrete, brick, and metal.

1. Once the turbo nozzle is securely attached, connect your pressure washer to the water supply and power source.
2. Turn on the water supply completely.
3. Start the pressure washer according to its manufacturer's instructions.

4. Hold the wand firmly with both hands. Begin spraying by squeezing the trigger, keeping the nozzle a safe distance from the surface to avoid damage.
5. Move the nozzle in a steady, sweeping motion, overlapping your passes to ensure even cleaning.
6. For heavily soiled areas, you may need to make multiple passes or hold the nozzle closer, always observing the surface for any signs of damage.



Image: Turbo nozzle in operation, demonstrating high-pressure cleaning

Official Product Video

Video: Overview of Westinghouse Pressure Washer Accessories, including the Turbo Nozzle. This video demonstrates the features and uses of various accessories.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your turbo nozzle.

- After each use, disconnect the nozzle from the wand and rinse it thoroughly with clean water to remove any debris or chemical residue.

- Inspect the nozzle opening for any blockages. If clogged, use a small wire or nozzle cleaning tool to clear the obstruction.
- Check the O-ring on the nozzle's quick connect for wear or damage. Replace if necessary to prevent leaks.
- Store the turbo nozzle in a clean, dry place, protected from freezing temperatures.

TROUBLESHOOTING

If you encounter issues with your turbo nozzle, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Nozzle not rotating	Clogged nozzle opening; Insufficient water flow/pressure	Clear any blockages from the nozzle. Ensure the pressure washer is receiving adequate water supply and operating at correct pressure.
Reduced pressure output	Worn or damaged nozzle; Pressure washer issue	Inspect the nozzle for wear and replace if damaged. Check your pressure washer's manual for troubleshooting low-pressure issues.
Water leaking from connection	Loose connection; Damaged O-ring	Ensure the quick connect is fully seated and locked. Inspect and replace the O-ring if it is worn or damaged.

SPECIFICATIONS

Detailed specifications for the Westinghouse PWTN Pressure Washer Turbo Nozzle Attachment.

Feature	Detail
Brand	Westinghouse
Model Number	PWTN
Maximum Pressure	3600 PSI
Connection Type	1/4-inch Quick Connect
Item Weight	0.5 Pounds
Product Dimensions (L x W x H)	1.7" x 3.3" x 3.3"
Included Components	Turbo Nozzle

WARRANTY & SUPPORT

This Westinghouse Pressure Washer Turbo Nozzle Attachment is covered by a **180-day limited warranty** from the date of purchase, ensuring quality and performance. For warranty claims or technical assistance, please refer to the contact information provided with your original pressure washer unit or visit the official Westinghouse support website.

For further assistance, please contact Westinghouse Customer Support:

Website: www.westinghouseoutdoorpower.com/support

Phone: Refer to your pressure washer manual for regional support numbers.

