

[Manuals.plus](#) /

› [Anukis](#) /

› Anukis Fully Automatic Portable Washing Machine User Manual

Anukis XQB201A-Gold6

Anukis Fully Automatic Portable Washing Machine

Model: XQB201A-Gold6 | Brand: Anukis

INTRODUCTION



Figure 1: Anukis Fully Automatic Portable Washing Machine.

This manual provides essential information for the safe and efficient operation of your Anukis Fully Automatic Portable Washing Machine. Designed for compact living spaces such as apartments, dormitories, and RVs, this 13 lbs capacity washer offers convenience and powerful cleaning performance. Please read this manual thoroughly

before initial use and retain it for future reference.

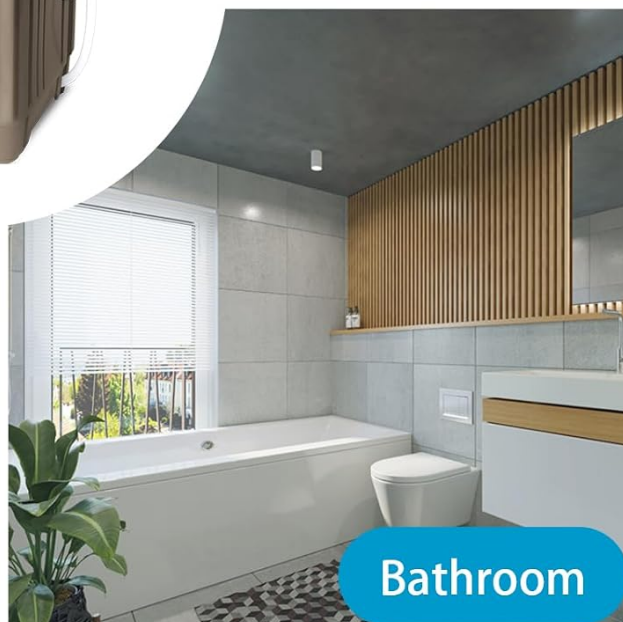


Figure 2: Ideal for compact living spaces.

SAFETY INFORMATION

- Always ensure the washing machine is placed on a stable, level surface to prevent vibration and movement during operation.
- Do not operate the machine with a damaged power cord or plug. Contact qualified service personnel for repairs.
- Keep children and pets away from the machine during operation. Utilize the child lock feature for added safety.
- Do not wash items that are soiled with flammable or explosive substances.
- Unplug the machine from the power outlet before cleaning, maintenance, or if it will not be used for an

extended period.

- Ensure proper water supply and drainage connections are secure to prevent leaks.

PRODUCT FEATURES

- **Large Wash Capacity & Space-Saving Design:** 13 lbs capacity suitable for 3-4 people, ideal for small living spaces like apartments, dorms, or RVs.
- **Multifunctional Control Panel:** Features 10 wash programs, 8 water level selections, an LED display, and a child lock for safe and convenient operation.
- **Fully Automatic Operation:** Once a program is selected, the machine handles the entire wash cycle automatically, including drainage.
- **Adjustable Water Levels:** Three primary water levels (L/16L, M/23L, H/30L) allow for personalized washing experiences.
- **Durable Construction:** Equipped with a stainless steel inner tub and a powerful 310W washing motor.

Full-size Washing Machine Features



Figure 3: Key features of the Anukis Portable Washing Machine.

SETUP

1. Unpacking and Placement

Carefully remove all packaging materials. Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and connections. The machine includes adjustable feet for leveling and a rat guard for protection at the bottom.



Adjustable Foot

Adjust the height freely as needed to make it more stable



Rat Guard

prevent rats from entering and destroy the chassis cables

Figure 4: Adjustable feet and rat guard location.

2. Water Connection

Connect the water inlet pipe to a suitable water source (e.g., a faucet) and to the water inlet on the washing machine. Ensure all connections are tight to prevent leaks. The drain hose should be positioned to allow dirty water to drain easily, ideally into a sink or drain pipe, ensuring it is not elevated more than 10 cm above the machine's drain outlet to avoid issues with the drain pump.



Figure 5: Water and power connections overview.

Your browser does not support the video tag.

Video: Official Anukis Portable Washing Machine overview, demonstrating its features and ease of use. This video provides a visual guide to the machine's setup and operation.

3. Power Connection

Plug the power cord into a grounded 110V AC electrical outlet. Ensure the outlet meets the machine's power requirements.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel features an LED display and various buttons for program selection, water level adjustment, delay

start, and child lock. Familiarize yourself with the layout and functions before starting a wash cycle.

Multifuncontrol Panel with LED Display

10 Washing Programs
8 Water Levels



Figure 6: Detailed view of the control panel.

2. Starting a Wash Cycle

1. Load your laundry into the stainless steel inner tub. Do not overload the machine.
2. Add appropriate detergent directly into the tub.
3. Close the lid securely.
4. Press the "Power on/off" button to turn on the machine.
5. Select your desired wash program (e.g., Standard, Soft, Quick Wash, Heavy Duty, Soak Wash) using the "Program" button.
6. Adjust the water level using the "Water Level" button if needed. The machine can also auto-sense the water level.
7. Press the "Start/Pause" button to begin the wash cycle.
8. To activate the child lock, press and hold the "Water Level" and "Program" buttons simultaneously for a few seconds. Repeat to deactivate.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Tub:** Use the "Tub Clean" program regularly with appropriate cleaning agents (e.g., bleach or vinegar) to prevent grime buildup.
- **Filter Cleaning:** The machine has a built-in filter. Clean it periodically to ensure efficient lint and debris collection. Refer to the user guide for specific instructions on accessing and cleaning the filter.
- **Exterior Cleaning:** Wipe down the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Drain Hose:** Periodically check the drain hose for blockages or damage.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power, lid not closed, program not selected.	Check power connection, ensure lid is fully closed, select a wash program.
Water leakage	Loose hose connections, damaged hose, drain hose too high.	Tighten all hose connections, replace damaged hoses, ensure drain hose is at proper height.
Poor washing performance	Overloading, insufficient detergent, incorrect program.	Reduce load size, use recommended detergent amount, select appropriate wash program.
Excessive vibration/noise	Uneven surface, unbalanced load.	Adjust leveling feet, redistribute laundry evenly in the tub.

For more detailed troubleshooting or issues not listed here, please refer to the full user guide or contact Anukis customer service.

SPECIFICATIONS



Figure 7: Product Dimensions.

Feature	Detail
Brand	Anukis
Model Number	XQB201A-Gold6
Capacity	13 lbs
Dimensions (D x W x H)	18.5 x 18.5 x 33.1 inches
Item Weight	43 pounds
Installation Type	Portable
Control Console	Push Button
Standard Cycles	10
Access Location	Top Load

Feature	Detail
Voltage	110 Volts (AC)
Material Type	Plastics

WARRANTY AND SUPPORT

Anukis offers protection plans for your washing machine. For detailed information on warranty coverage and to purchase extended protection, please refer to the product's official listing or contact Anukis customer service.

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Complete Protect:** Monthly plan covering eligible past and future purchases.

For the complete user guide in PDF format, please visit:[Anukis User Guide \(PDF\)](#)

For further assistance, you may contact Anukis directly through their official store page:[Anukis Store](#)